



LG VX8700 Front Bezel Replacement


Written By: Stanley Thomas



 **TOOLS:**

- [iFixit Opening Tool](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

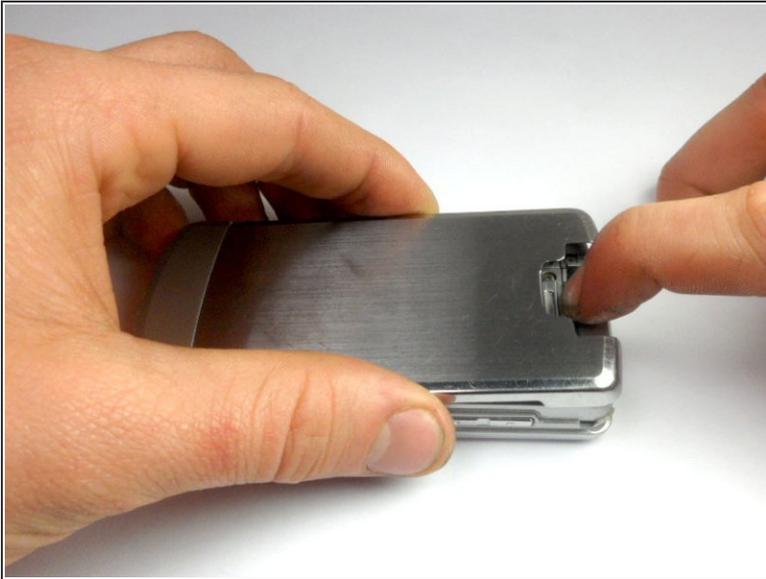

⚠ Make sure the phone is completely off.

- Remove the back cover by sliding the tab away from the phone using one finger.

Step 2




- Lift one side of the battery using a plastic opening tool or your fingers.
- Carefully remove the battery and set it aside.
- ☑ When installing the new battery, make sure to align the metal pins with those of the phone.

Step 3 — Front Bezel



- Turn your phone around and open the flip phone.
- Locate the two grey rubber plugs on the LCD portion of the phone. These plugs cover up two screws.
- Remove the two grey screw-covers at the bottom of the screen

Step 4

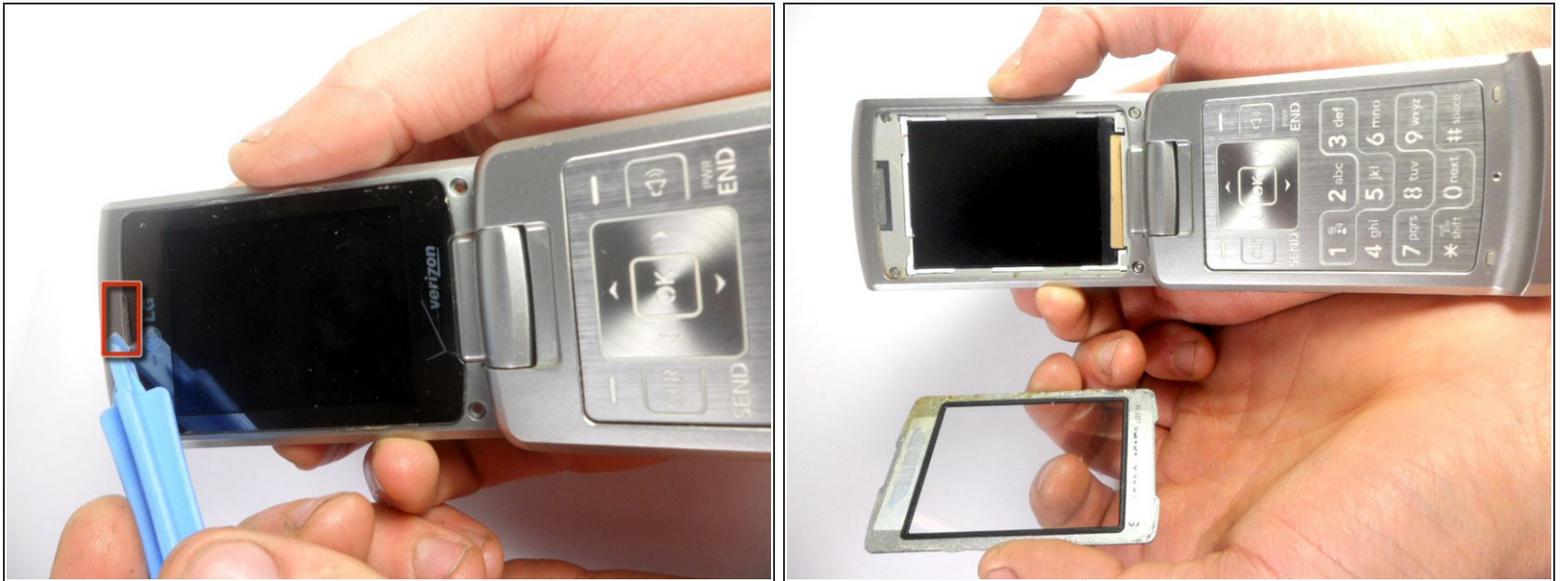


- Remove the screen by using the tab to eject the screen.
 - There is a gap between the case and the screen near the ear piece
 - Insert the plastic opening tool in the gap and pry the screen up.
- ⓘ The plastic screen cover is glued onto the phone, do not be alarmed if it may be difficult to pry it off.

Step 5



- Unscrew the four corner 3.21mm screws to separate the the top cover of the phone

Step 6

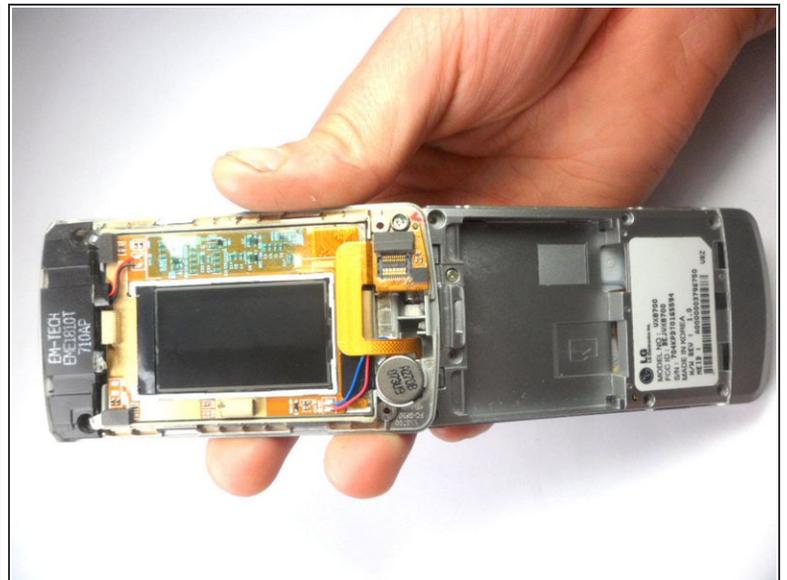

- Turn your phone around
- Remove the top cover of the phone by inserting the plastic opening tool into the groove.
- Carefully open the cover.

To reassemble your device, follow these instructions in reverse order.