



# Sony Xperia T2 Ultra Dual Dual SIM Slot Replacement

This guide is to show what components need to...

Written By: Austin Kreutzjans



# INTRODUCTION

This guide is to show what components need to be removed in order to replace the dual SIM slot. If the phone is not reading the SIM cards in the slot, it may need to be replaced after checking the connections. The SIM card slot is essential for having cellular connection. If one slot fails, the whole dual SIM slot must be replaced.

---

## TOOLS:


[iFixit Opening Tool](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Tweezers](#) (1)

---

## Step 1 — Rear Case

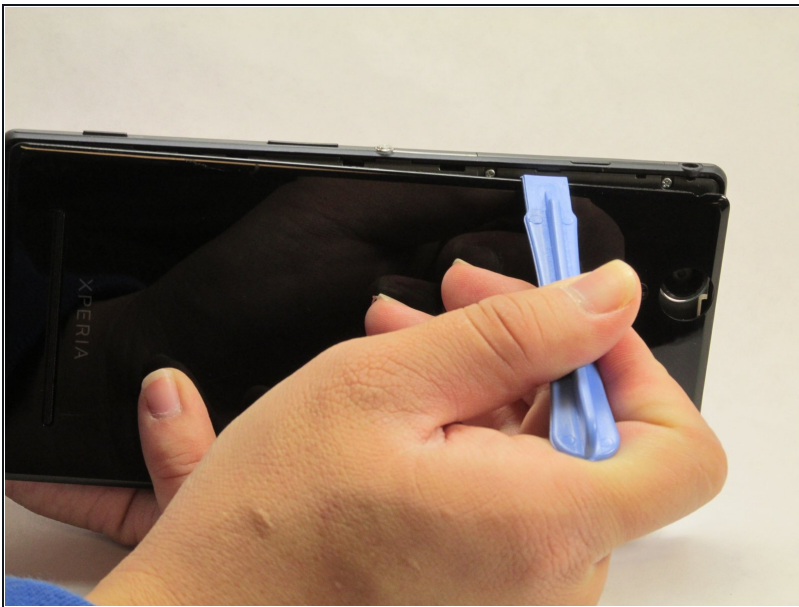


- Using the spudger, pry open the back cover by starting alongside the edge of the back cover.

## Step 2



- Once the part of the back cover has been opened up. Slide the spudger to pry completely detach the cover from the phone.


## Step 3 — Removing the internal cover

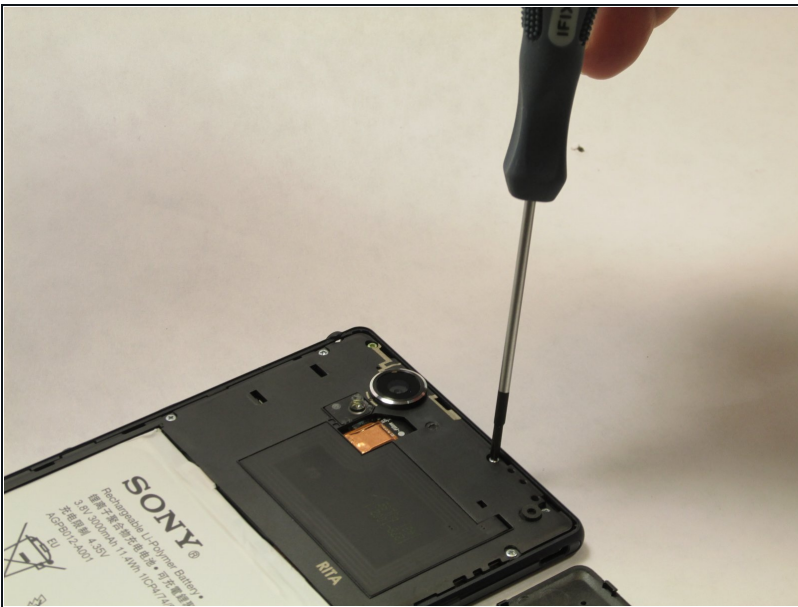

- Using the Phillips #00 Precision screwdriver, take out 8 silver screws (3.15mm) and 5 gold screws (3.9mm) for a total of all the screws attached to the flat plate. 3 of the gold screws are located at the top of the phone and the other 2 screws are located at the bottom of the phone.




## Step 4

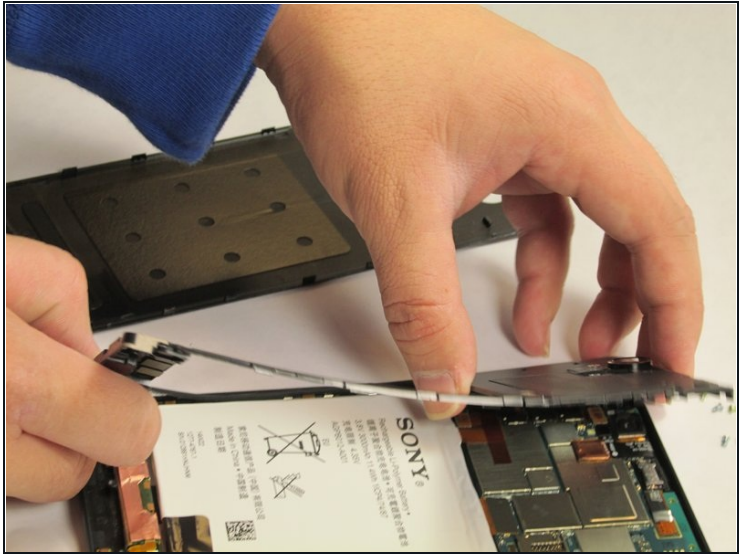


- To remove the internal cover, use the plastic spudger tool and pry the cover from the phone as shown in the picture.

## Step 5 — Removing Chip

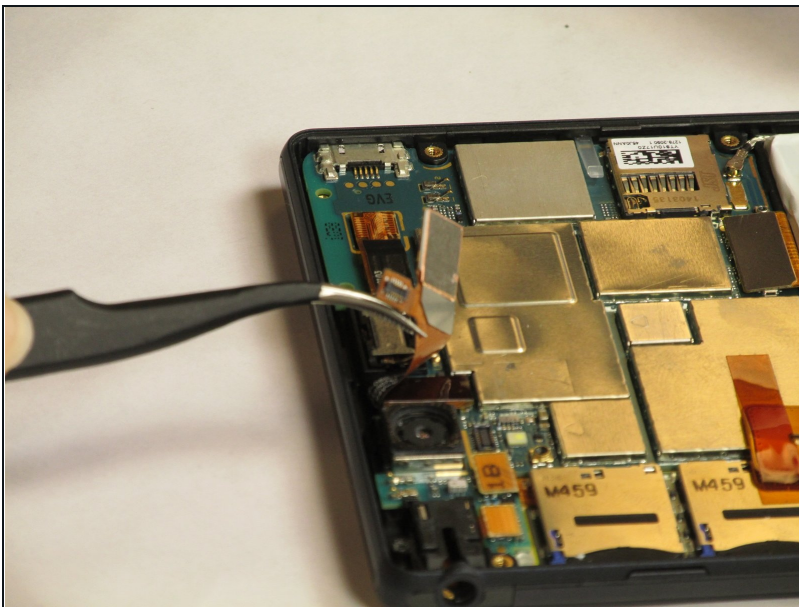


- To take out the back facing camera, flip open the flap labelled 'film' to reveal the chip that connects to the motherboard.

## Step 6

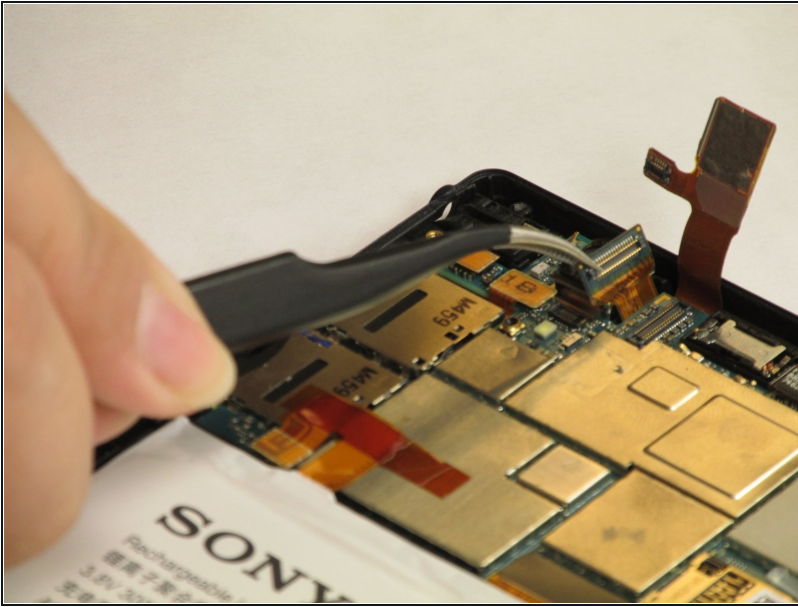


- Use the tweezers, carefully pry open the chip for the back facing camera.

## Step 7 — Remove back facing camera

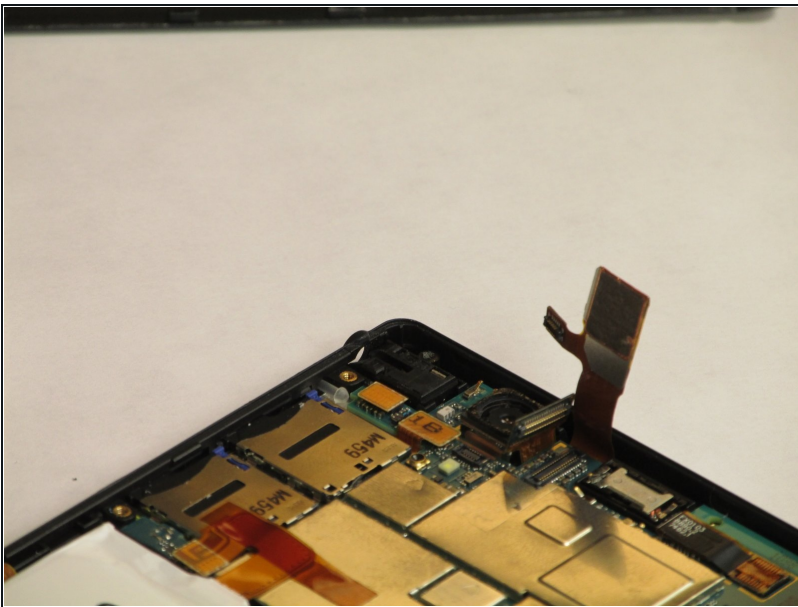


- Then using the tweezers, carefully remove the back facing camera component.

## Step 8 — Removing the Front Camera

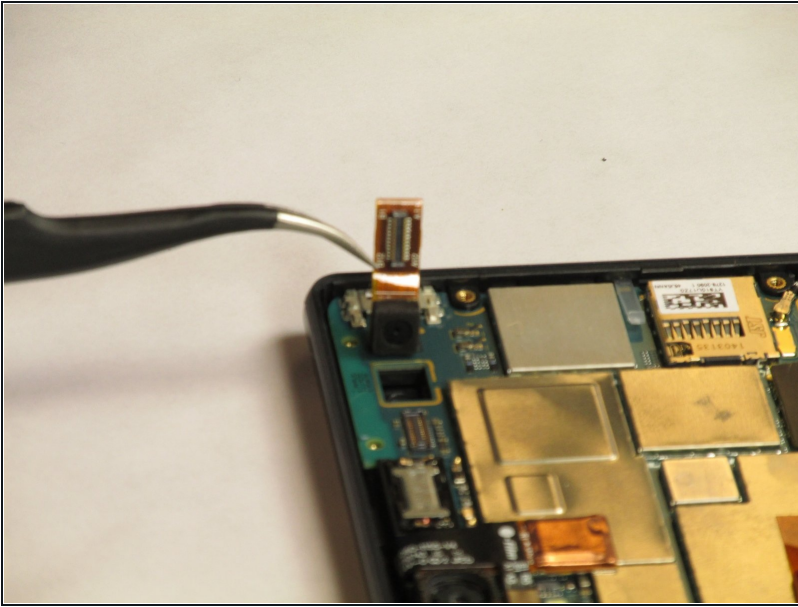

- Using the tweezers, carefully pry open the chip for the front facing camera as shown. Then using the tweezers, carefully remove the front facing camera component.


## Step 9 — Removing chip

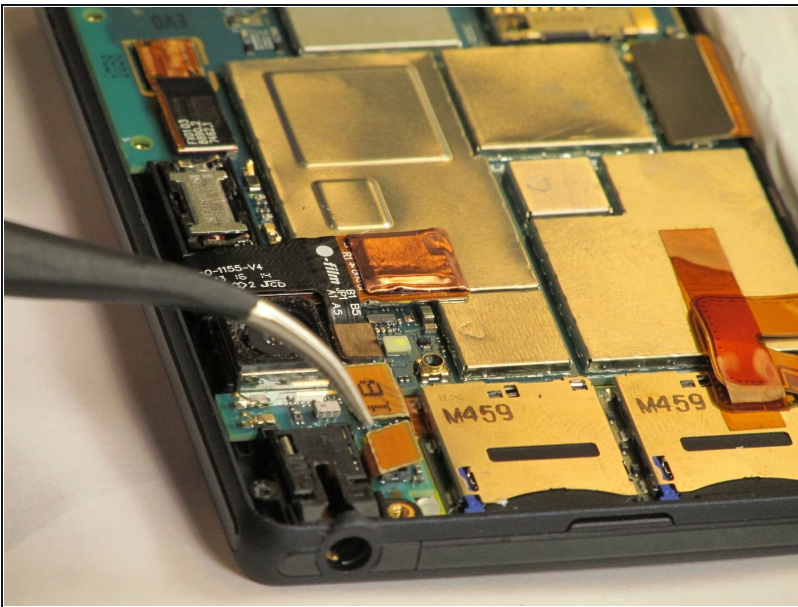

- Using tweezers, locate the audio jack as shown and pull out the chip connected to the motherboard.





## Step 10 — Remove audio jack

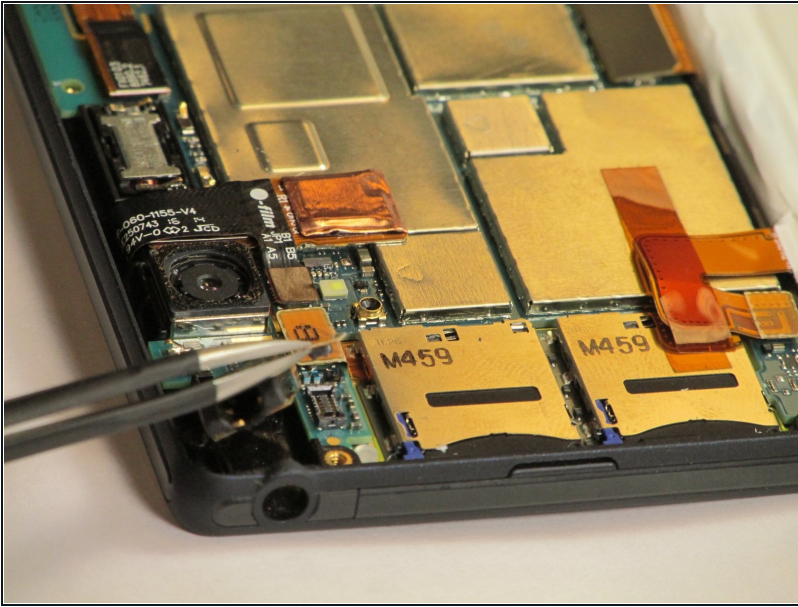


- Carefully remove the audio jack by using the [tweezers](#) and pull firmly straight out of the motherboard.

## Step 11 — Motherboard

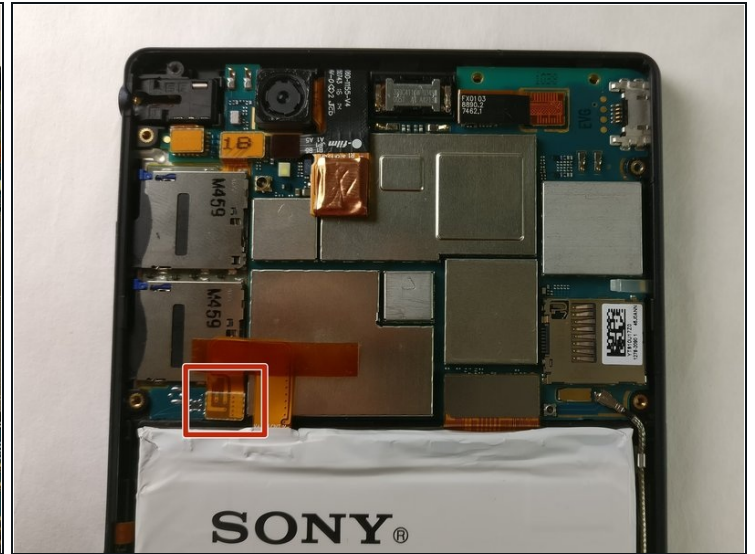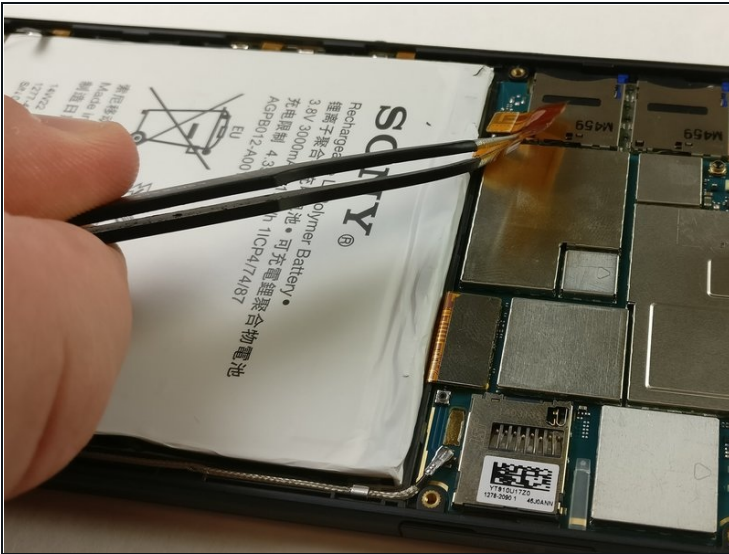


- Using [tweezers](#), locate the battery connector and carefully pull up to disconnect it.

## Step 12

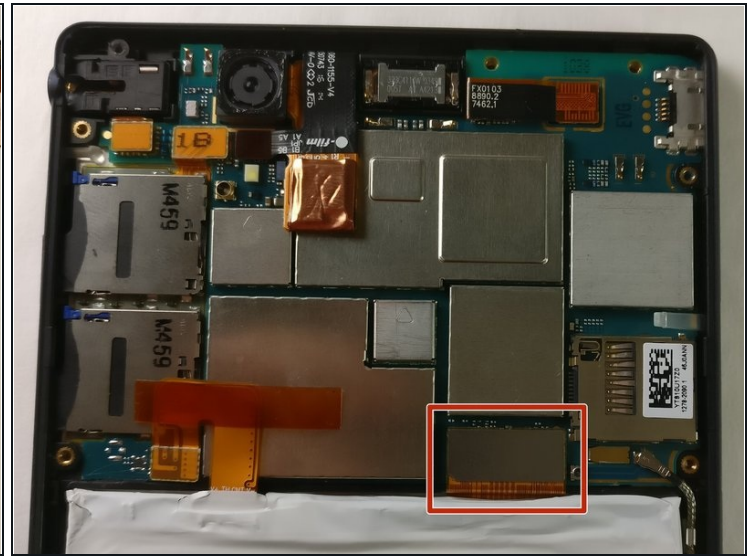

- Carefully remove the button circuit connector by using tweezers and gently pulling up.



## Step 13

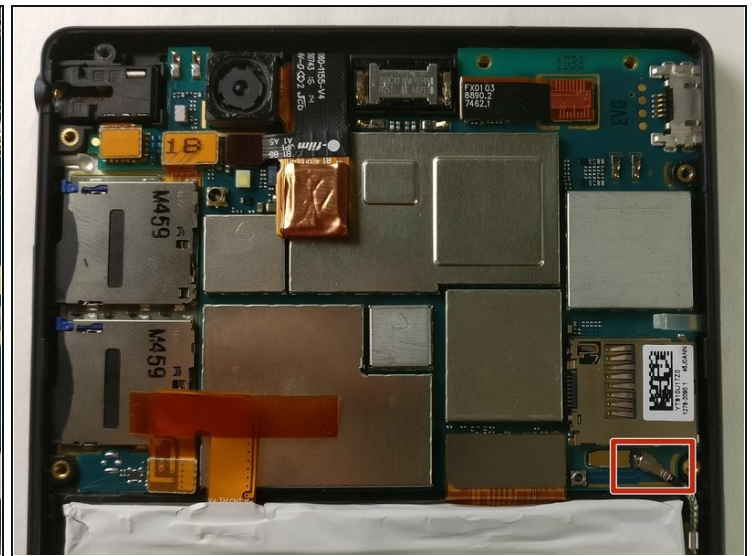

- Carefully remove the silver plug by using the tweezers to lift straight up.




## Step 14

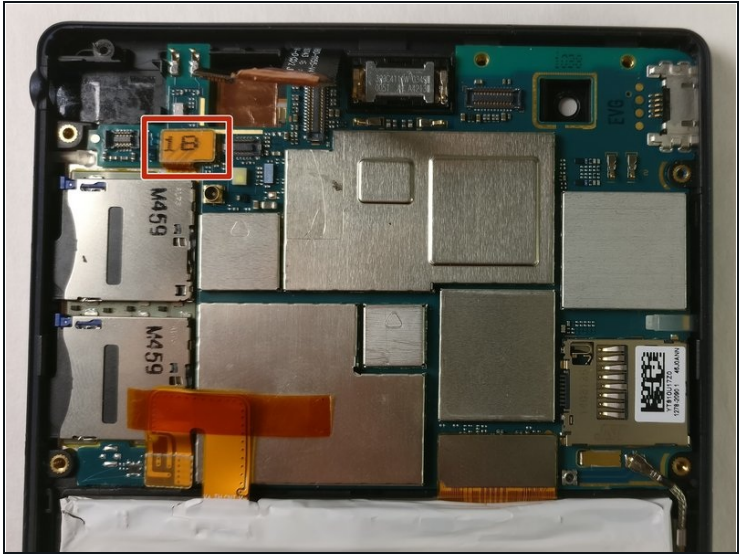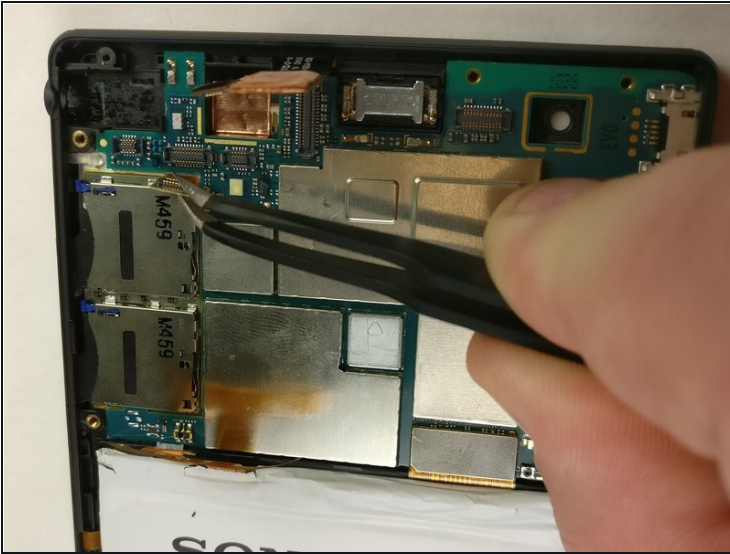

- Carefully remove the SIM card connector using tweezers by gently pulling it straight up.

## Step 15

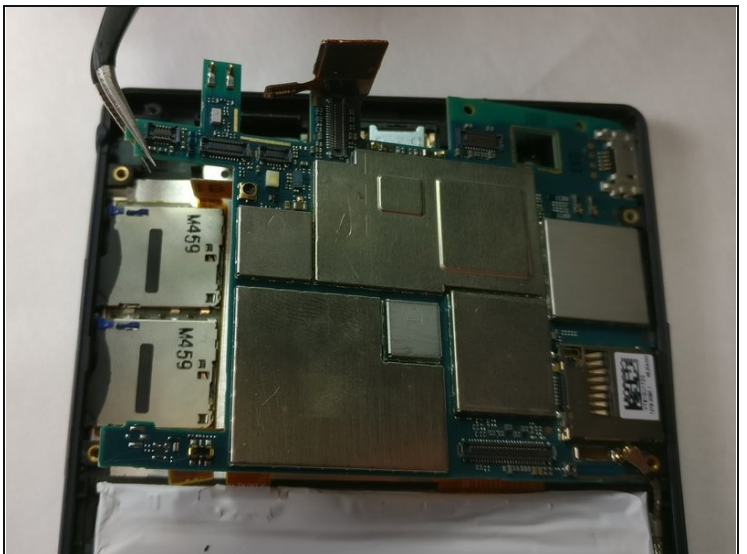

- Using tweezers, carefully remove the motherboard by pulling it up and out of the backing.

## Step 16 — Dual SIM Slot



- Using the [Tweezers](#), carefully pry the the dual SIM slot off the sticky substance used to hold it down.

---

To reassemble your device, follow these instructions in reverse order.