

Acer Aspire 5517-1127 Keyboard Replacement

Replace the keyboard on your Acer Aspire 5517-1127.

Written By: Christopher Newkirk



INTRODUCTION

This guide will show you how to replace the keyboard on your Acer Aspire 5517-1127.



TOOLS:


Metal Spudger (1)

Step 1 — Keyboard



 Orient the device with the keyboard facing towards you.

Step 2

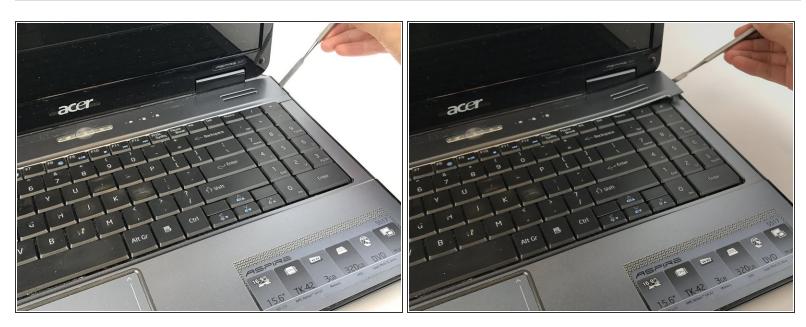

• Using a metal spudger, pry open the top panel of the device as shown.

Step 3







• With the top panel remove, use the spudger to lift the keyboard out of the device as shown.

Step 4







- The keyboard ribbon is shown after removing the keyboard. There are two tabs holding the ribbon in place as shown.
- Using your fingers, pull the tabs towards you to release the ribbon from its casing.

To reassemble your device, follow these instructions in reverse order.