




Fitbit Alta Wristband Replacement

This is a quick and easy guide to replace the wristband of a Fitbit Alta. No tools are required in the process.

Written By: Zach Gorham

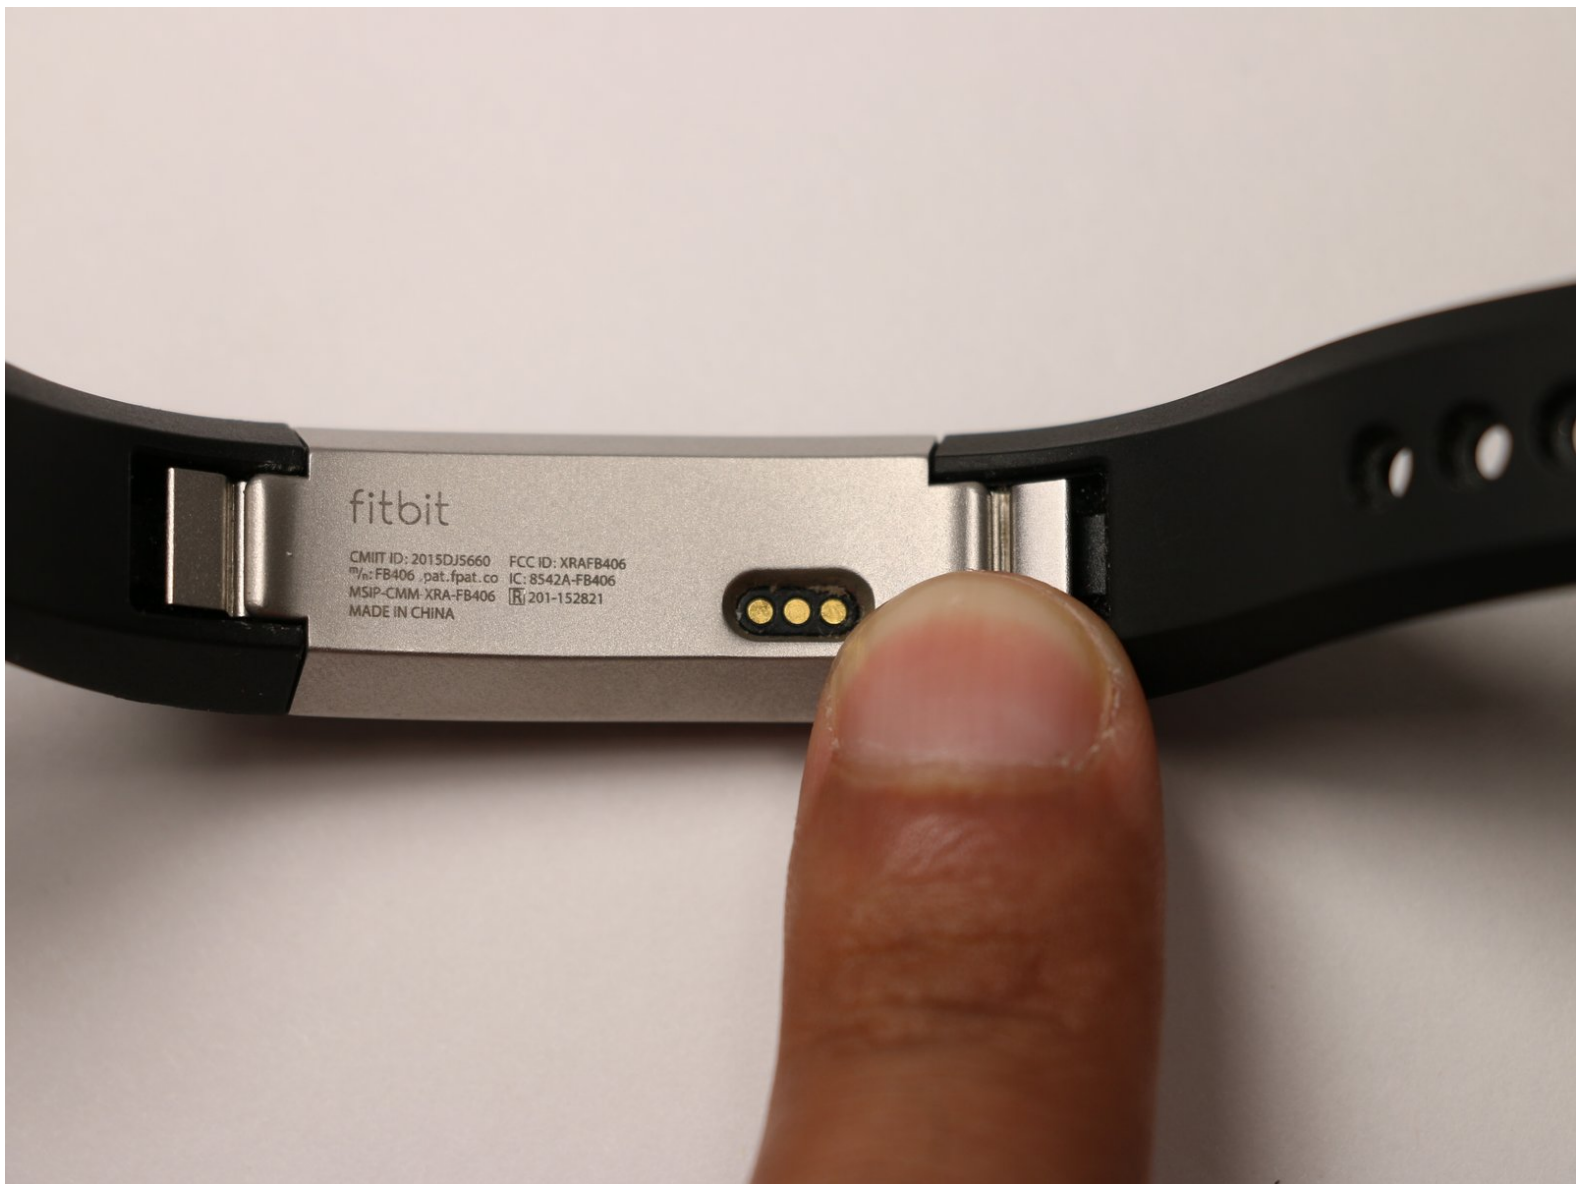

INTRODUCTION

This is a quick and easy guide to replace the wristband of a Fitbit Alta. No tools are required in the process.

Step 1 — Wristband



- To release a latch, press down on the flat metal button holding the band to the Fitbit Alta. Pull up on the latch to release the band from the body.

Step 2



- Slide the band up to release it from the Fitbit Alta tracker. Then, repeat on the other side to remove the band.

Step 3



- Turn over the Fitbit Alta so the bands are facing upward.
- Press the latches inward and remove each band by lifting upward.

To reassemble your device, follow these instructions in reverse order. When you hear a click , the wristband is secure.