




Chromebook 15 CB3-531-C4A5 Case Replacement

This guide will elaborate on how to disassemble the bottom of a Chromebook 15 CB3-531-C4A5 in order to reach the inside of it.

Written By: Savannah Vining

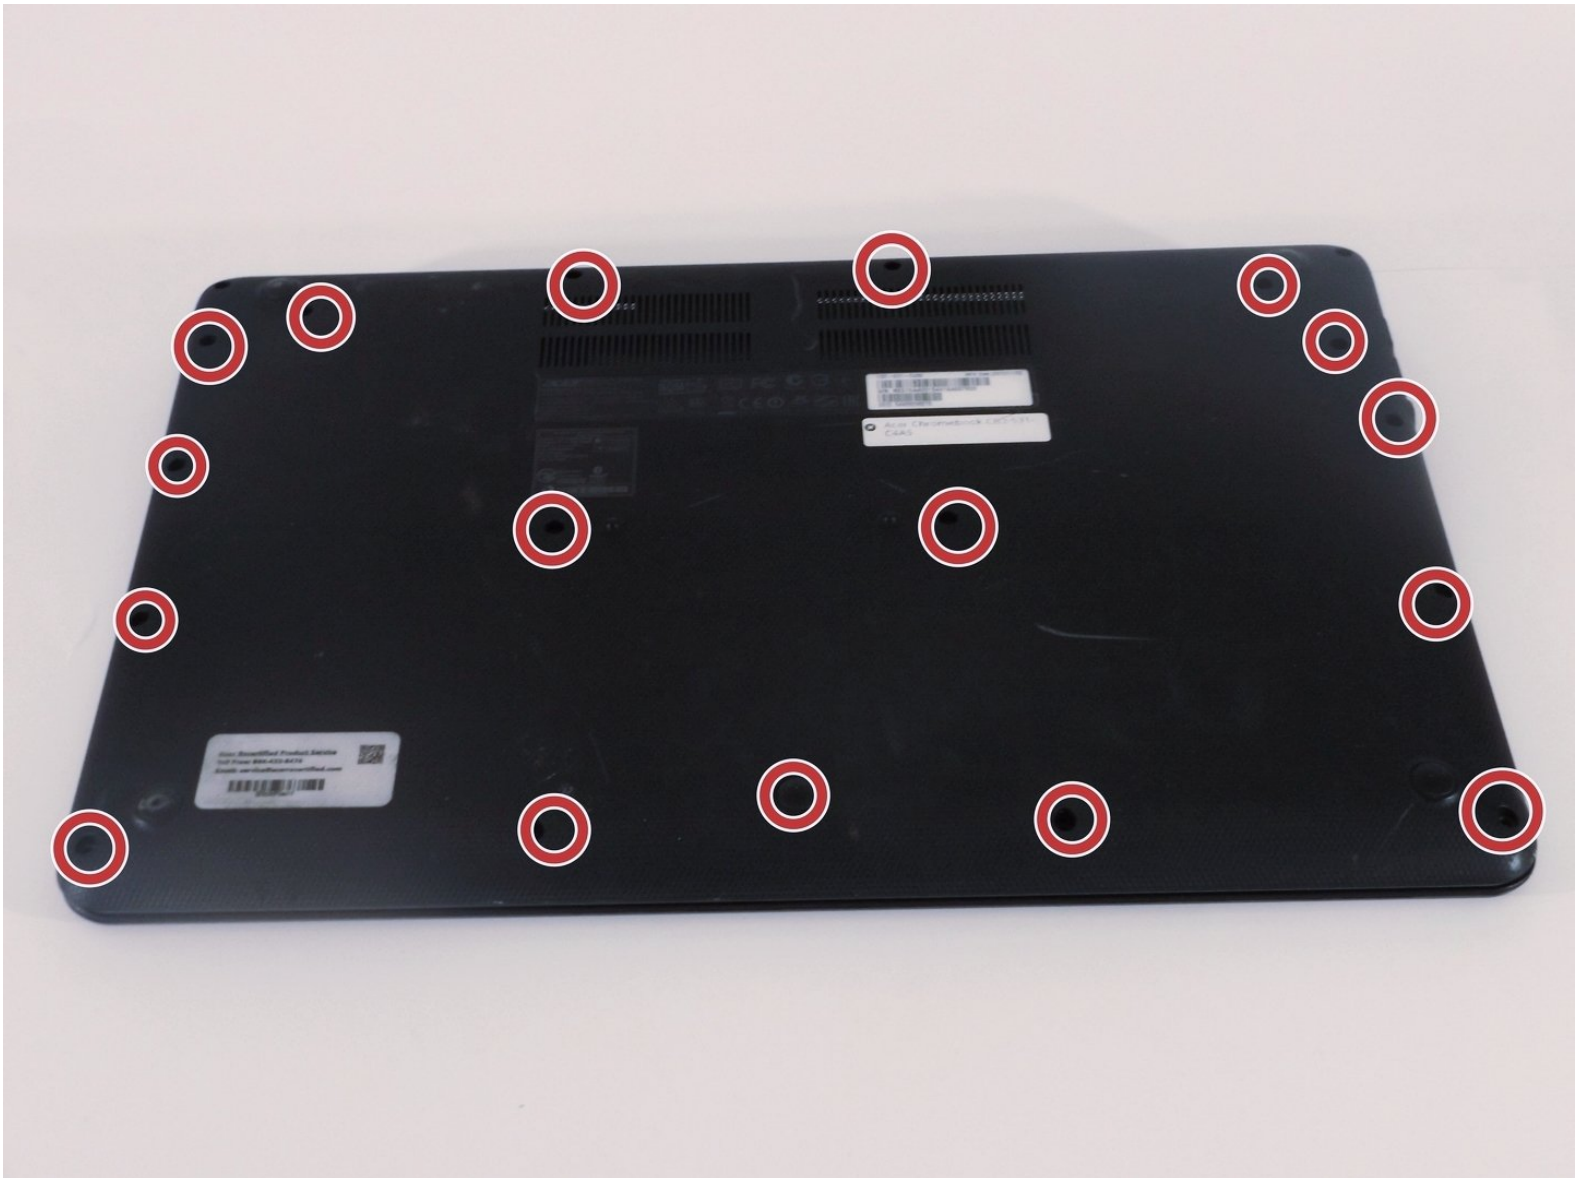


INTRODUCTION

This guide will disassemble a Chromebook 15 CB3-531-C4A5 in order to get inside of it. There are no hazards accompanied with this task.

TOOLS:


- [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Case

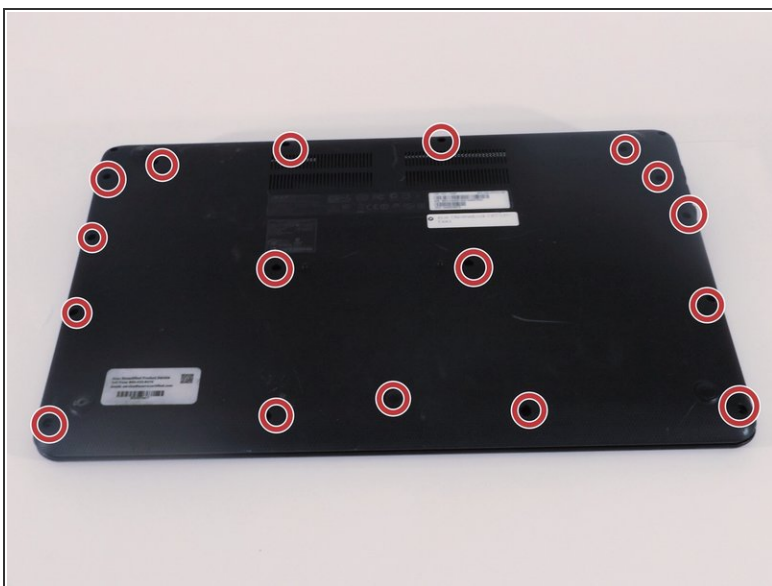

- Remove the 18 Phillips screws using a screwdriver with a PH0 bit.

Step 2

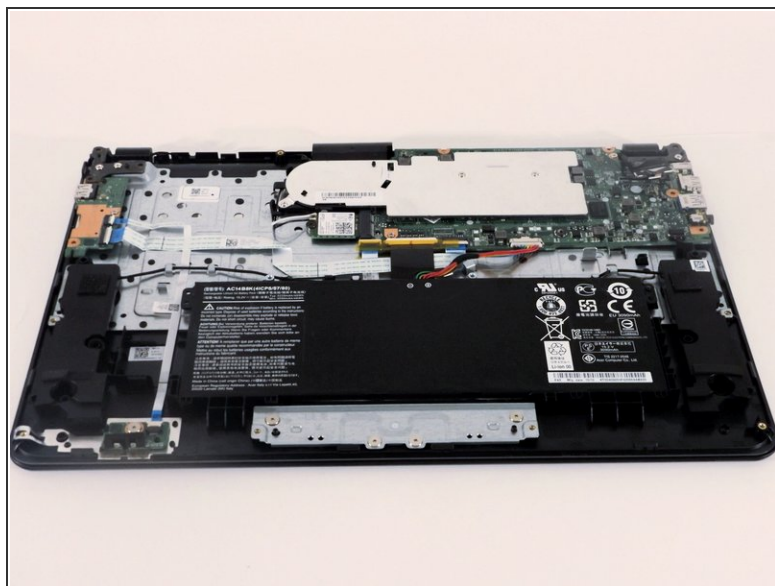

- Using a spudger, gently pry open the back from the top.

To reassemble your device, follow these instructions in reverse order.