



Motorola C139 SIM Card Replacement

How to remove the SIM card from the Motorola C139

Written By: Christopher Stubbs




Step 1 — Battery



- Begin by flipping your phone over so that the back cover is facing up.
 - Apply force to the back cover and simultaneously slide the cover down.
- i** Note: Applying pressure on the ridges will make it easier to remove the cover.


Step 2

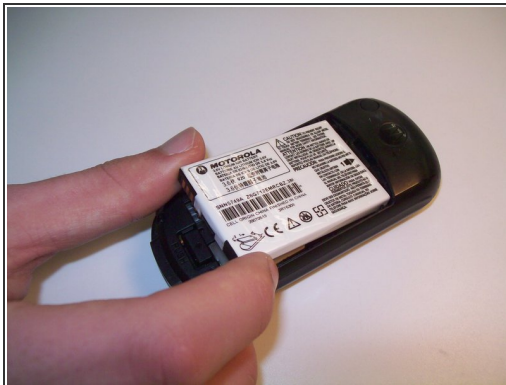

- Press the button labeled "PUSH" located at the bottom back of the phone. This will release the battery.
- Lift and remove the battery.

Step 3 — SIM Card



 Do not bend or scratch the SIM card. In addition, keep it away from static electricity, dust, and water.

- Gently slide the SIM card out and lift to remove it from the phone.

To reassemble your device, follow these instructions in reverse order.