


# **Dell XPS 13 L321X Battery Replacement**

Battery not lasting long or completely dead?...

Written By: Ahmad EL Herbawi

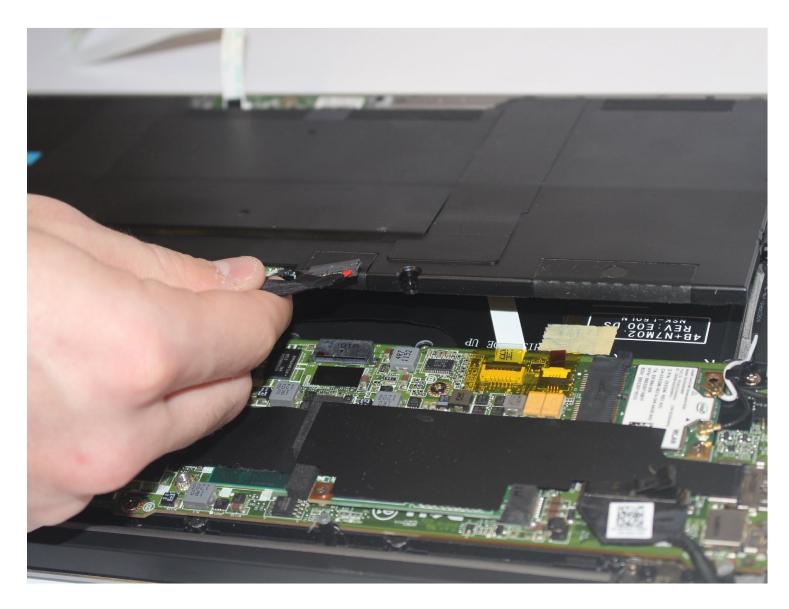


#### **INTRODUCTION**

Battery not lasting long or completely dead? Replace it (only screwdrivers required).

### 🖌 TOOLS:


T4 Torx Screwdriver (1) Phillips #00 Screwdriver (1) iFixit Opening Tool (1)

### Step 1 — Battery

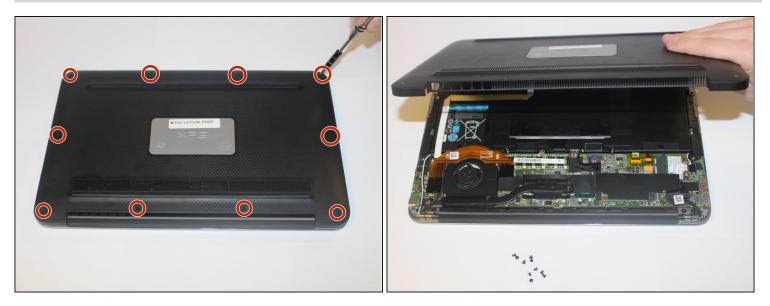


• Remove ten 3mm screws from the back cover with a **T5** screwdriver.



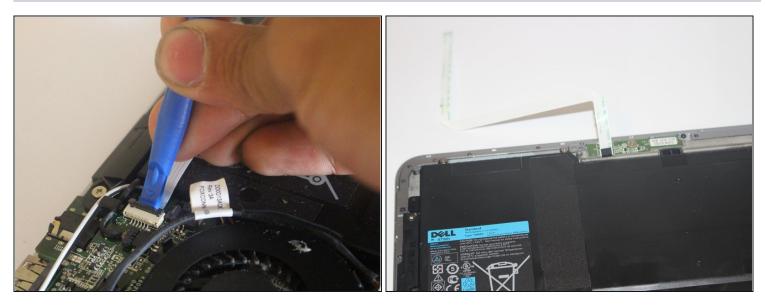


- Disconnect the ribbon cable with a plastic iFixit opening tool by lifting up the black clip and pulling the white ribbon off.
- Pull aside the ribbon cable.

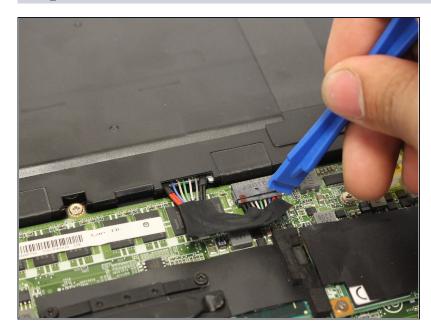

Step 3

• Insert a plastic iFixit opening tool in between the port and the wires to remove the battery cable.

## Step 4

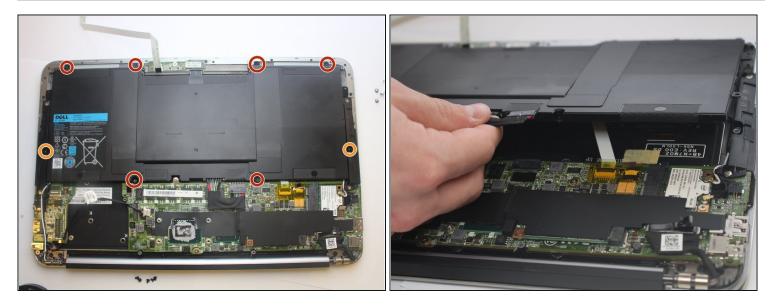

- Take out 8 silver screws that are holding the battery with a **PH00** head screwdriver.
- Six 3mm screws.
- Two 5mm screws.
- Lift the battery out.