



LG Optimus L9 P769 Micro-USB Port Replacement

This guide will detail how to replace the...

Written By: Kayden G



INTRODUCTION

This guide will detail how to replace the Micro-USB Port on the LG Optimus L9 P769

TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips PH000 Screwdriver](#) (1)

[Tweezers](#) (1)

Step 1 — Micro-USB Port



- Power off the device and gently lift the battery cover off to access the battery

Step 2




- Lift and remove the battery from the notch in the edge of the battery compartment

Step 3



- Remove all 10 of the 4.5mm screws that hold the back frame to the case of the phone using a PH000 screwdriver.




Step 4

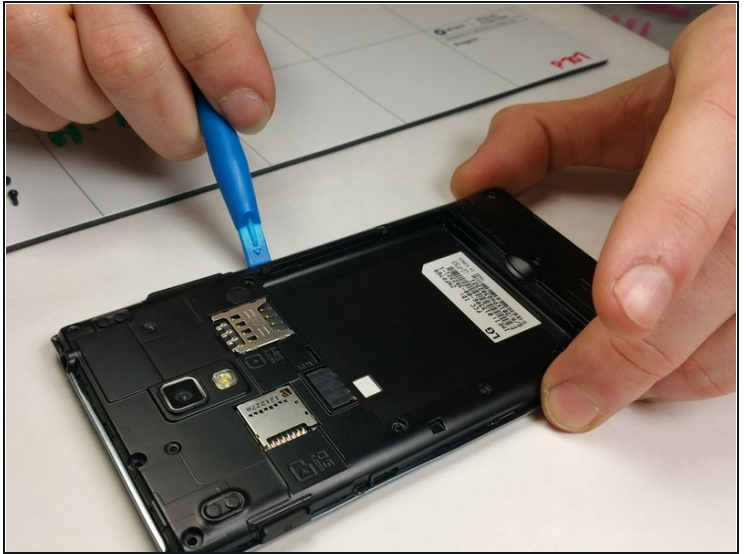

- Using a small prying tool, carefully remove the back frame by prying on the sides of the device.

⚠ Do be careful when prying back frame and removing it as too much force may result in damaging the frame.

Step 5

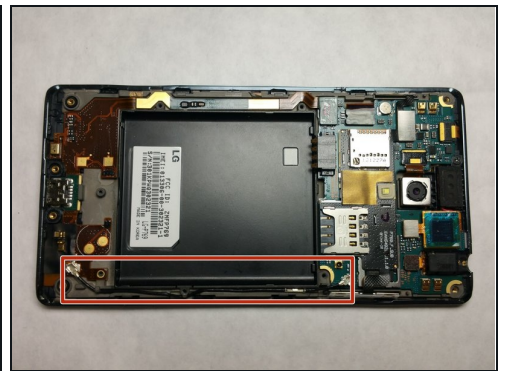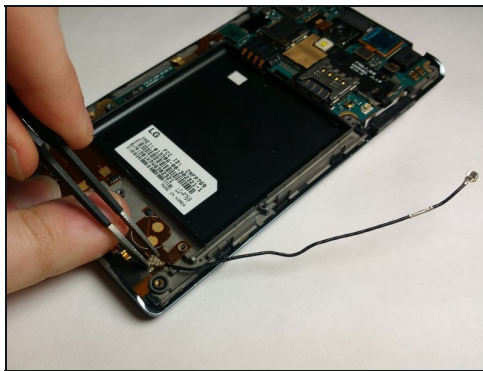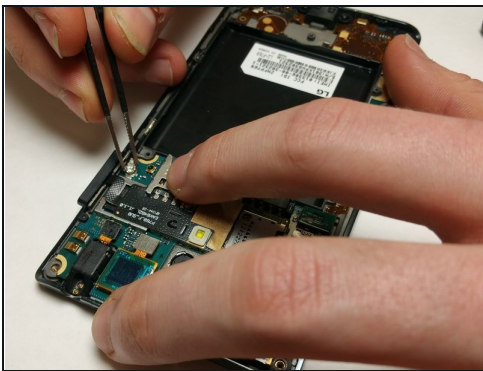


- Remove both connections of the antenna by pulling up with [tweezers](#)

Step 6



- Remove Micro-USB Cache by unscrewing both 2.9mm screws with the PH000 headtype

Step 7

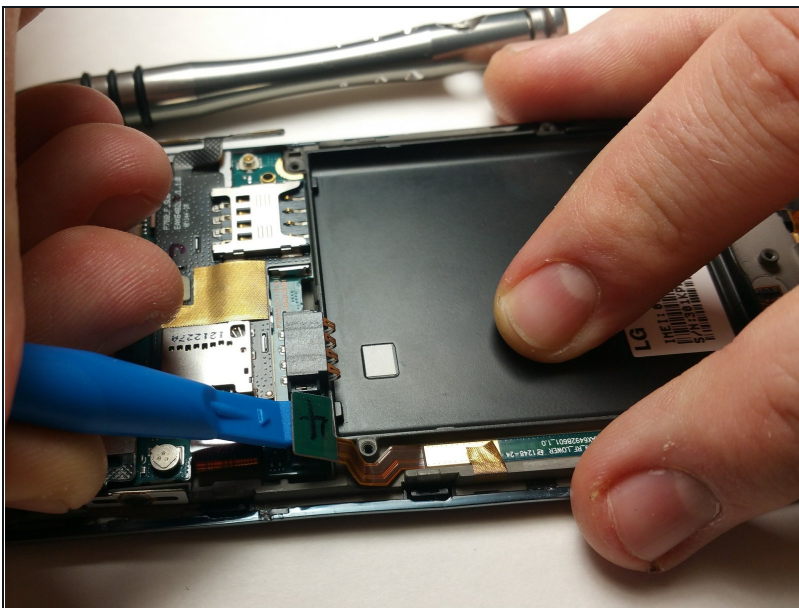


- Detach module from motherboard using a prying tool

Step 8



- Remove 1.8mm screw to free Micro-USB module for removal using the PH000 headtype

Step 9

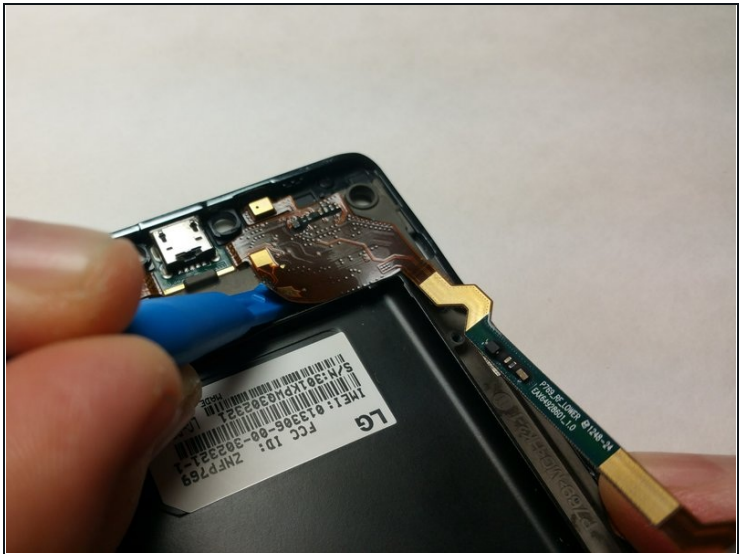

- Use a small prying tool to detach the Micro-USB circuitry from the case of the phone

Step 10



- Comparison showing the Micro-USB module against the empty phone casing

To reassemble your device, follow these instructions in reverse order.