



# Samsung Galaxy Tab S2 9.7 AT&T Screen Replacement

Replace your broken tablet screen.

Written By: Joy Harris



---

## INTRODUCTION

A damaged screen makes viewing anything on the tablet difficult. Removing the screen may require a heat gun or an iOpener. Check out this [iOpener guide](#) for instructions on how to use it.

---

### TOOLS:


- [Suction Handle](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Heat Gun](#) (1)
  - [Precision Tweezers Set](#) (1)
  - [iOpener](#) (1)
-

## Step 1 — Screen




- Apply the heat gun around the edges of the tablet to melt the adhesive glue.
- ⓘ Do not allow the gun to remain still for more than two seconds, so that you do not melt the plastic around the screen.
- ⓘ If you do not have access to a heat gun, you may also use an iOpener or a hair dryer. Refer to the [iOpener guide](#) for extra help.

## Step 2

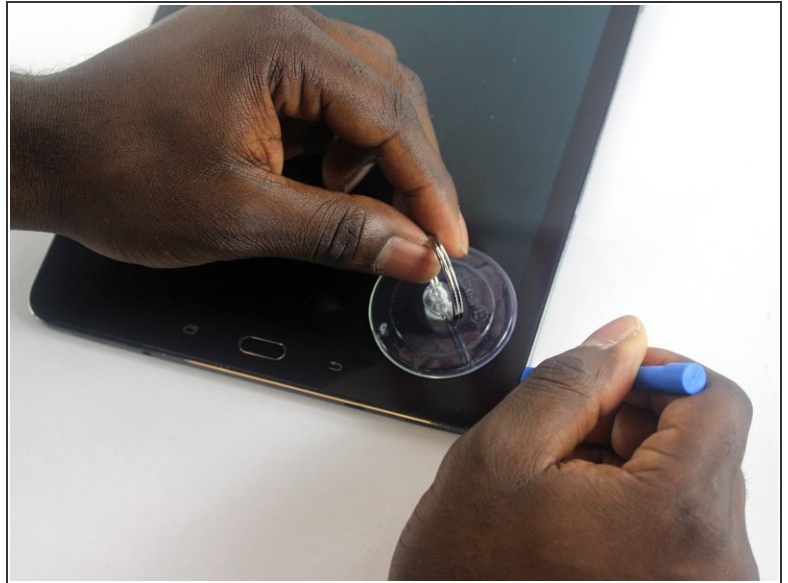

- Apply the suction to the bottom or top right corner.
- Use the plastic opening tool at several points around the screen while the suction is being applied to pop the screen out.


## Step 3

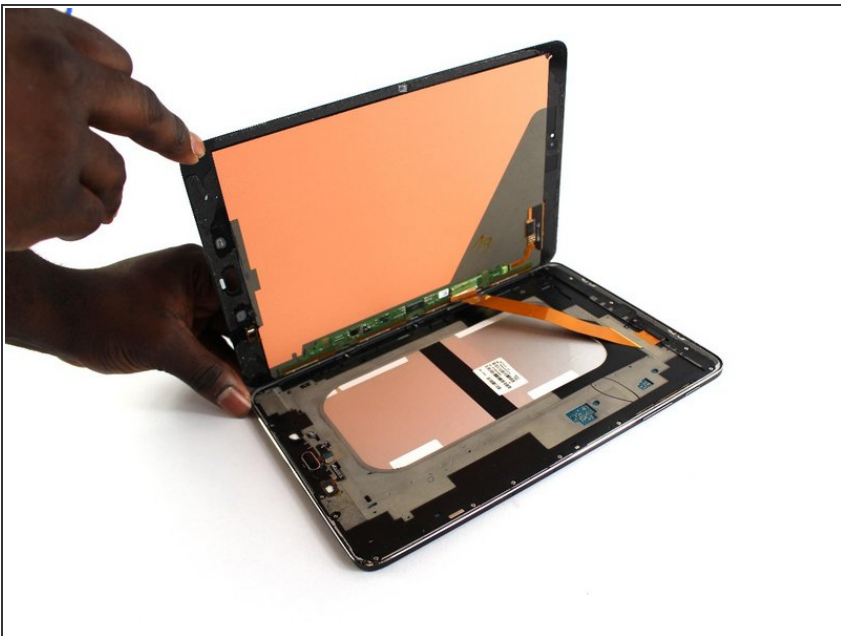

- Once the screen is detached, open the tablet like a book.
- ⚠ Gently open the tablet, and do not pull the pieces apart since you can risk damaging the orange ribbon cable.




## Step 4

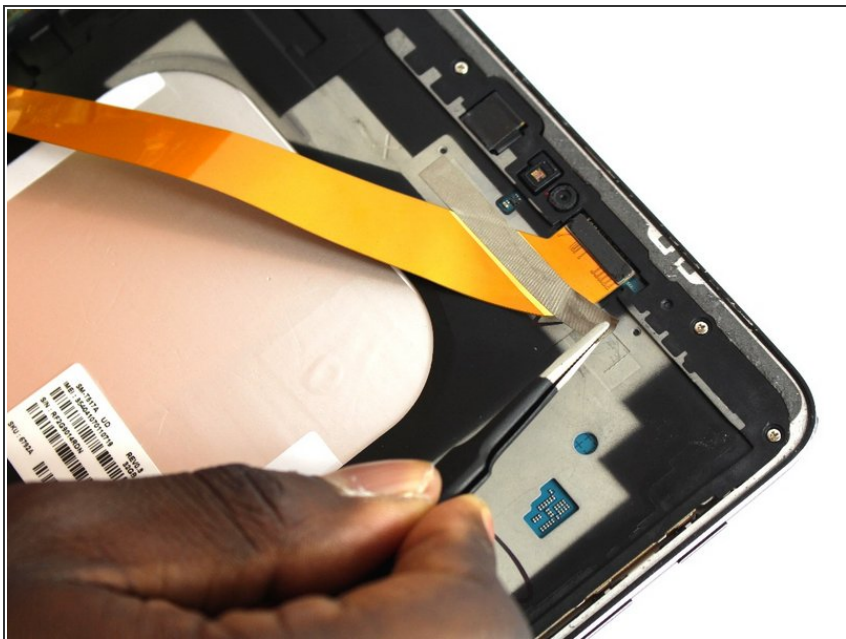

- Using the precision tweezers, remove the silver tape that is holding the orange ribbon cable connecting the two pieces.

## Step 5

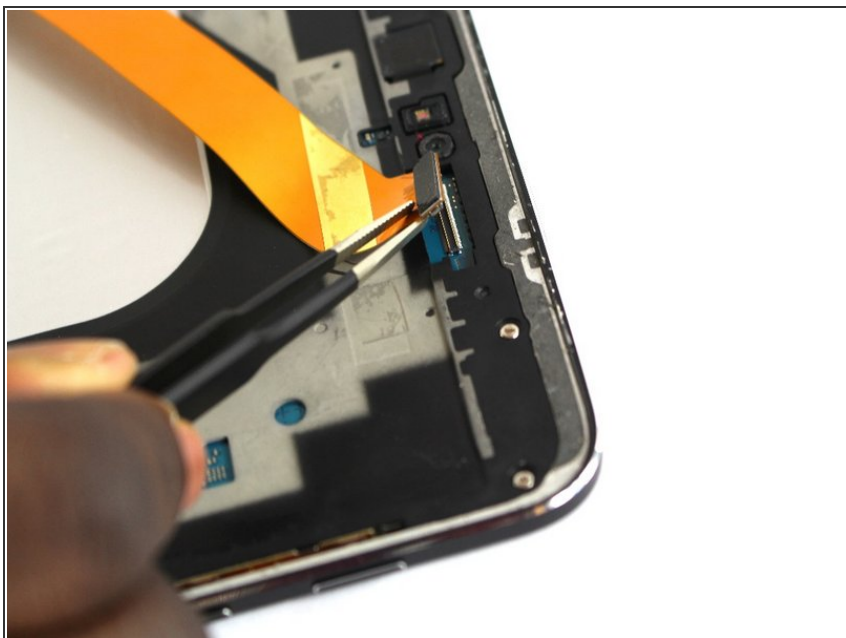

- Using the precision tweezers, remove the small press-fit connector from the body of the tablet.

To reassemble your device, follow these instructions in reverse order.