




Dell Inspiron 17-5755 Battery Replacement

This guide will instruct you on how to replace the battery for the Dell Inspiron 17-5755.


Written By: Josh Bolan

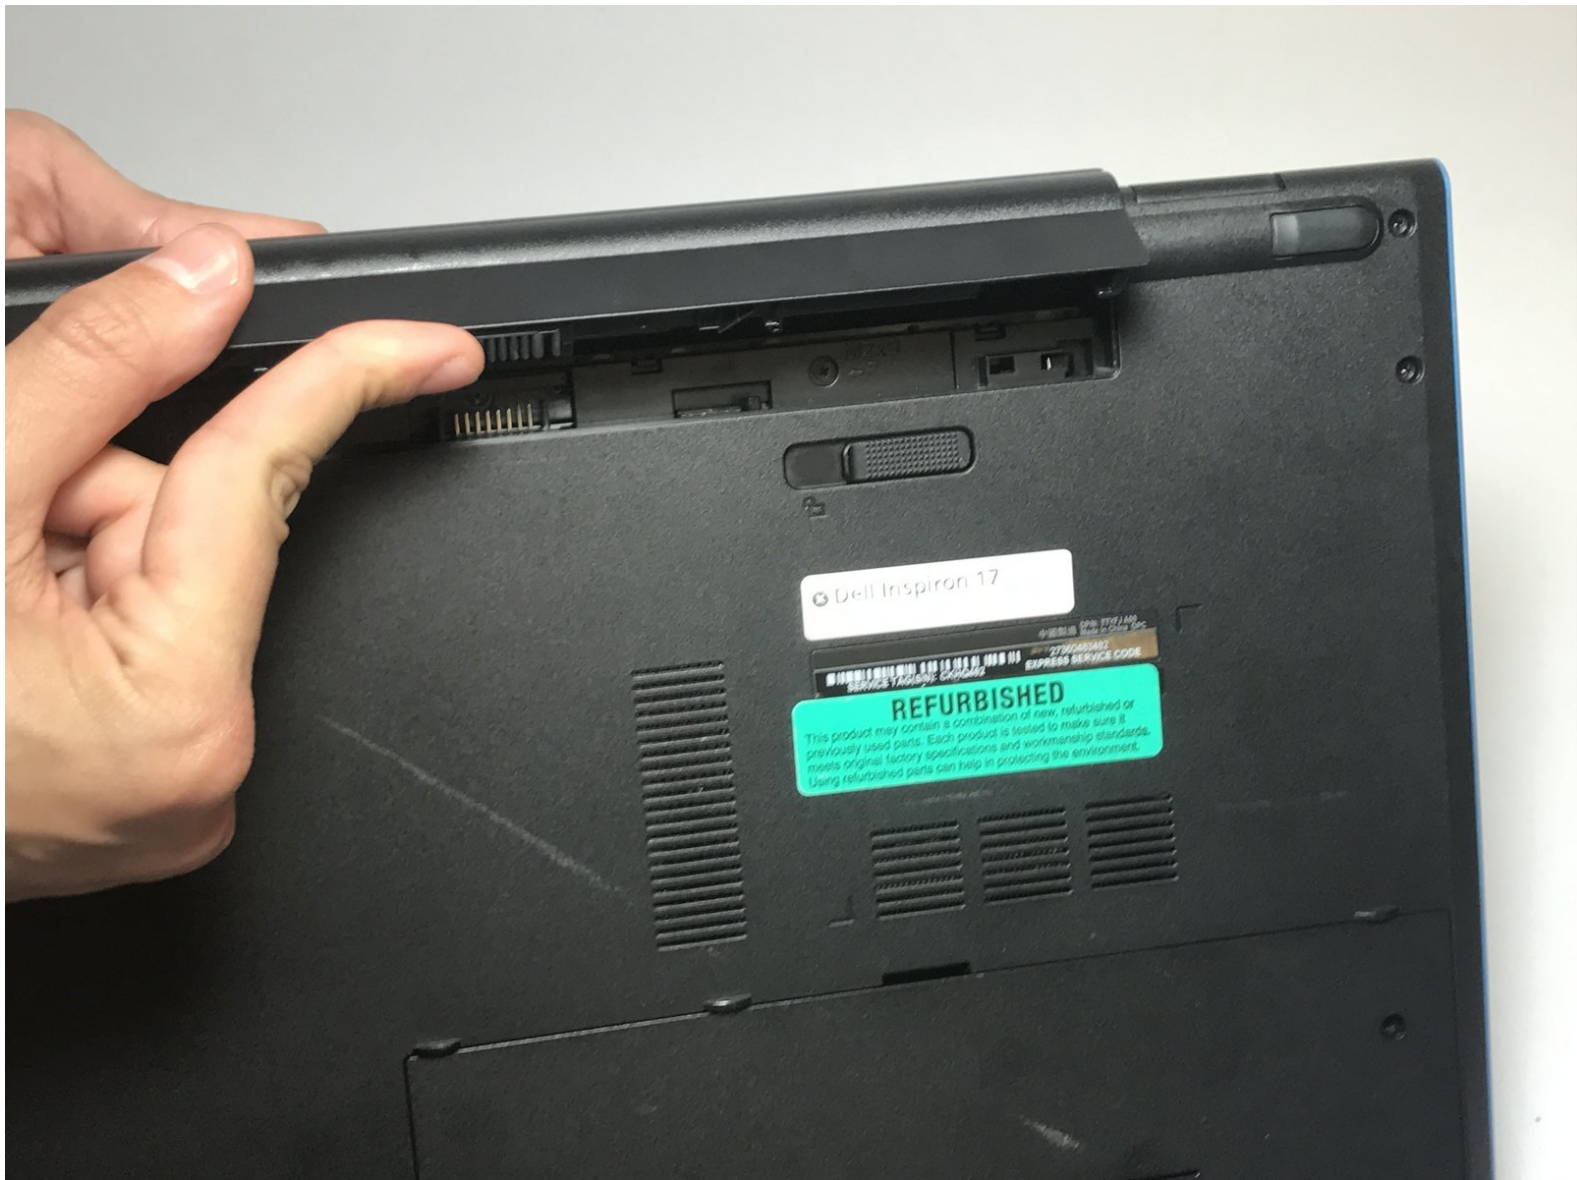


INTRODUCTION



This guide will allow you to replace a defective battery for the Dell Inspiron 17-5755. Please ensure that the device is turned off before performing this replacement.

Step 1 — Battery

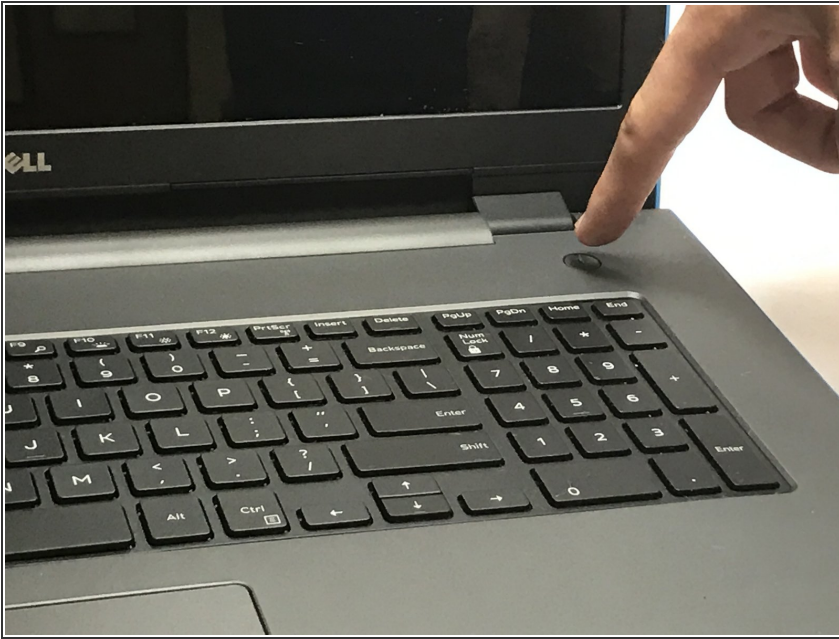

 Make sure the computer has been shut down, and isn't plugged into an outlet before attempting to remove the battery.

Step 2

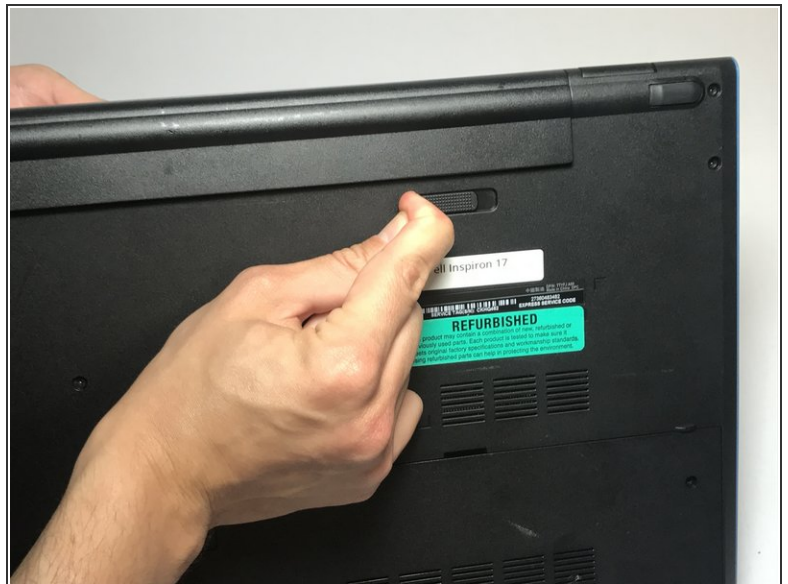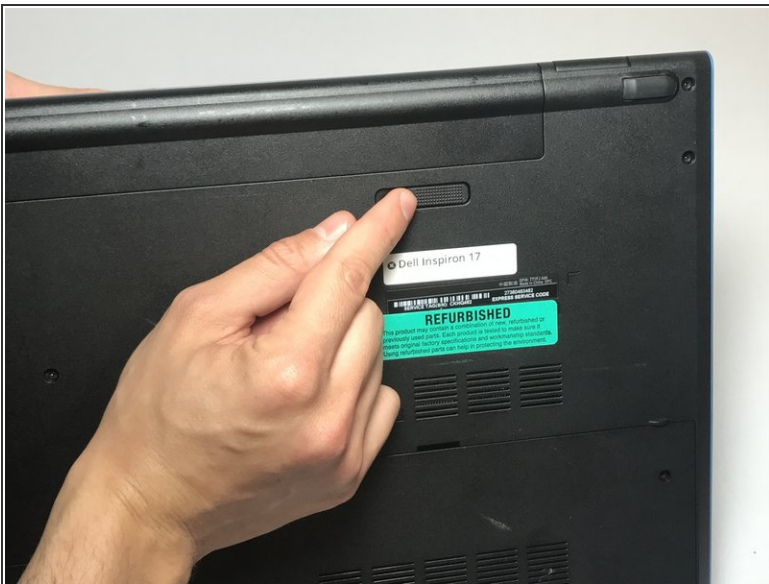

- Find the battery release latch on the bottom side of the computer.
- Slide the latch to the left until you hear a "click". This indicates that the battery has been released.

Step 3



- Safely remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.