




# Samsung S760 Battery Replacement Guide

How to remove the batteries in a Samsung S760 camera. Used as a prerequisite step for some of the other guides.

Written By: David Sepulveda

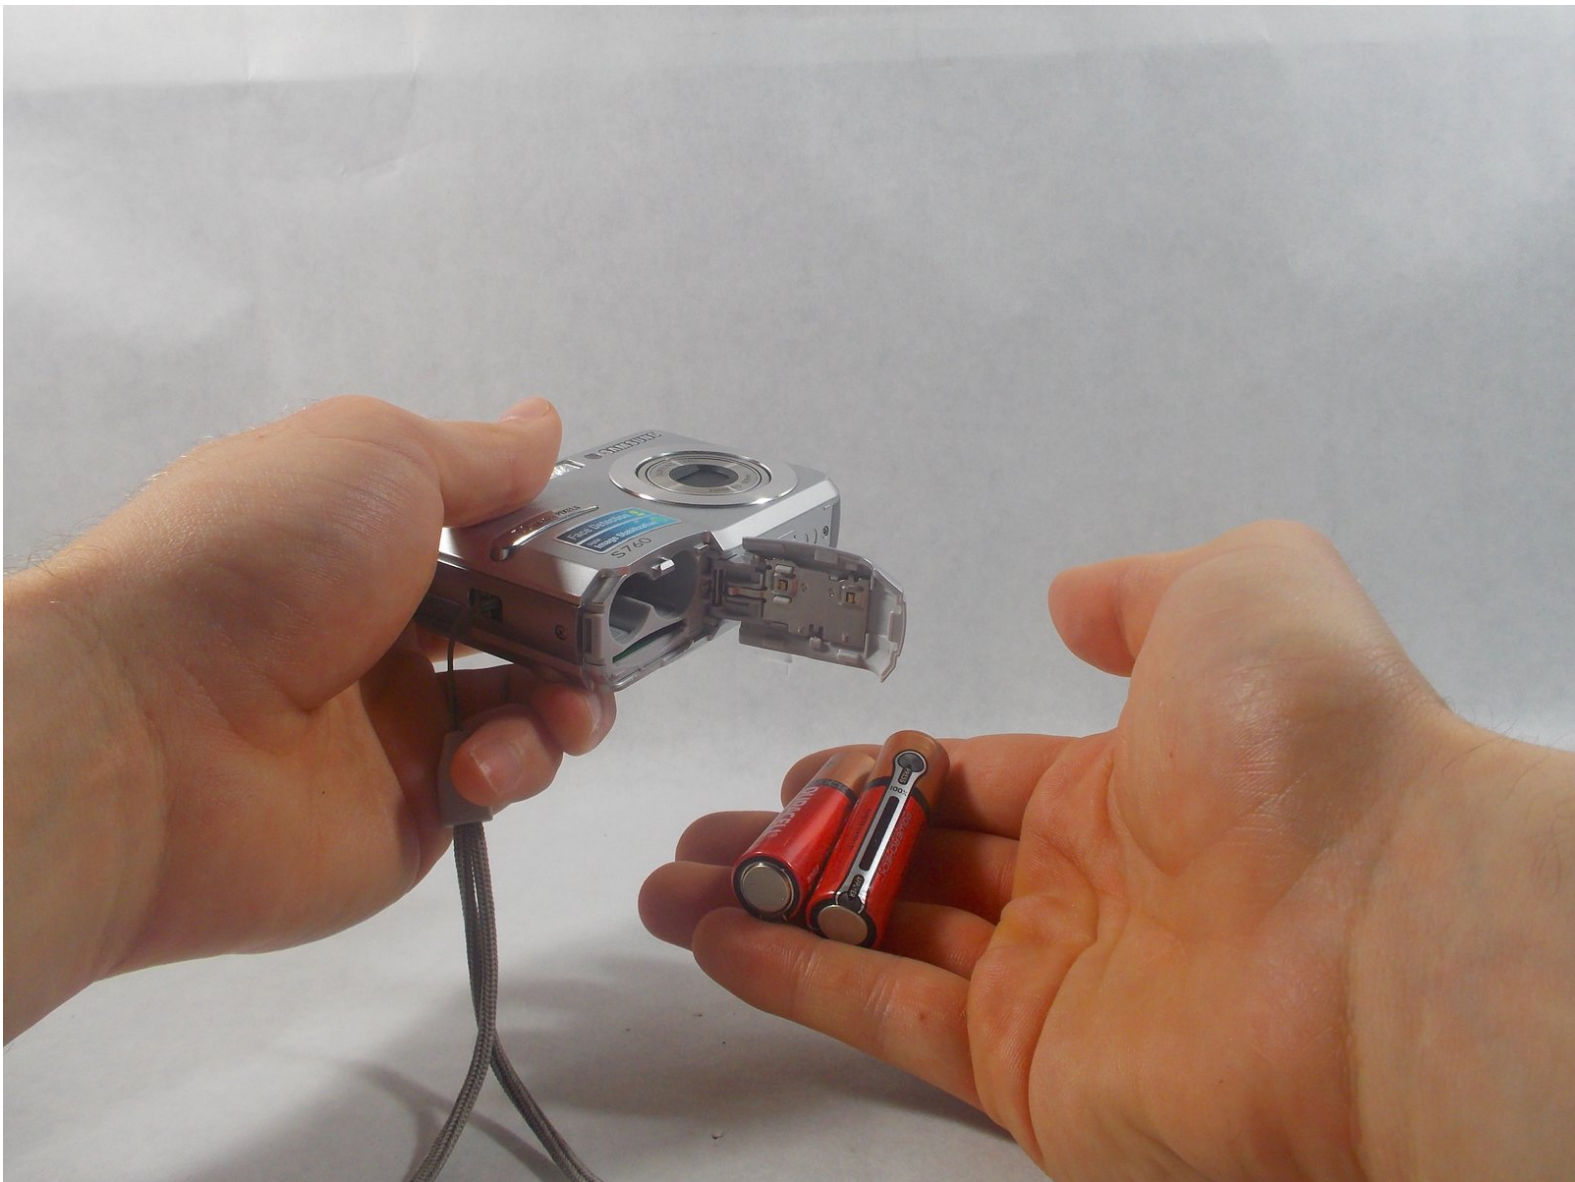

# INTRODUCTION


This guide will take you through the easy process of removing, and thus being able to replace, your camera's batteries.

## Step 1 — Battery



- Placing your thumb on the battery cover, push outwards, away from the camera in the direction the arrow is pointing. If done correctly when it's completely unhooked, the latch will open.

## Step 2

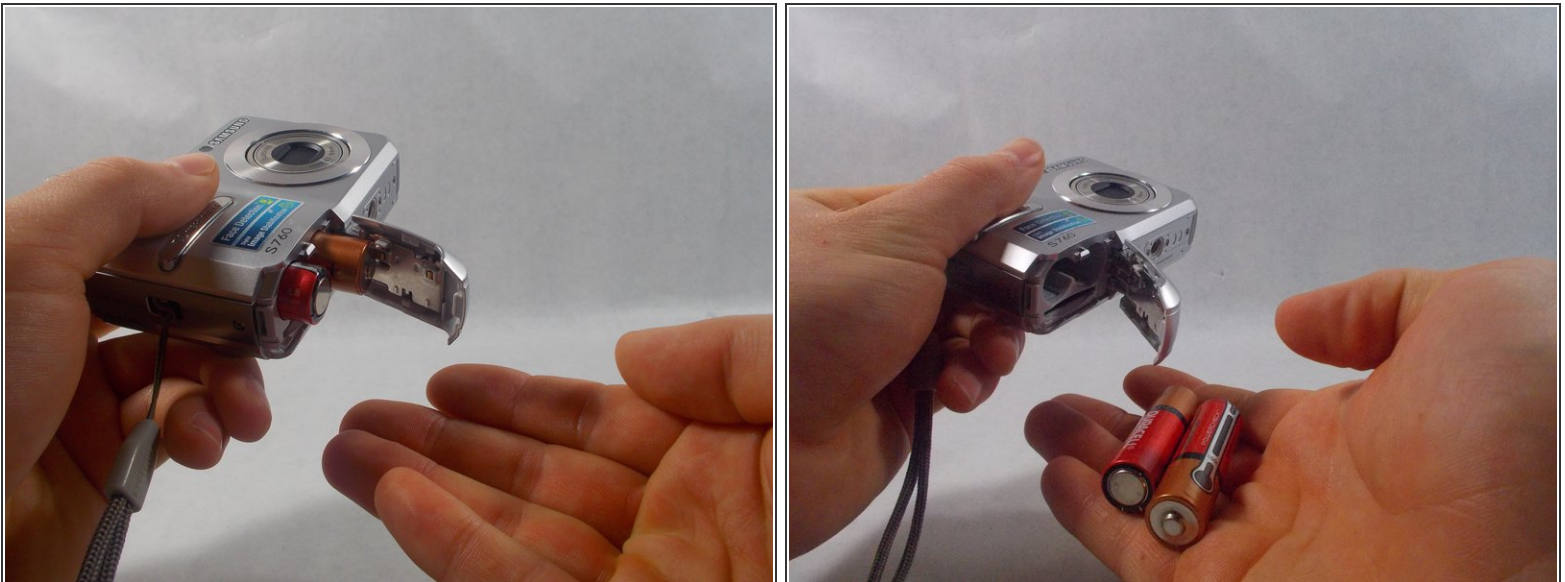

- Tip the camera as to gently slide the batteries out of the camera.

This will be used as a prerequisite step for further guides. To reassemble your device, follow these instructions in reverse.