


Samsung Galaxy Tab E Lite 7 Kids Battery Replacement

This replacement guide will show you how to replace the battery in your Samsung Galaxy Tab E Lite 7 Kids.

Written By: Nicholas Nolan

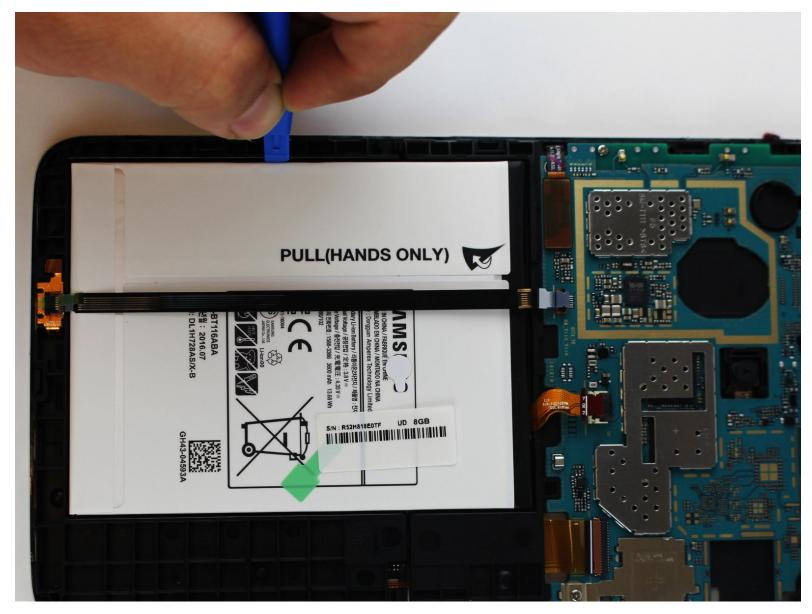

This document was generated on 2020-11-19 02:41:11 PM (MST).

INTRODUCTION

This replacement guide will show you how to replace the battery in your Samsung Galaxy Tab E Lite 7 Kids. You will need to follow the instructions carefully as to not damage any fragile components in your tablet.



TOOLS:

- iFixit Opening Tools (1)
- Tweezers (1)

Step 1 — Rear Case








Make sure the device is turned off before attempting to disassemble it.

- Using a plastic opening tool, wedge in the seam between the screen and the case.
- Rock the tool by moving it towards and away from the middle of the screen, trying to separate the tape holding the screen and case together.


Step 2




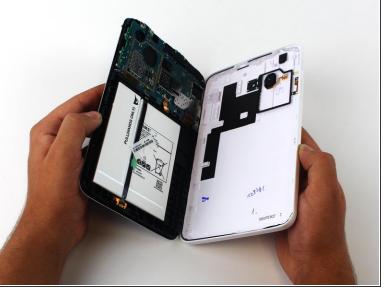

 After separating the latches holding the screen and case together, slowly take the screen off the case.

Step 3 — Battery

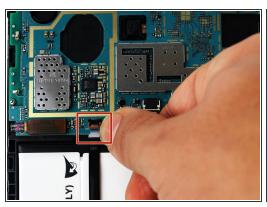


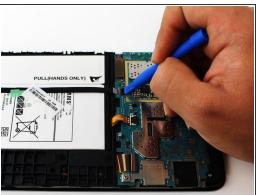




- Use the plastic opening tool to gently lift the black ZIF (zero insertion force) connector shown within the red circle.
- Use your hands to pull the black cable out of its slot.


Step 4

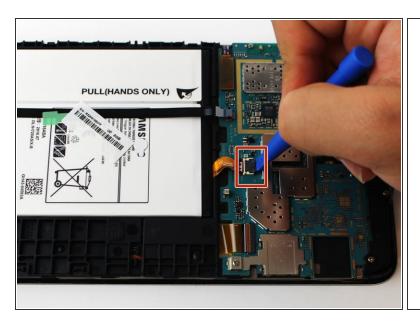

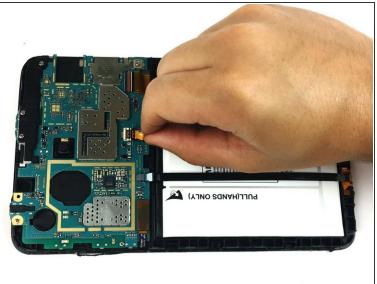

- Use the plastic opening tool to gently lift black ZIF (zero insertion force) connector shown within the red square.
- Now gently pull out the battery's ribbon cable.

Step 5

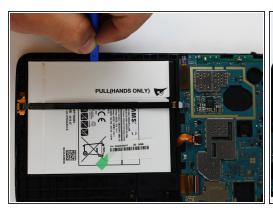





- Use the plastic opening tool and gently pry out the battery from the left-hand side.
- Grab the battery and lift it up.

To reassemble your device, follow these instructions in reverse order.