



Sony Xperia Sola Speaker Replacement

If there is no sound coming out of your Sony...

Written By: Bo Wu



INTRODUCTION

If there is no sound coming out of your Sony Xperia Sola, you may need to change the speaker. This guide will show you how to replace it.

TOOLS:

[64 Bit Driver Kit](#) (1)

[Tweezers](#) (1)


[Small Plastic Spudger](#) (1)

Step 1 — Speaker




- Lay the phone as shown and put the camera facing up.

Step 2

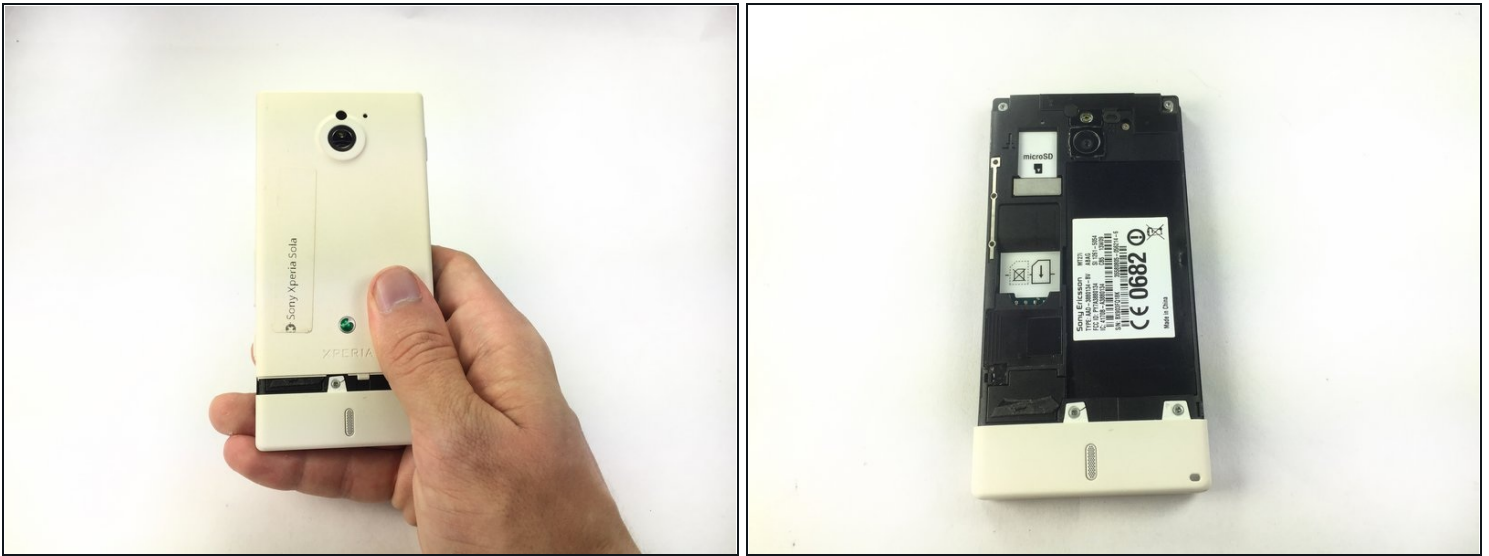



- Push the back cover as shown, then lift the cover off.

Step 3

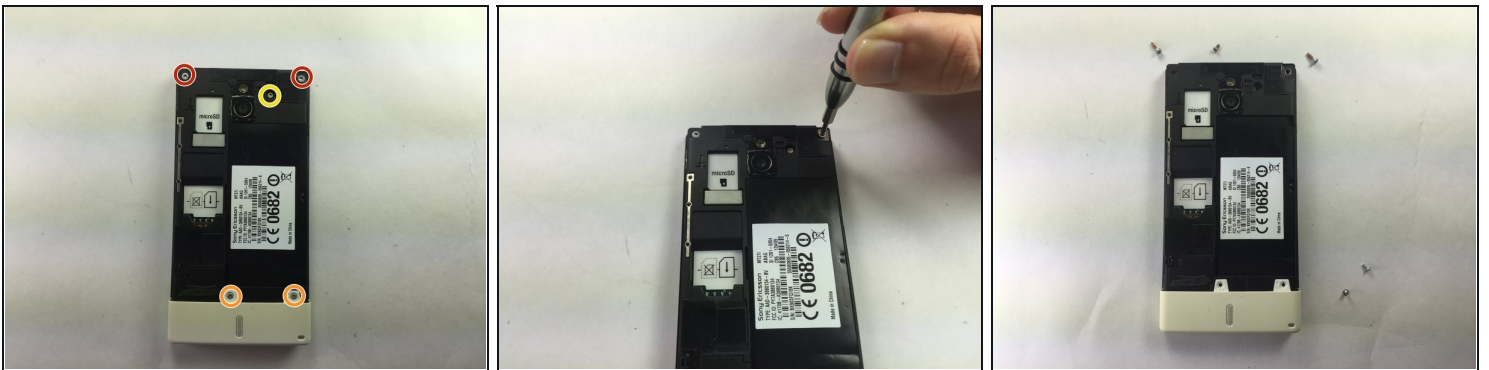



- Remove the five screws as shown on the phone by using 26 Bit Kit.
- Use a T6 screwdriver bit to remove top two screws.
- Use a J000 screwdriver bit to remove the bottom two screws.
- Use a T3 screwdriver bit to remove the middle screw (close to camera).

Step 4

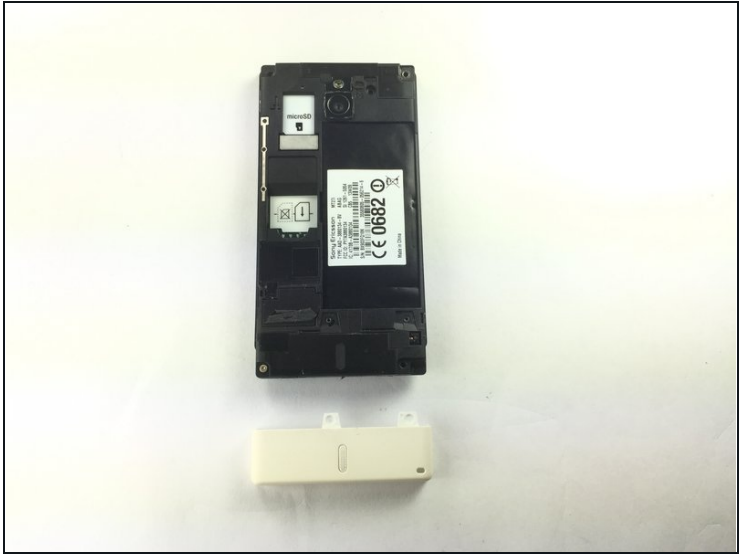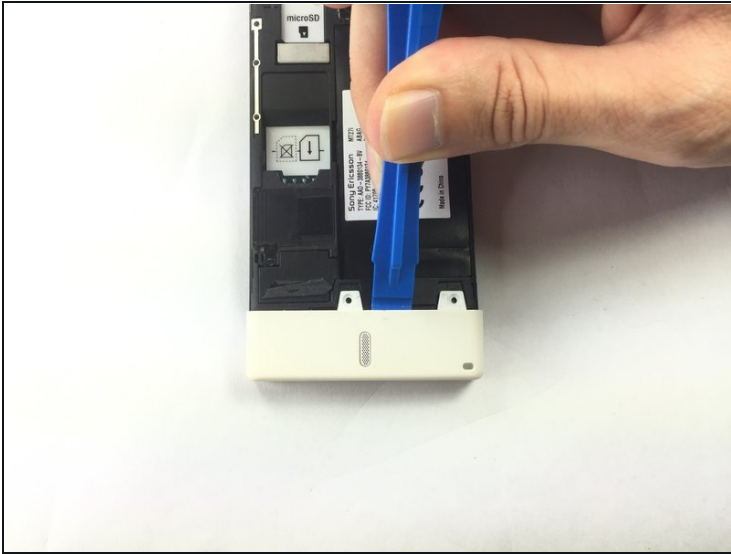

- Use plastic opening tool to remove the bottom white cover as shown.

Step 5

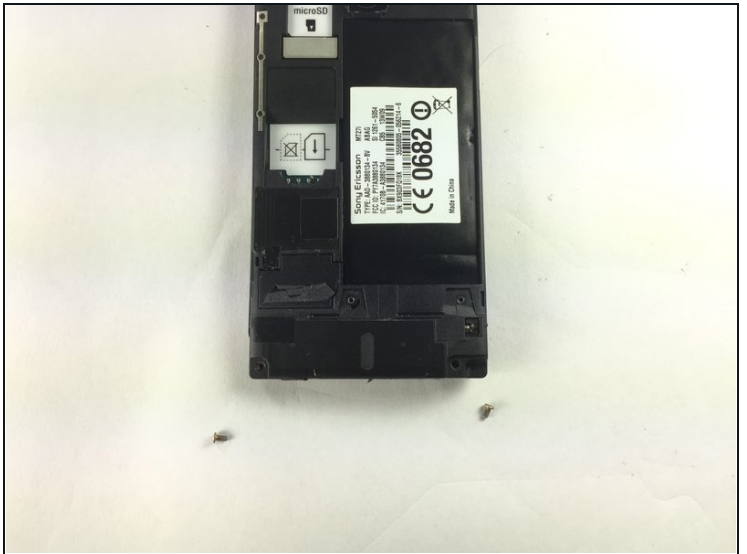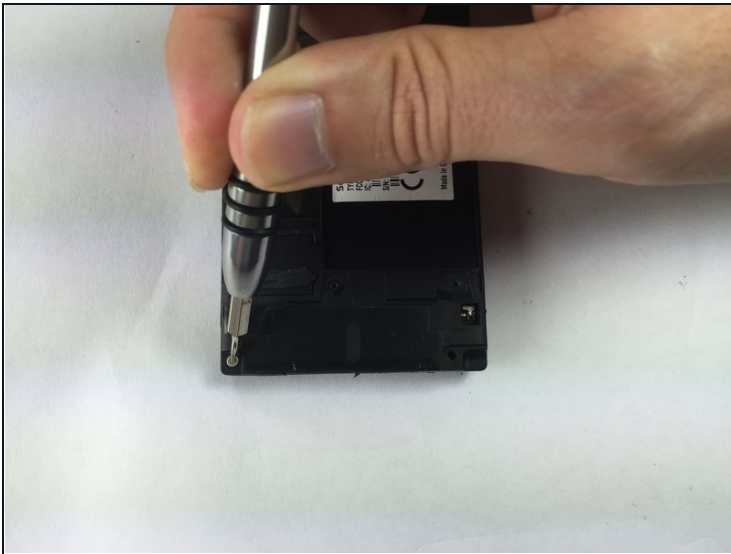


- There are two additional screws under the bottom white cover as shown.
- Use T3 drivers to remove two additional screws as shown.

Step 6




- Using plastic opening tool, lift to remove the small black cover on the bottom left of phone as shown.
- Then, using [tweezers](#) to lift the connector straight up to disconnect the battery's circuit as shown.

Step 7

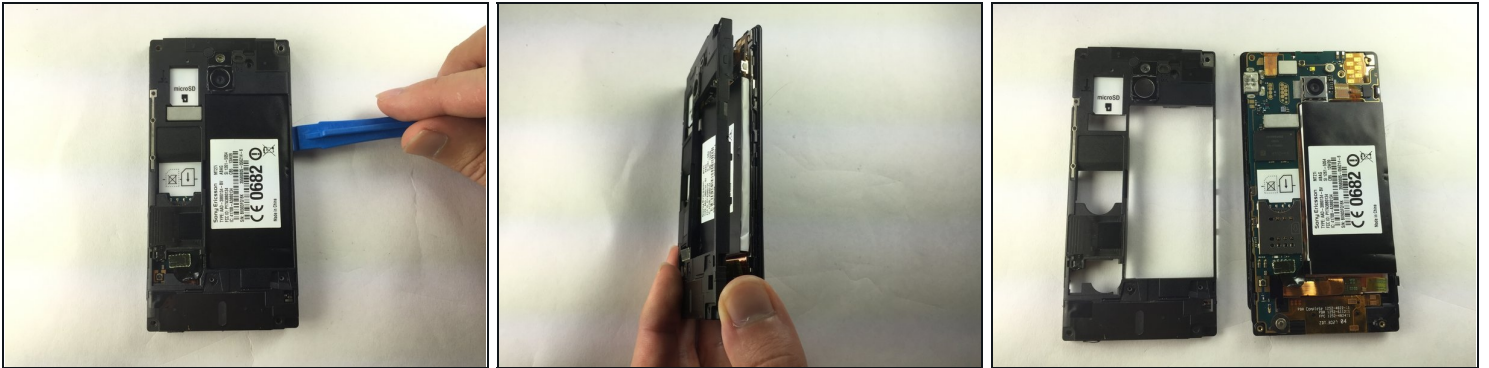

- Turn the phone onto its side and insert a flat object and gently remove cover, using plastic opening tool as shown.

Step 8

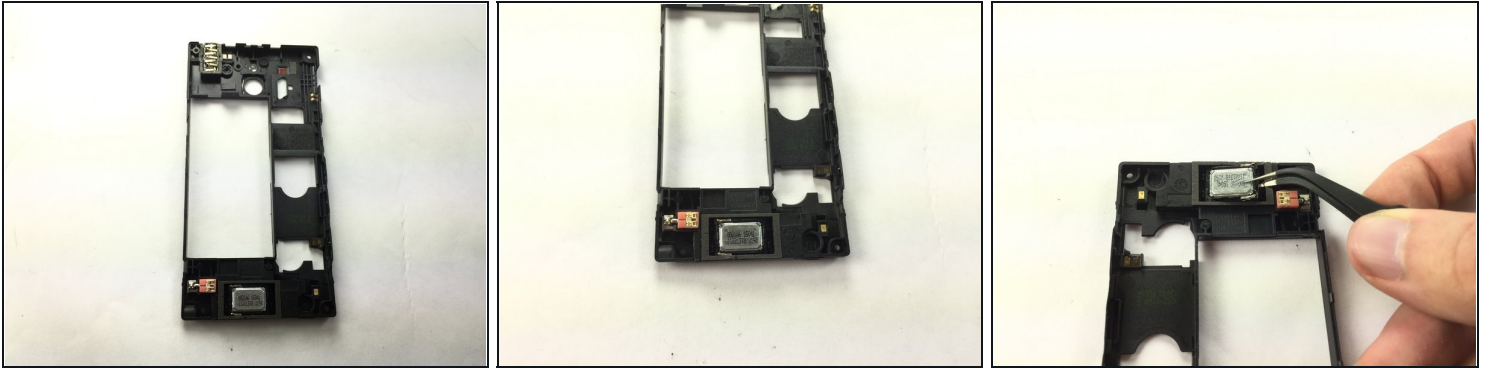

- Flip over the black back cover and locate the speaker phone at the bottom, then use the tweezers to remove the speaker. It is glued to the back cover so a little force will be needed.

To reassemble your device, follow these instructions in reverse order.