



Fujifilm Finepix S1800 Back Cover Assembly Replacement

Is your back case cover scratched on your...

Written By: Ryan Rockford



INTRODUCTION

Is your back case cover scratched on your Fujifilm Finepix S1800? It may be time to replace the cover. This guide will walk you through each step on replacing the back case cover.

TOOLS:

[iFixit Opening Tool](#) (1)

[JIS Driver Set](#) (1)

Step 1 — Back Cover Assembly



- Unscrew the four 4mm screws on the left-hand side of the camera with the JIS #1 screwdriver.

Step 2




- Unscrew the four 4mm screws on the right-hand side of the camera with the JIS #1 screwdriver.

Step 3



- Unscrew the three 4mm screws on the bottom of the camera with the JIS #1 screwdriver.

Step 4

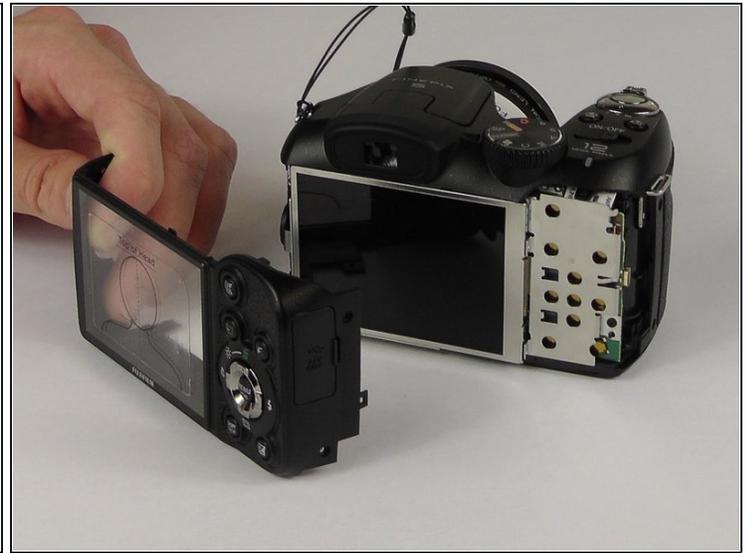

- Take the plastic opening tool and place it in the space between the top of the screen and the top of the camera.
 - The cover will pop out.
- ⓘ You may have to work the back cover from different sides to get it to pop off.
-

To reassemble your device, follow these instructions in reverse order.