



# Samsung Galaxy Centura Screen Replacement

This guide will show how to remove and replace the screen for the Samsung Galaxy Centura.

Written By: Anthony Maldonado



---

## INTRODUCTION

This will show how to remove and replace the screen on the Samsung Galaxy Centura.


---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Metal Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery

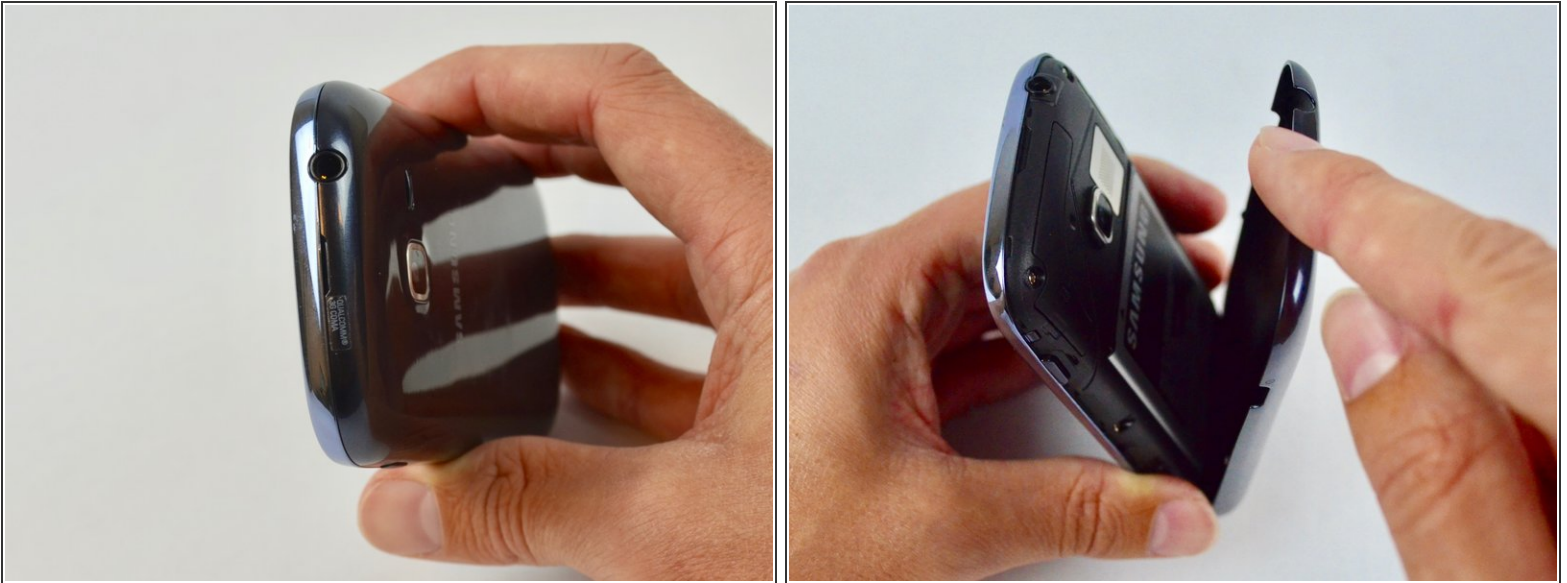

- Locate the rectangular groove on the top side of the device.
- Firmly press the tip of your index finger, or plastic opening tool into the groove, and pull back firmly. The device should pop open as shown.

## Step 2



- With the back casing removed, the phone should appear as shown, with a clear view of the battery.
- Gently pull the battery up with your thumb and index finger. It should come out without resistance.



## Step 3 — Screen



- Find the positions of the seven screws on the back of the device. Use the Phillips #00 screwdriver to remove these 5.0mm screws.

## Step 4




- Locate the indentation on the side of the device and gently insert the plastic opening tool into it. With a firm prying motion, the plastic should begin to come apart.
- Gently pull apart the plastic, and set it aside. The phone should now appear as shown in the second picture.

## Step 5



- Pull back the clips located on the right hand side and the upper left side of the phone as shown.
- After releasing the clips, gently raise the motherboard, exposing the screen from the back.

## Step 6

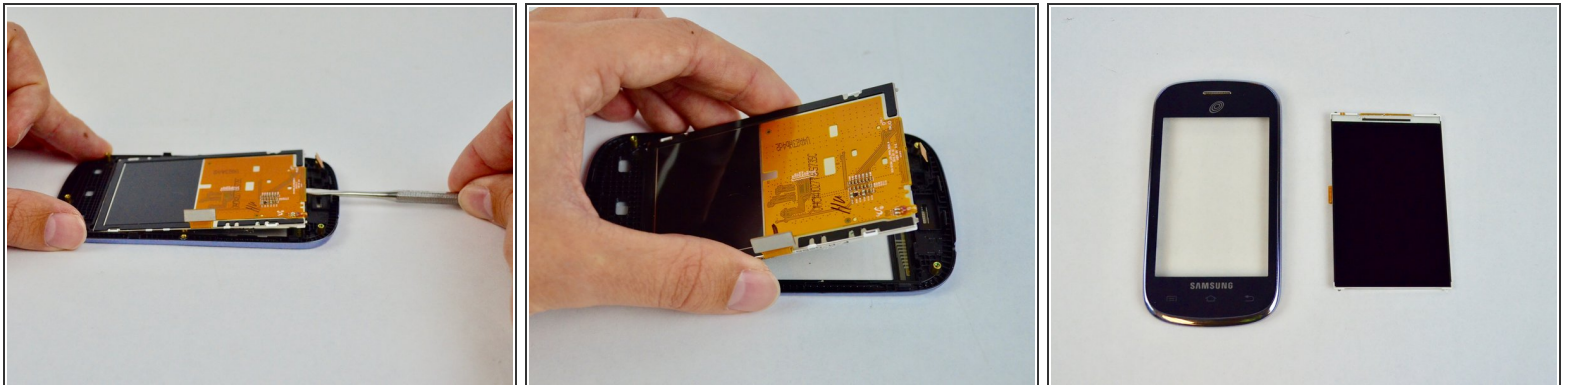

- Gently insert the metal spudger towards the top edge of the back side of the screen.
- Gently apply pressure to raise the screen from its held position. Continue pulling gently upwards from one side until the screen has been completely removed.

To reassemble your device, follow these instructions in reverse order.