

BLU Tank II Motherboard Replacement

Replace the motherboard on your BLU Tank II.

Written By: David Kelchner



INTRODUCTION

This guide will detail how to remove and replace the motherboard of the BLU Tank II cell phone. You will need to know how to remove and replace the parts from the previous guides in order to replace the motherboard. You will need a screwdriver to replace the motherboard.



TOOLS:

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Back Panel





- With the screen facing you, find the left corner of the phone. There should be a visible groove.
- With your fingers, carefully press a fingernail into the slot and separate the back panel from the phone.

Step 2 — Battery



- After the back panel has been removed, put your finger on and press down on the bottom part of the battery.
- Lift the battery up and carefully remove the battery.

Step 3 — Front Panel





Using the phillips head screwdriver, remove all 5 2.5mm screws.

Step 4



- Wedge the blue plastic iFixit opening tool between the front plate and the outer lens plate.
- Carefully separate the front plate from all sides of the phone.

Step 5 — Motherboard






 Locate the two 2.5mm screws (red circles in image) and remove them with the Philips 00 screwdriver used previously.

Step 6





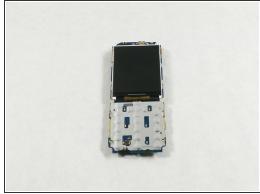

 Once screws are removed, separate the motherboard and outer lens by carefully pushing the motherboard out with your hand as displayed in the image.

To reassemble your device, follow these instructions in reverse order.