



# ASUS EEE PC701SD-WHI004X Battery Replacement

A Battery Replacement Guide of an ASUS EEE PC701SD-WHI004X


Written By: mir



## INTRODUCTION


Use this guide to replace the battery of your ASUS EEE PC701SD-WHI004X. Make sure to disconnect the adapter before beginning. You should be following this guide if the battery is dead, or the adapter has stopped charging the laptop.

## Step 1 — Battery

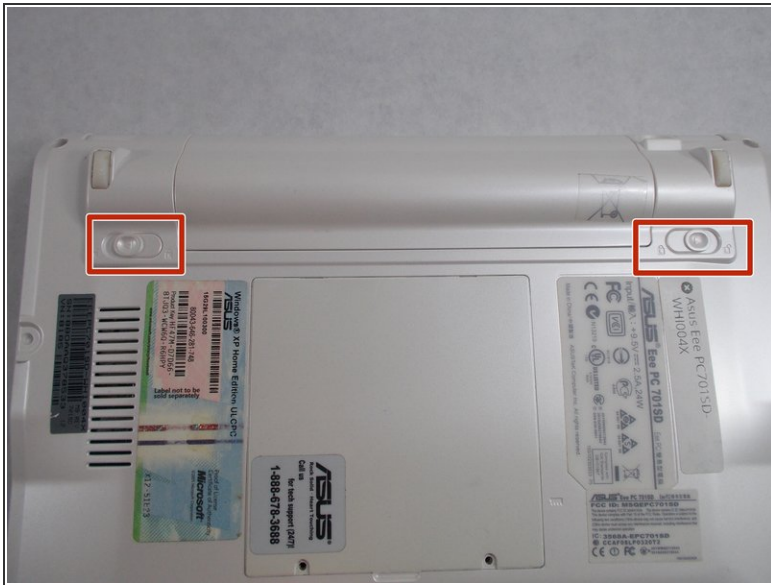

- Flip the laptop over, you should see two battery tabs.
- Slide the right tab towards the right. The orange dot should be visible. This tab will be locked open.

## Step 2

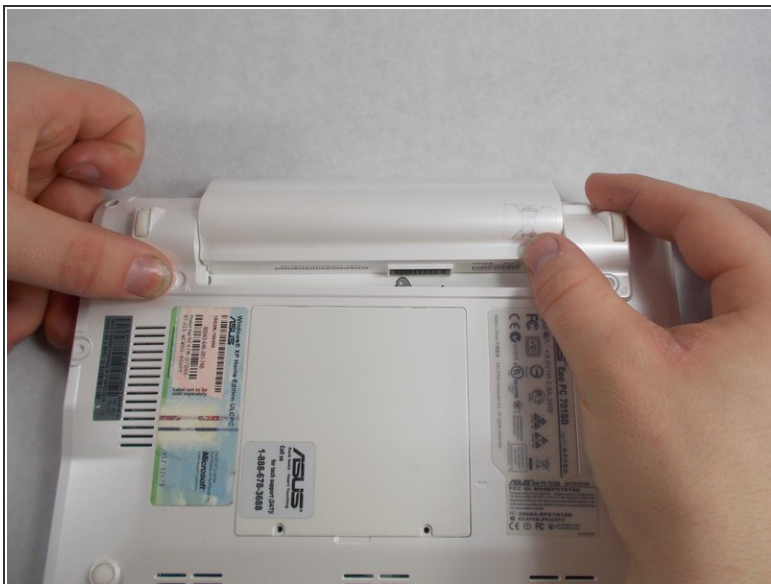

- While holding the left tab towards the left. Gently slide the battery out of the laptop.

To reassemble your device, follow these instructions in reverse order.