



# Toshiba Satellite U925T-S2120 Battery Replacement

In this guide you will learn how to remove the...

Written By: Sonia Shah



# INTRODUCTION

In this guide you will learn how to remove the battery of your Toshiba Satellite U925T-S2120. If your battery is broken, you may need to replace it. Before beginning this guide you should have all tools that are listed.

---

## TOOLS:

[Phillips #1 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)


---

## Step 1 — Battery



- Use [tweezers](#) to remove the nine rubber grip pads on the back panel of the laptop.

## Step 2

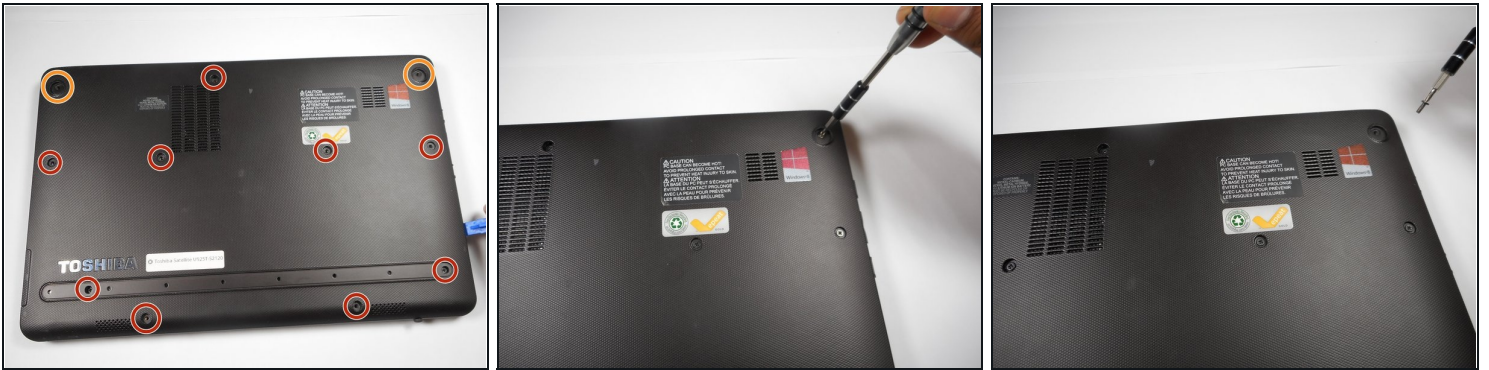

- Use a Philips #1 screwdriver to remove the nine 5.8 mm screws highlighted.
- Remove the two 6.8 mm screws. Set aside.

## Step 3



- Remove the back panel by inserting the plastic opening tool into the seam of the laptop and pushing downwards.




## Step 4



- Use the screwdriver to remove the two 3.4 mm screws highlighted.


## Step 5

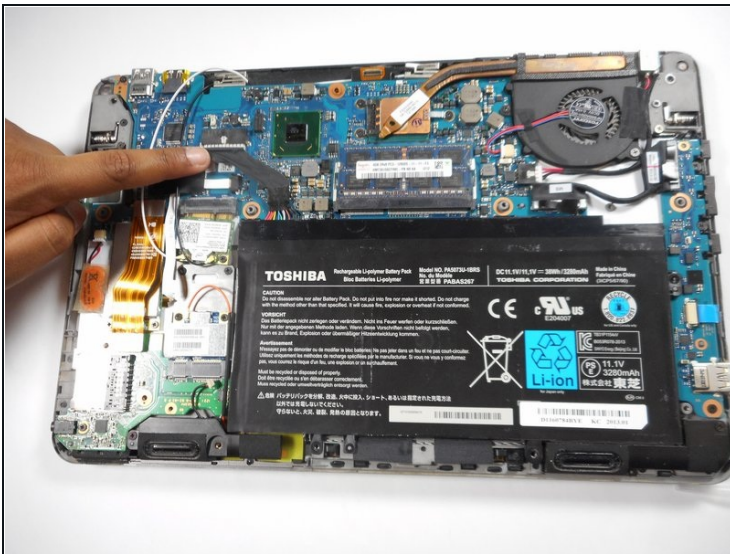

- Remove the black cable from the connector. Pull in the same direction as the black wiring runs.

⚠ Excessive force in this step may damage the wires and/or your device.

## Step 6

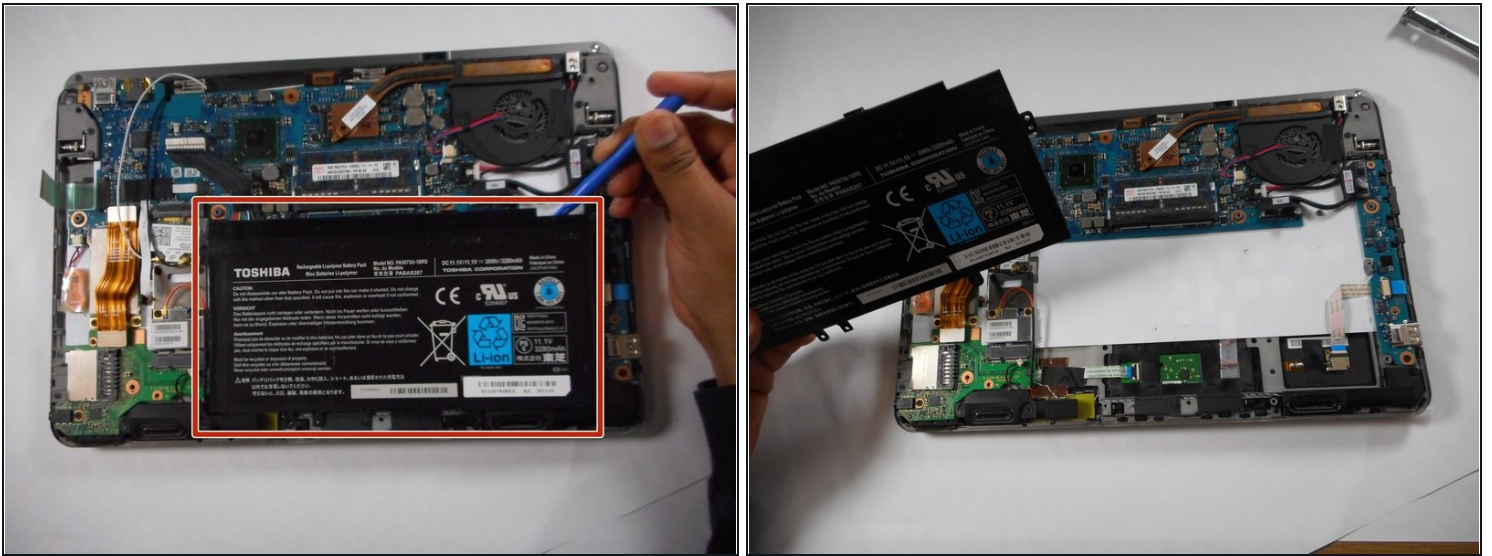

- Lift and remove the battery from the device with the iFixit opening tool.

To reassemble your device, follow these instructions in reverse order.