




HP Compaq nc8430 Battery Replacement

How to fix HP Compaq nc8430 battery that is not working. Replace faulty battery.

Written By: Karen Gandara

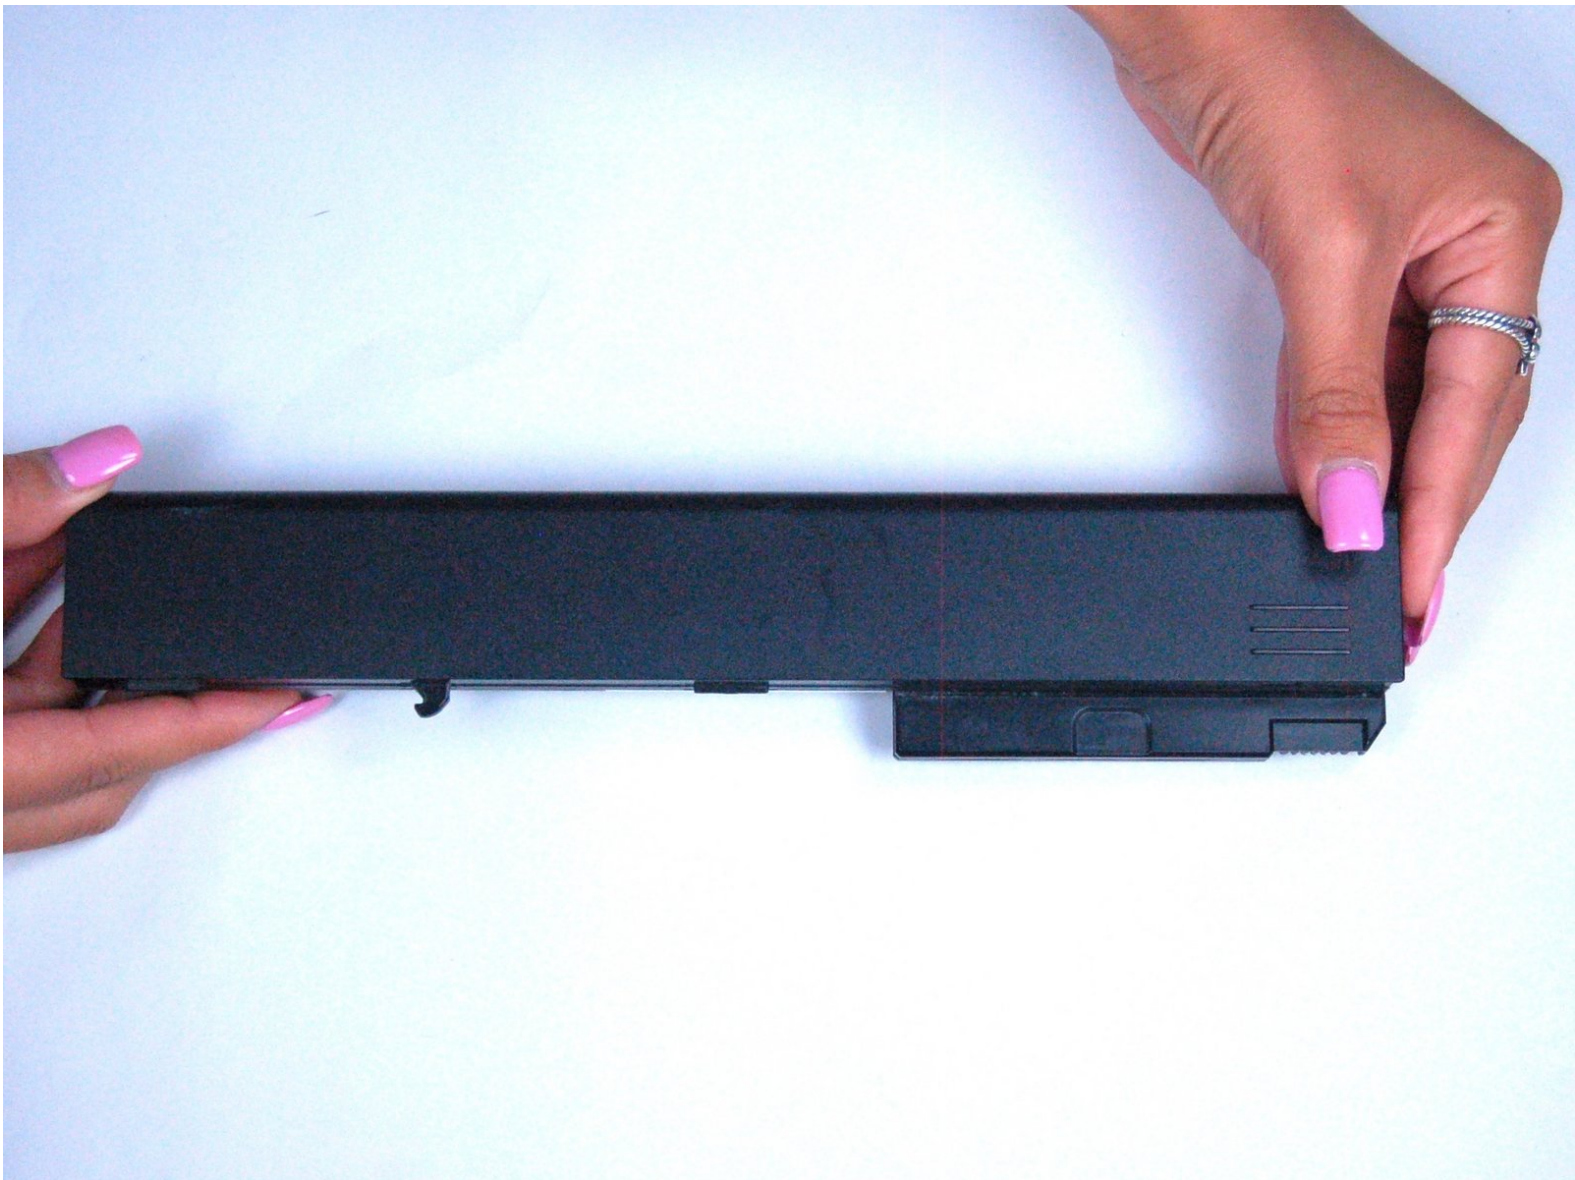


INTRODUCTION

This guide will walk you through the process of replacing a faulty battery with a new one.

Step 1 — Battery



 Completely shut down the device and unplug any adapters and cords connected to the device.

- Carefully flip the device over so that the bottom is facing up.
- Slide both of the latches to the left.

Step 2



- Slide up against the three lines the battery has.

Step 3



- Slide the battery up and away from the laptop.

⚠ Slowly remove the battery to prevent any connectors from getting damaged.

To reassemble your device, follow these instructions in reverse order.