




Samsung Galaxy Tab A 7.0 Volume Button Replacement

Replace faulty volume buttons to your Samsung Galaxy Tab A 7.0".

Written By: Bradley Watson

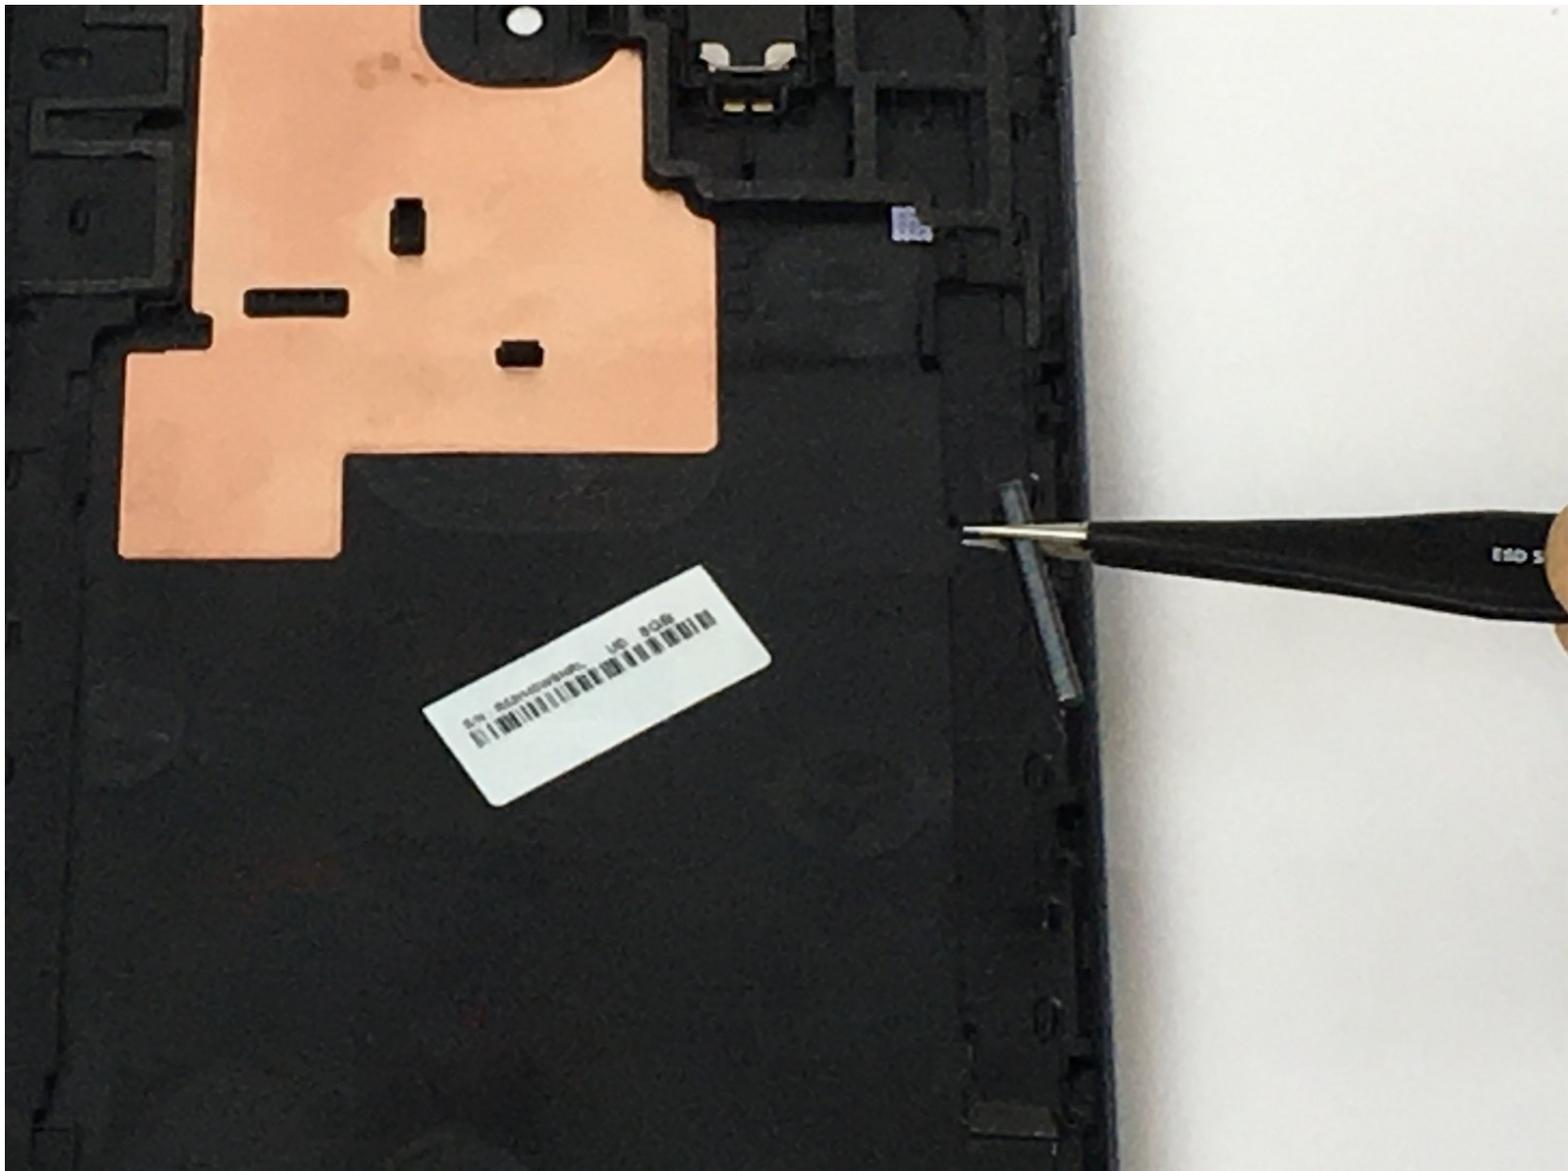

INTRODUCTION

During all steps, handle every component with care as they are very delicate electronic parts.

TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Volume Button




- Using the plastic opening tool, starting at any corner on the tablet, insert the tool between the back panel and the front panel.
- Slide tool around the tablet to unlock the panels from one another.

Step 2

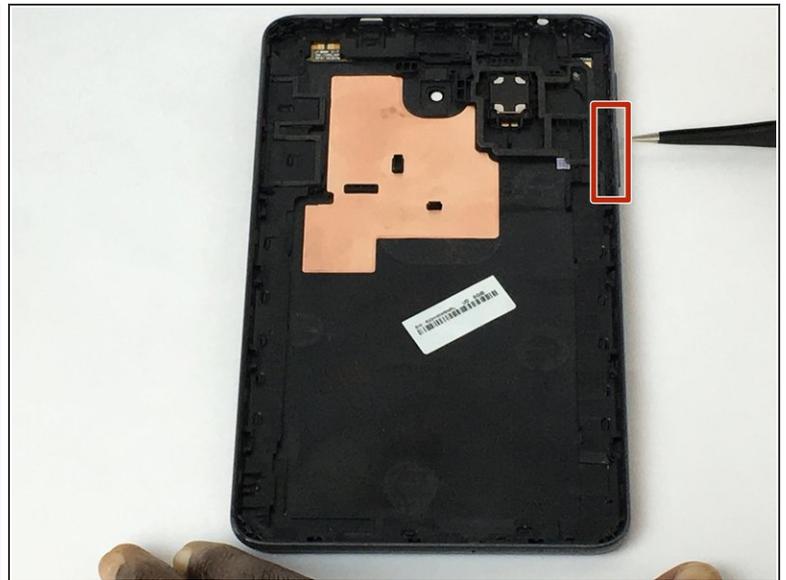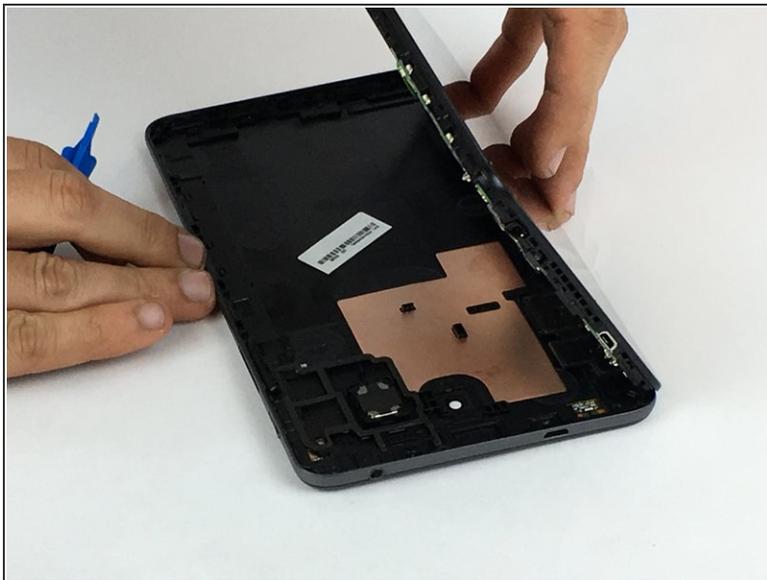

- Carefully remove the back panel from the front to expose the components inside the device.
- The volume buttons are located on the back panel shown in the red box.

Step 3

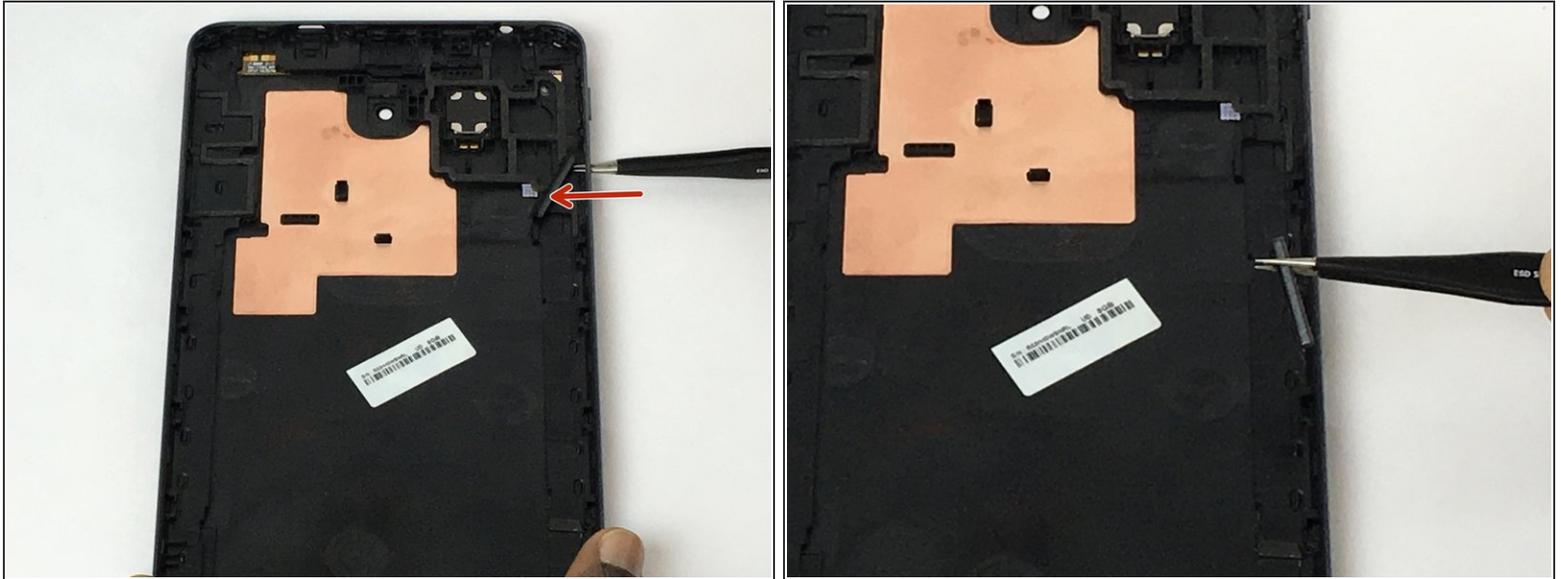

- Take your tweezers and gently push volume buttons loose from the panel.

To reassemble your device, follow these instructions in reverse order.