



# Neato Botvac 65 Brush Replacement

This guide will show you how to remove the Neato Botvac 65 brush so you can replace it with a new one.

Written By: Joseph Caton



---

## INTRODUCTION

Step by step instruction on how to replace the brush for the Neato Botvac 65.

---

### TOOLS:


- [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Brush



- Flip the device upside down.

## Step 2

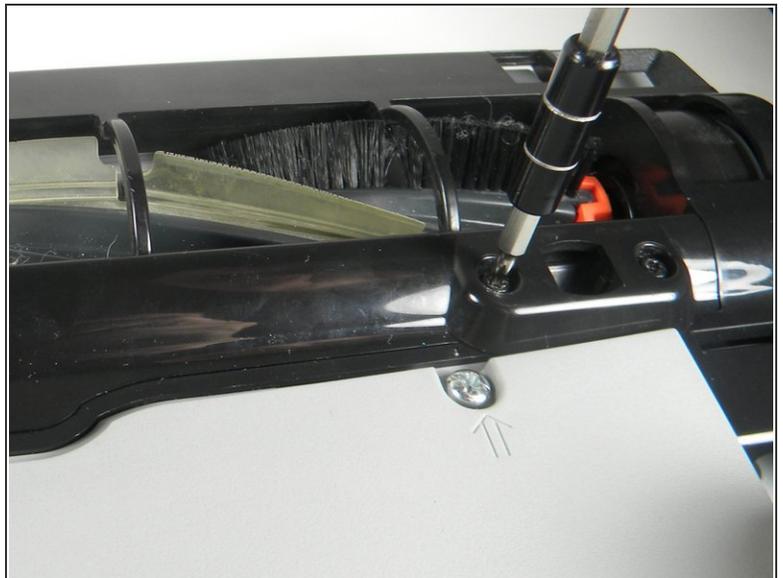

- Use the screwdriver to take off the four (4) 10mm screws located near the brush which secure the plastic guard.

## Step 3



- Remove the plastic brush guard.
- Pull off the plastic covering the brush.

## Step 4



- Lift the brush to clean or replace.

To reassemble your device, follow these instructions in reverse order.