


Neato Botvac 65 Filter Replacement

Neato Botvac65 filter replacement.

Written By: Sebastien Daub

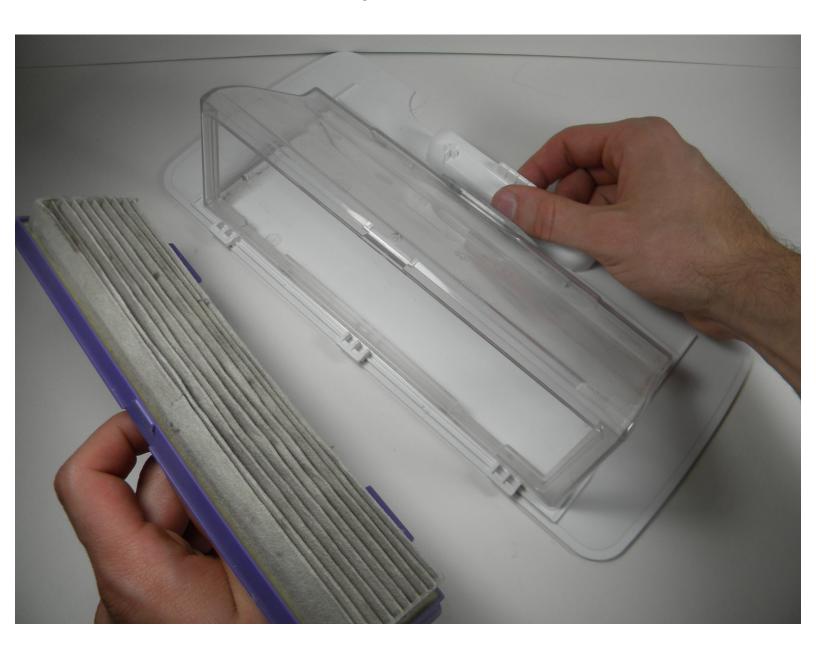

INTRODUCTION

Step by Step instructions to replace Neato Botvac65 used/faulty filter.

Step 1 — Filter



Carefully grasp the back latch and open to reveal filter compartment.

Step 2



Pull out the used filter slowly.

Make sure latch is closed properly in order for Botvac to function.