




Onda VI10 Speaker Replacement

This guide will teach you how to remove the speakers for the Onda VI10.

Written By: Carlos Diaz

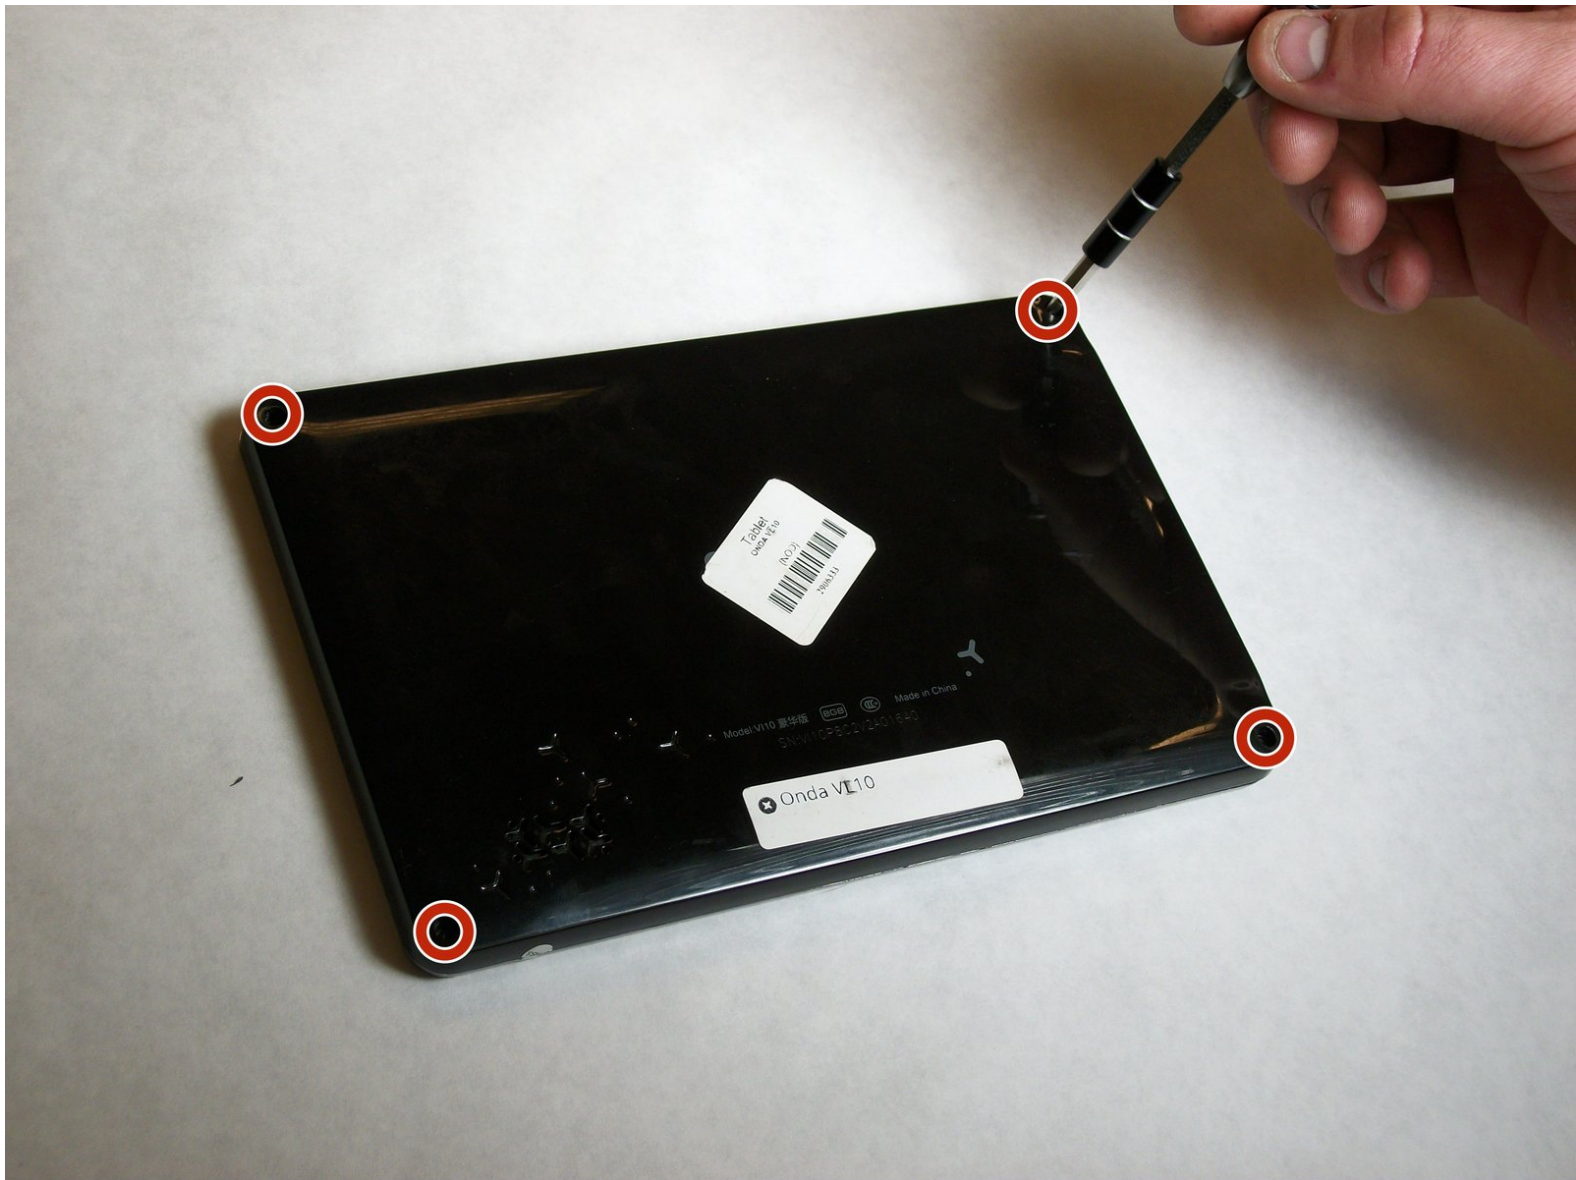

INTRODUCTION


This guide will teach you how to remove the speakers for the Onda VI10.



TOOLS:

- [Soldering Iron](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Speaker

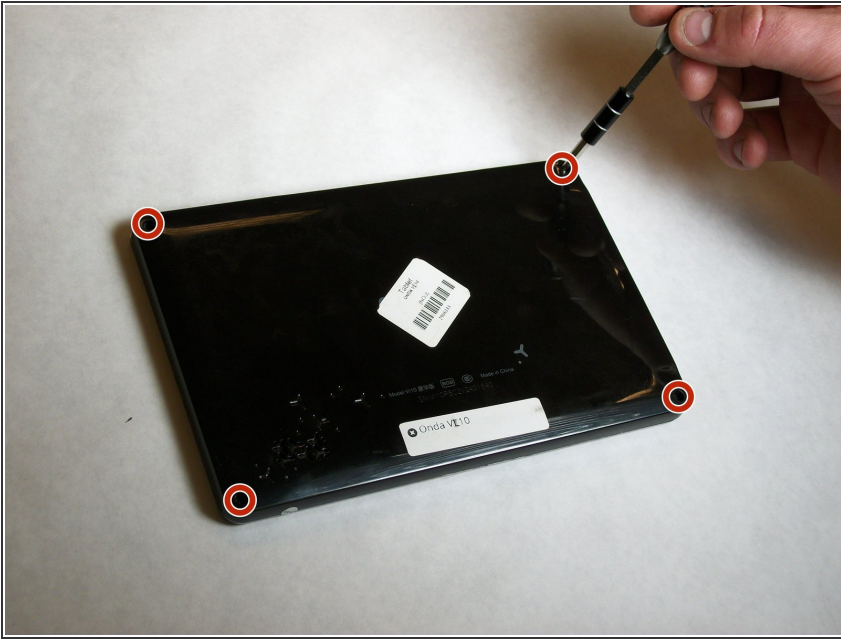

- Use a number 0 screw driver to remove the four screws.

Step 2



- Power Button on the side should be pointing outward.
- Note: This is so the ribbon cables inside are not damaged.

Step 3



- Locate the black and red speaker wires going back to the mother board.

ⓘ Note: Speaker wires may run underneath the battery wires.

Step 4




- Carefully remove the speaker cables from the retaining tabs using a thin metal spudger.

Step 5



- Pry the speaker out of its molding using a thin metal spudger

Step 6

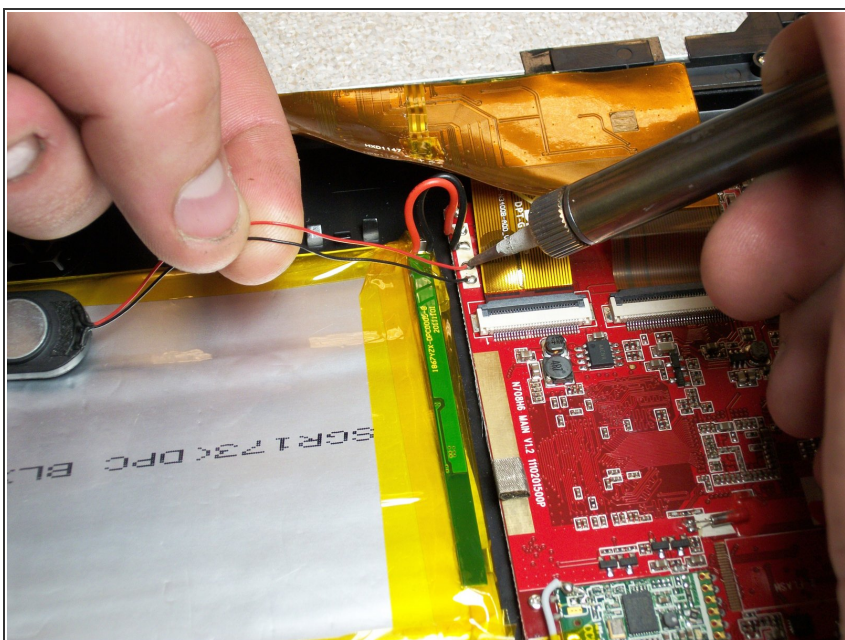

- Desolder the two speaker wires from the motherboard using a soldering iron.

⚠ Caution: Soldering Iron is extremely hot.

To reassemble your device, follow these instructions in reverse order.