



Toshiba Satellite U925T-S2120 Fan Replacement

In this guide you will learn how to remove the...

Written By: Andrew Honderich



INTRODUCTION

In this guide you will learn how to remove the fan of your Toshiba Satellite U925T-S2120. If your fan is broken, you may need to replace it. Before beginning this guide you should have all required tools that are listed.

TOOLS:

[Phillips #1 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)


[Tweezers](#) (1)

Step 1 — Fan



- Use [tweezers](#) to remove the 9 rubber grip pads on the back panel of the laptop.

Step 2

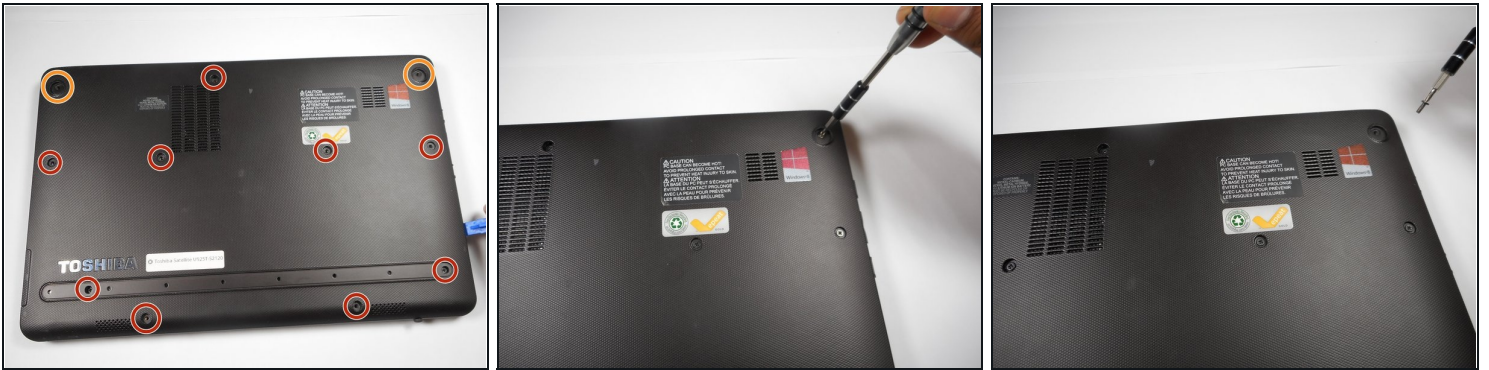

- Use a PH1 screwdriver to remove the nine 5.8 mm screws.
- Unscrew the two 6.8 mm screws. Set all screws aside.

Step 3




- Remove the back panel by inserting the plastic opening tool into the seam of the laptop, and pushing the opening tool downwards.

Step 4



- Unscrew the two 5.4 mm screws with a PH1 screwdriver.

Step 5

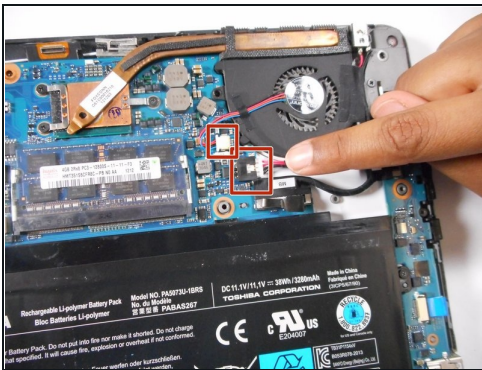

- Pull the cables away from the two connectors in the same direction as the individual wires are running.

Step 6



- Gently use your thumb and forefinger to lift and remove the fan.

To reassemble your device, follow these instructions in reverse order.