



# Sony Vaio PCG-161L Battery Replacement

How to replace the battery on your Sony Vaio PCG-161L.

Written By: Roman Alshehri



## INTRODUCTION


Is your battery no longer able to hold a charge? Or do you have multiple batteries for your Sony Vaio PCG-161L? You only need your hands and a couple of minutes to change your battery.

## Step 1 — Battery



- Flip your device over so the bottom panel is facing up.

## Step 2

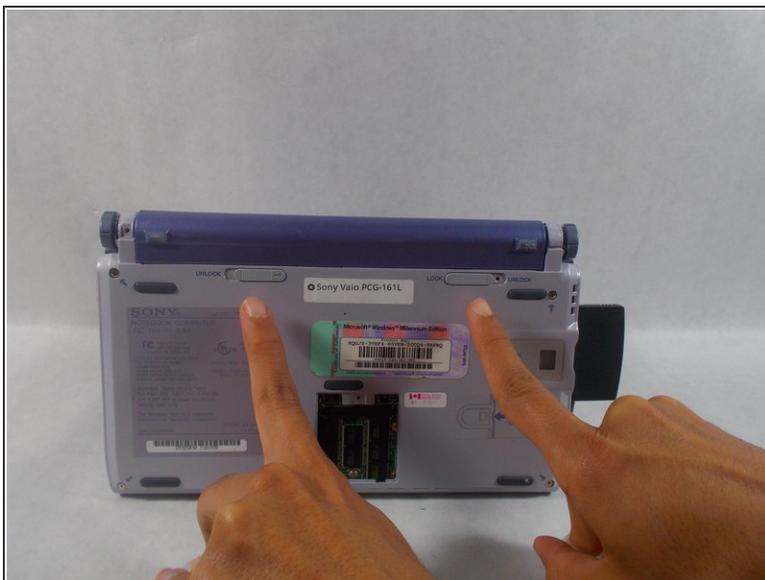

- Slide the lock switches below the battery to the unlocked position.
- Lift up the battery, rotating it up and away from you, then pull it out.

To reassemble your device, follow these instructions in reverse order.