




# Onda VI10 Battery Replacement

This guide is to show how to replace the battery in a Onda VI10.

Written By: Clint Richards

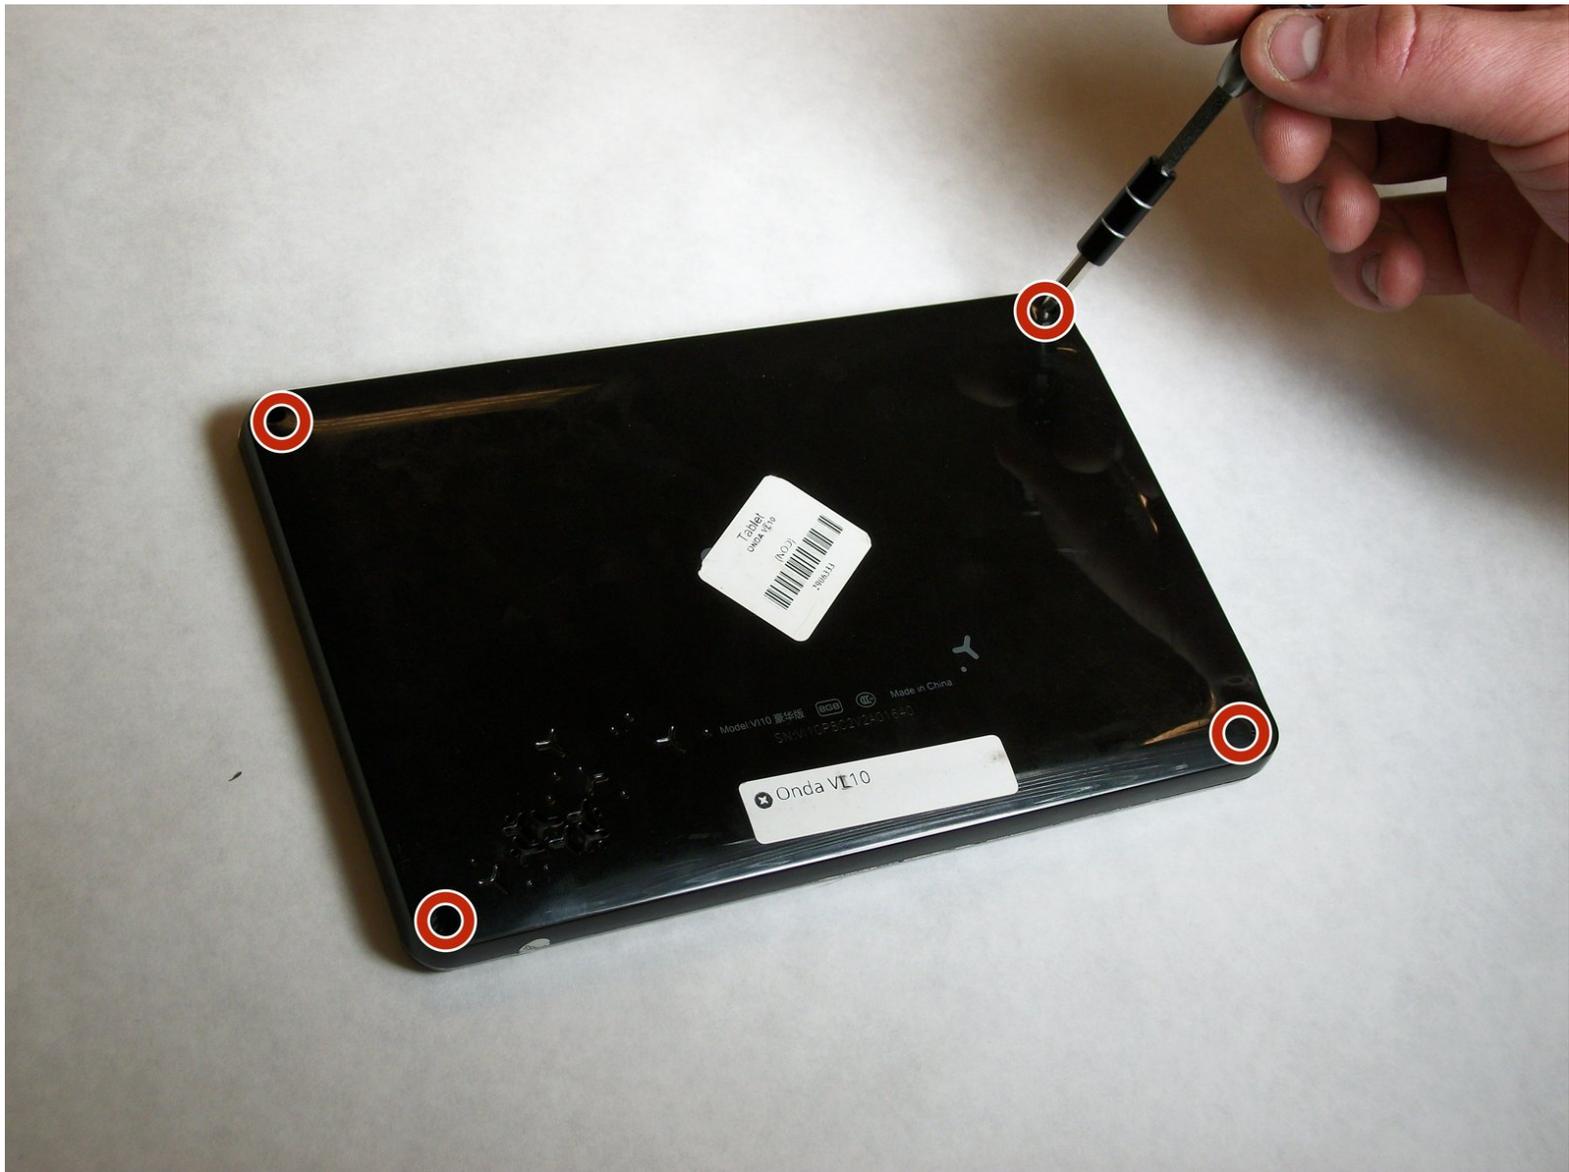

---

## INTRODUCTION


This guide is to show how to replace the battery in a Onda VI10.

---

### TOOLS:

- [Soldering Iron](#) (1)
  - [Heat Gun](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery

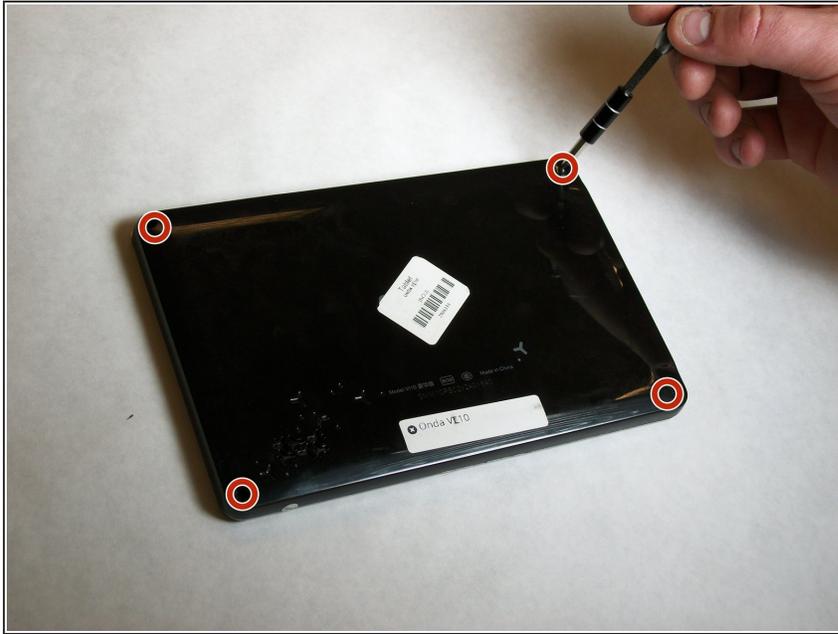

- Use a number 0 screw driver to remove the four screws.

## Step 2



- Power Button on the side should be pointing outward.
- Note: This is so the ribbon cables are not damaged.

### Step 3




- Heat up the back of the device with a hair dryer to loosen the glue.

### Step 4



- Pry up battery from plastic using a nylon spudger or plastic opening tool.

## Step 5

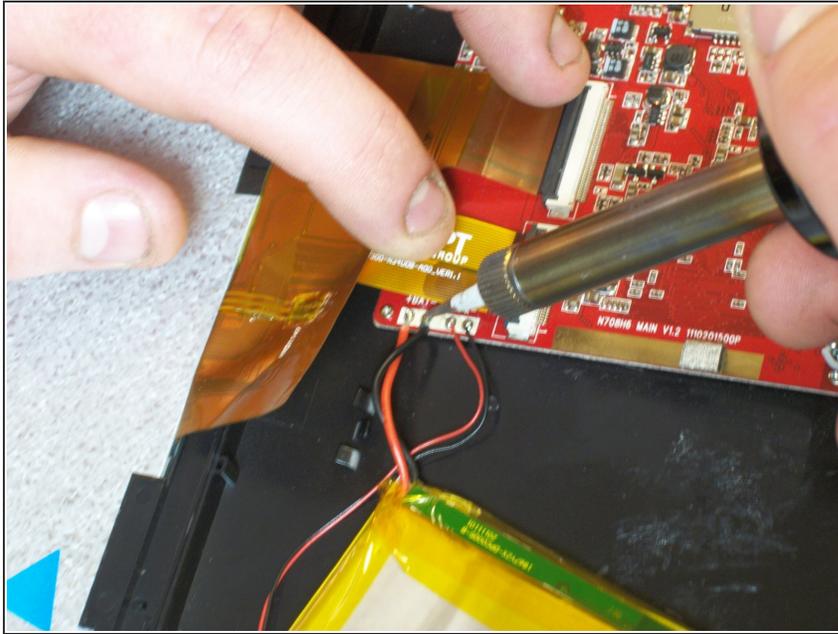

- Desolder the two battery cables from the mother board.

To reassemble your device, follow these instructions in reverse order.