



Dell XPS M140 Hard Drive Disk (HDD) Replacement

This guide will help users locate and remove the HDD in the Dell XPS M140 laptop.

Written By: Travis Morazzini



INTRODUCTION

In this guide, a user will be able to safely access/replace the Hard Disk Drive (HDD) in their Dell XPS M140 laptop. This could resolve any issues related to the HDD. Along with other issues, the HDD can cause repeated system crashes or reboots.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- The first step is to turn over the laptop

Step 2

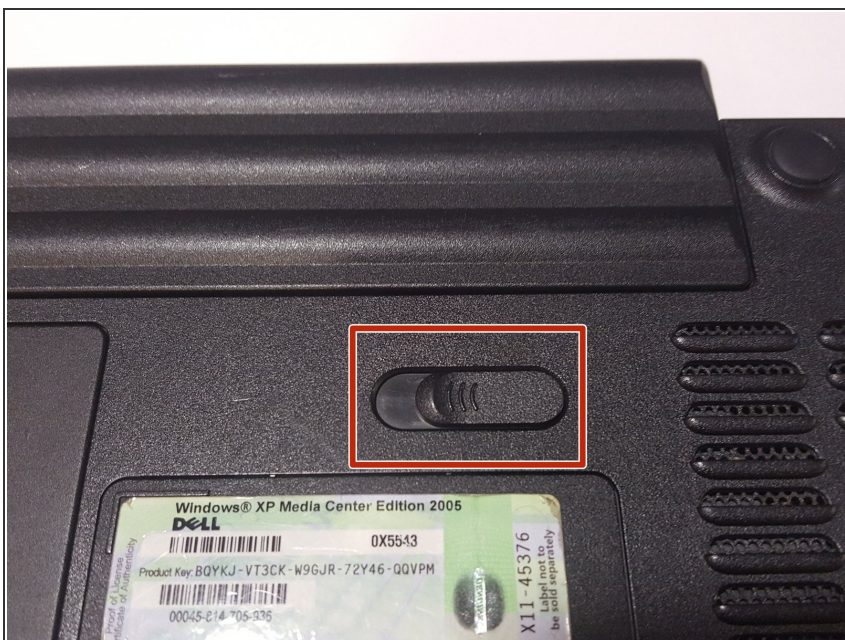

- Locate the slide lock for the battery.

Step 3



- Slide the lock and pull out the battery.

Step 4 — Hard Disk Drive (HDD)



- loosen the two screws that secure the hard drive cover.
- ⓘ The screws won't come out fully. Once you feel like the door is loose enough, it should come right off.

Step 5



- Remove the old HDD from the casing. This is done by simply sliding it out.

To reassemble your device, follow these instructions in reverse order.