



# Makita DT01 The trigger Replacement

This guide walks your through the steps required to replace the trigger on the Makita DT01 drill.

Written By: Ya'Rub Al Manwari



---

## INTRODUCTION

This guide walks your through the steps required to replace the trigger on the Makita DT01 drill.

---

### TOOLS:

- [JIS Driver Set](#) (1)
-

## Step 1 — The trigger




- Take out the battery.

## Step 2




- Unscrew the six screws on the top of the drill.

### Step 3

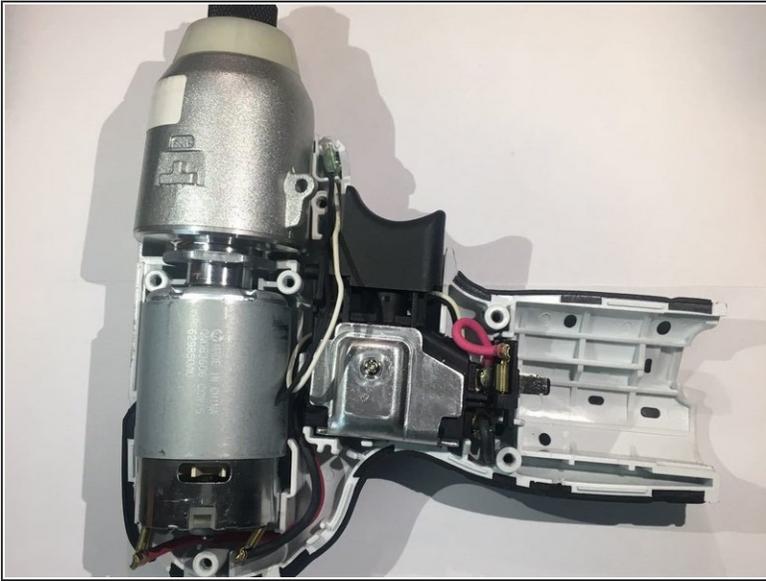

- Place the big trigger out to be able to remove the other trigger smoothly.

### Step 4

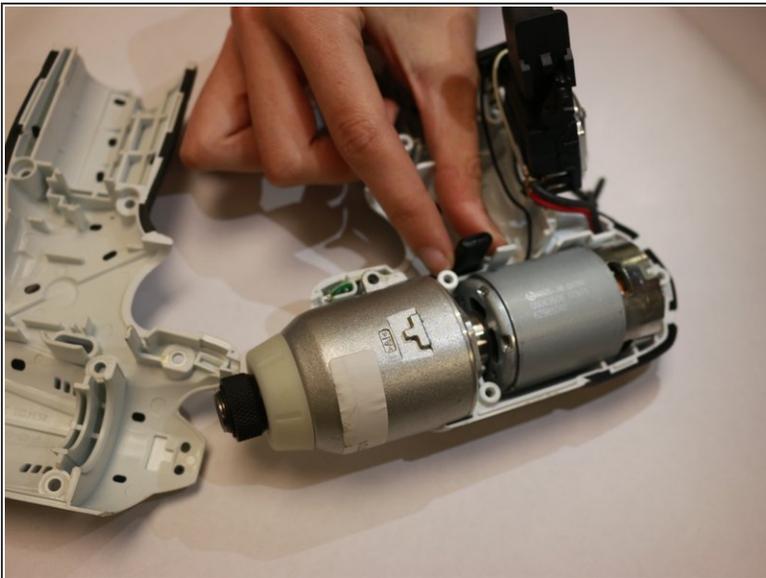

- Take out the broken trigger.

To reassemble your device, follow these instructions in reverse order.