



FLIR FX Camera Stand Battery Replacement

The FLIR FX camera stand battery is an important piece of this product. If your stand will not charge this guide will help.

Written By: Emily Bell



INTRODUCTION

The camera stand battery is an important piece of this product. If your stand will not charge this guide will help.




TOOLS:

- [JIS Driver Set](#) (1)

J00



- [iFixit Opening Tools](#) (1)
 - [iOpener](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Camera Stand Battery

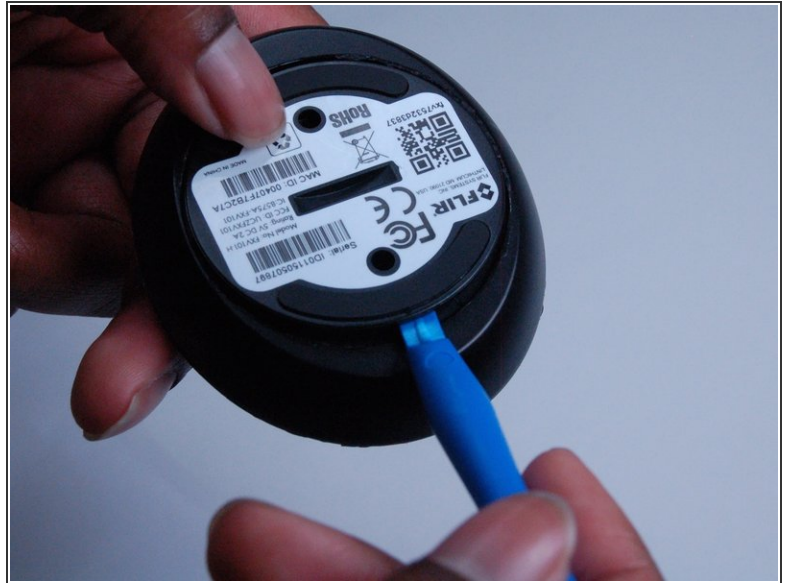


- Use a plastic opening tool to pry off the plastic bottom cover.

Step 2

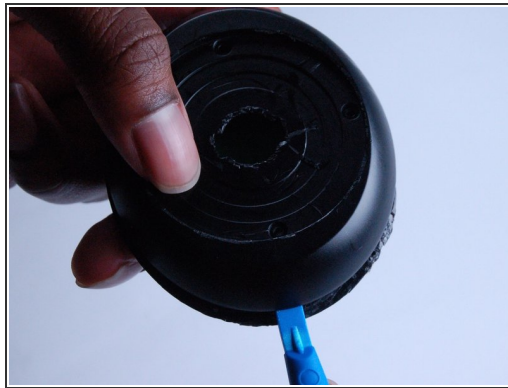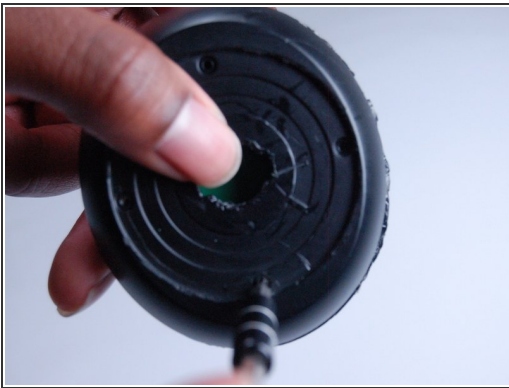

- Unscrew the four screws on the bottom of the stand with a J00 screwdriver.
- Use a plastic opening tool to pry open the bottom of the stand.
- If having a hard time separating the two pieces use the iOpener tool to soften the adhesive under the panel.
- Heat up for 30 seconds. Once it is hot place around the stand to loosen the glue.

Step 3

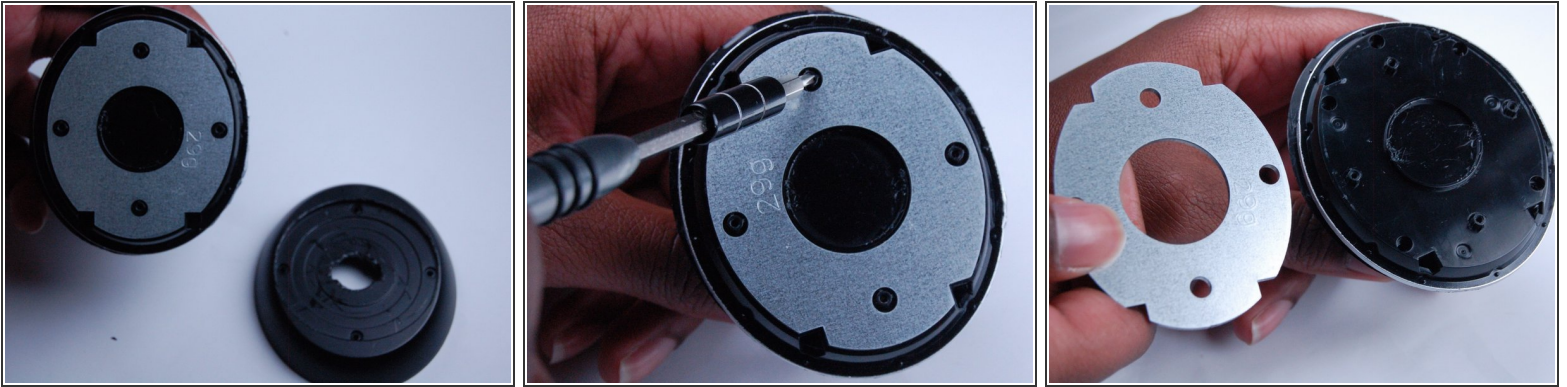

- Once you have separated the two parts, use a J00 screwdriver to unscrew the four 1.2 mm screws which connect the metal piece to the top of the the stand.

Step 4



- When the metal piece is removed, unscrew the four 1.2 mm Phillips #1 screws on the plastic piece of the stand
- Now separate the top of the stand from the plastic bottom piece.
- Unplug the battery from the stand.

To reassemble your device, follow these instructions in reverse order.