



HP Mini 210-1199DX Keyboard Key Replacement

HP Mini 210-1199DX keyboard piece has broken off, or in need of replacement.

Written By: Phillip Winston




INTRODUCTION

This guide will show you how to replace missing or broken keys from the keyboard of a HP Mini 210-1199DX.

TOOLS:


- [Cotton Swab](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Keyboard pieces

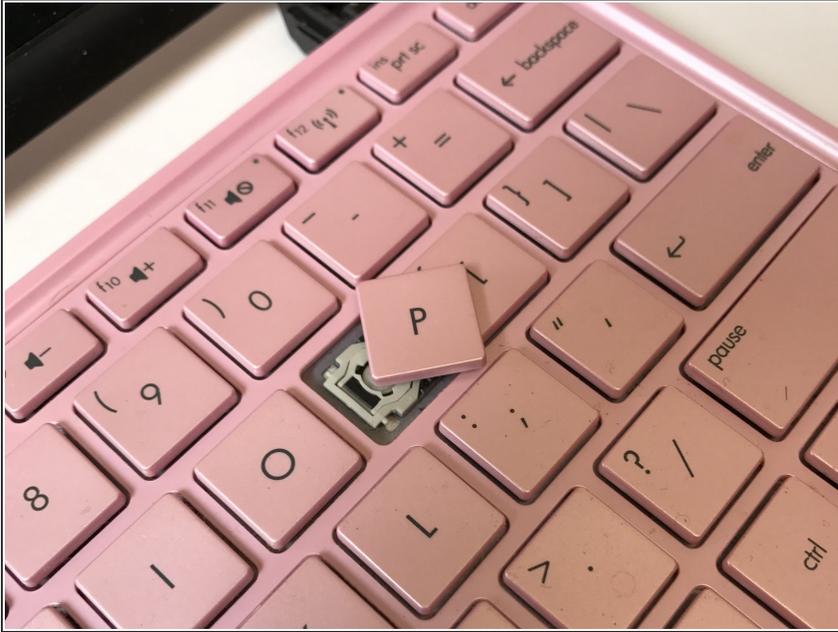

- Locate the broken key(s) and make sure there's nothing blocking it or jammed in the slots. Insert the key into the key slot.

Step 2

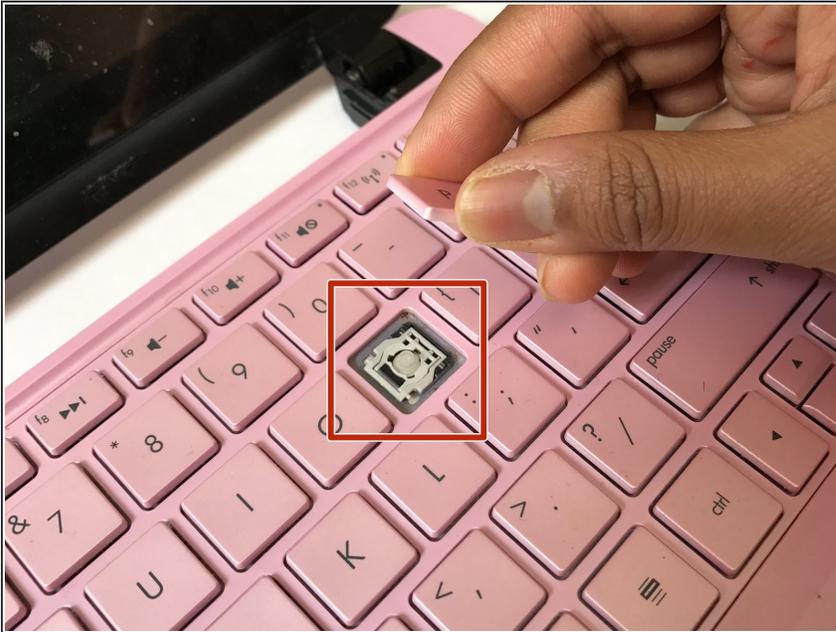

- Take a clean cotton swab and make sure to clean out both the key itself alone with the key slot. Remove anything that may be jamming or interfering with the key.

Step 3



- With the key slot clear, press the key into the slot firmly. Upon hearing a click press it a few times to confirm that it is fully attached.

To reassemble your device, follow these instructions in reverse order.