


2004-2008 Audi A4 (B7) Headlight Bulb Replacement

A video tutorial on how to change or replace the 2005-2008 Audi A4 headlights.

Written By: eCuration

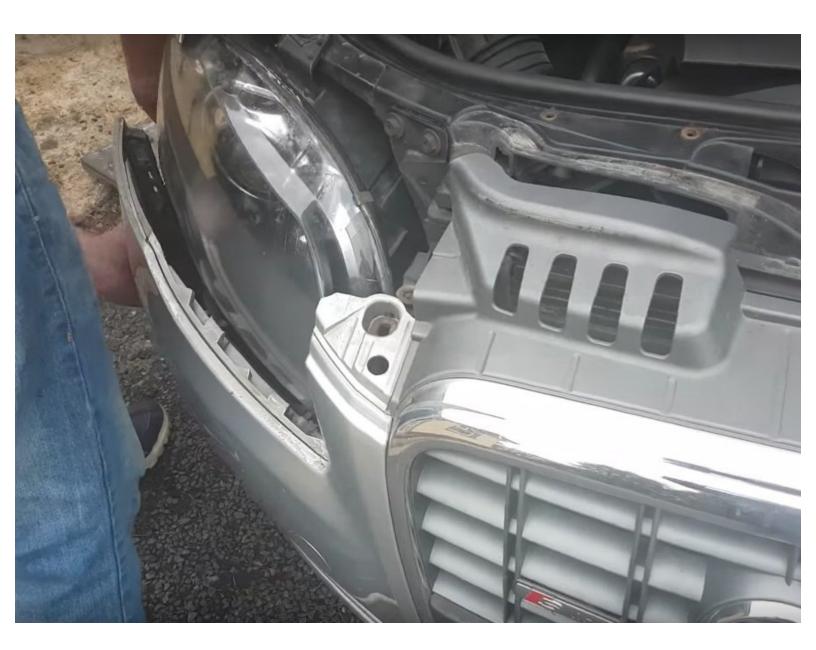

This document was generated on 2020-11-28 05:53:07 AM (MST).

INTRODUCTION

This video guide will show you how to replace the headlights on a 2005-2008 Audi A4.

Best to always replace both at the same time.



TOOLS:

- Hydraulic Floor Jack (1)
- Jack Stands (1)
- 3/8" Drive Ratchet (1)
- 10" Ratchet Extension (1)
- Universal Flex Joint (1)
- 10mm Socket (1)
- Flathead Screwdriver (1)
- Phillips #2 Screwdriver (1)
- T25 Torx Screwdriver (1)
- T30 Torx Driver (1)
- Flashlight (1)



PARTS:

• Headlight Bulb (1)

To reassemble your device, follow these instructions in reverse order.