




HP Envy m6-k022dx CPU Fan Replacement

This will help you to replace the fan.

Written By: Jibreel Campbell

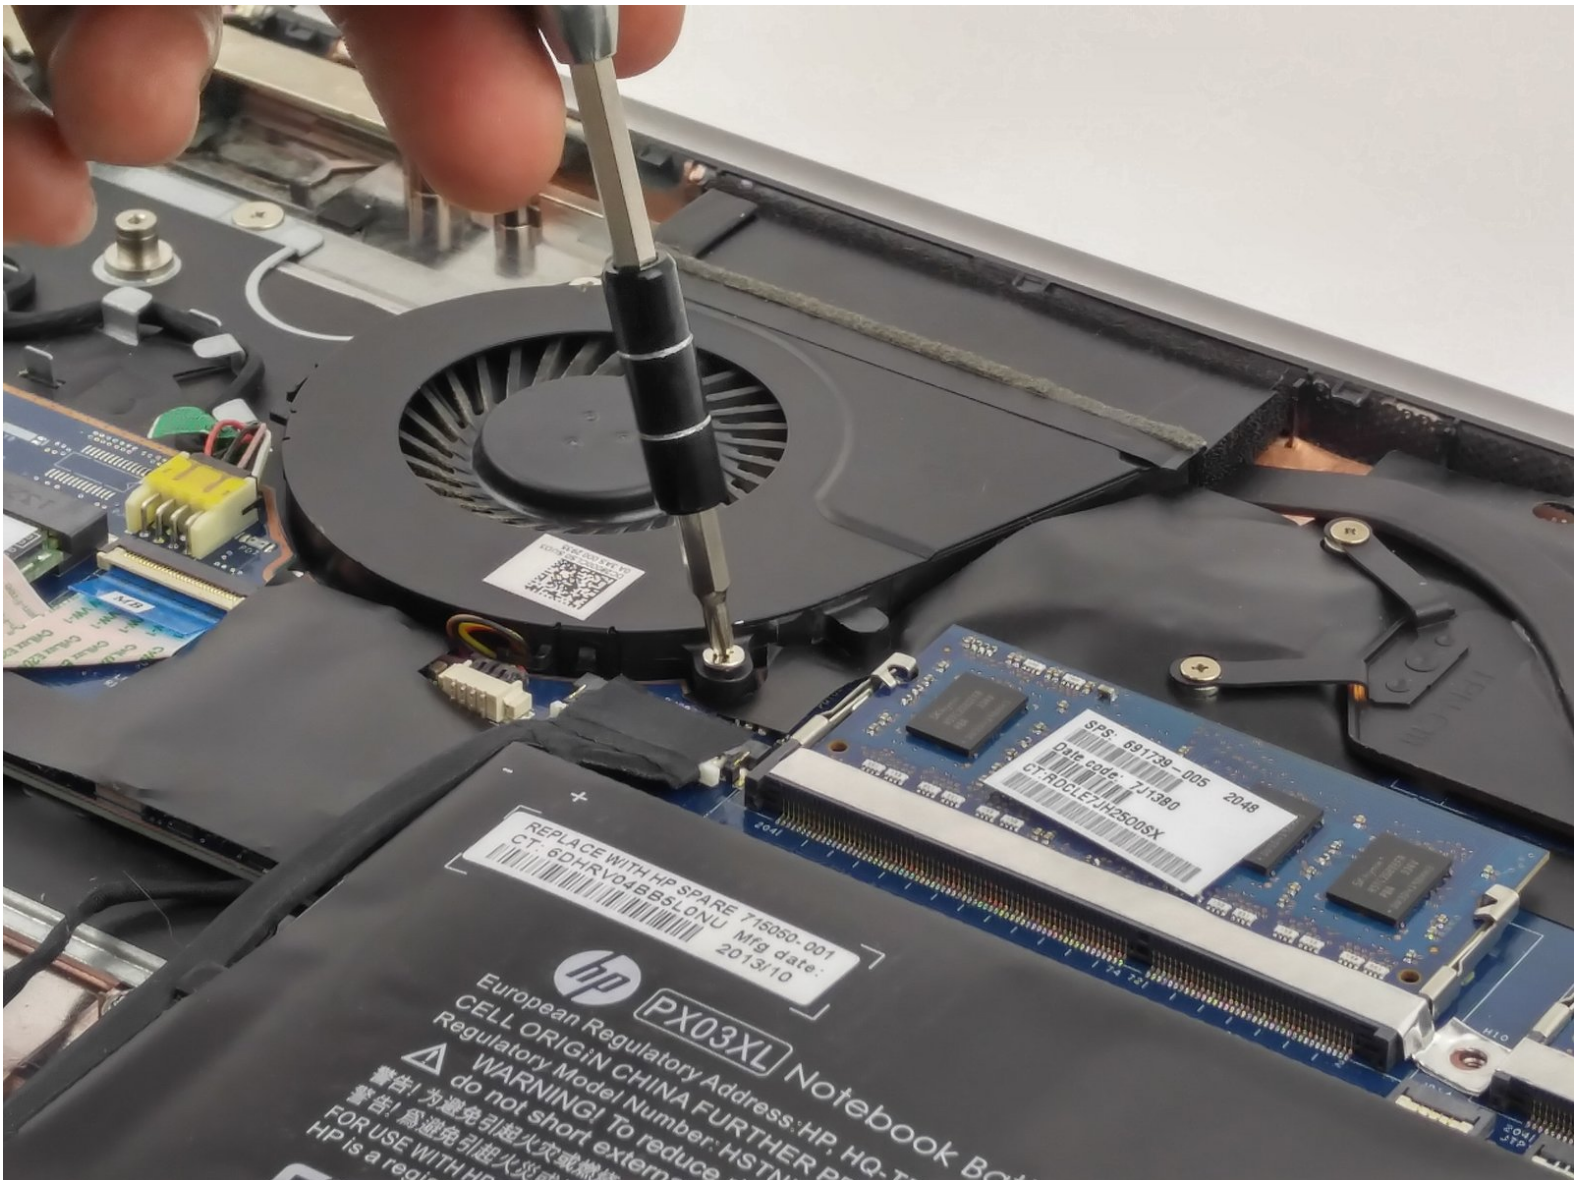



TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Lower Case




- There are 12 phillips head screws which need to be unscrewed before removing the backplate of the laptop.

Step 2



- Next, use a size PH1 Philips head screw driver to remove the screws.

Step 3

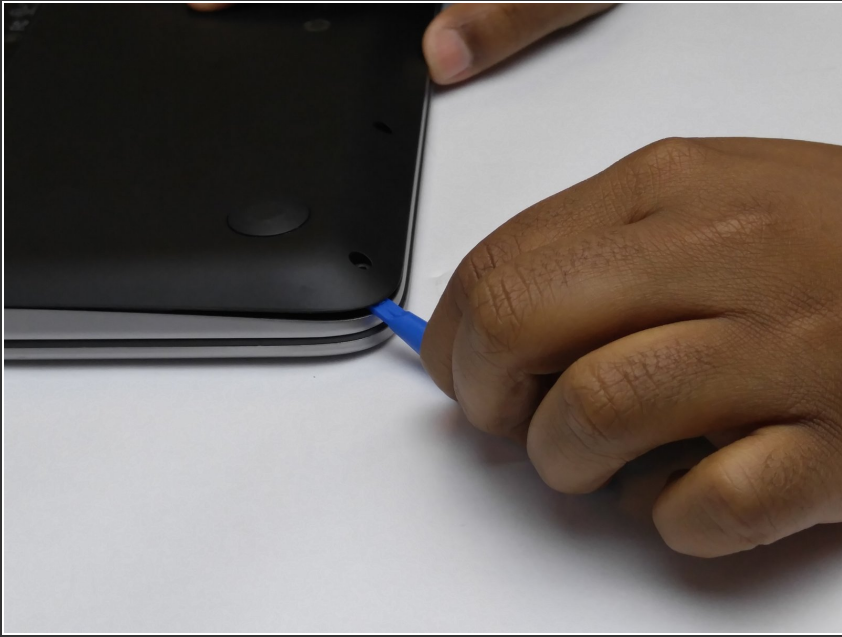


- Then, use a prying tool to help uncouple the backplate.

Step 4




- Finally, use both hands to lift up and take off the back plate of the computer.

Step 5 — CPU Fan

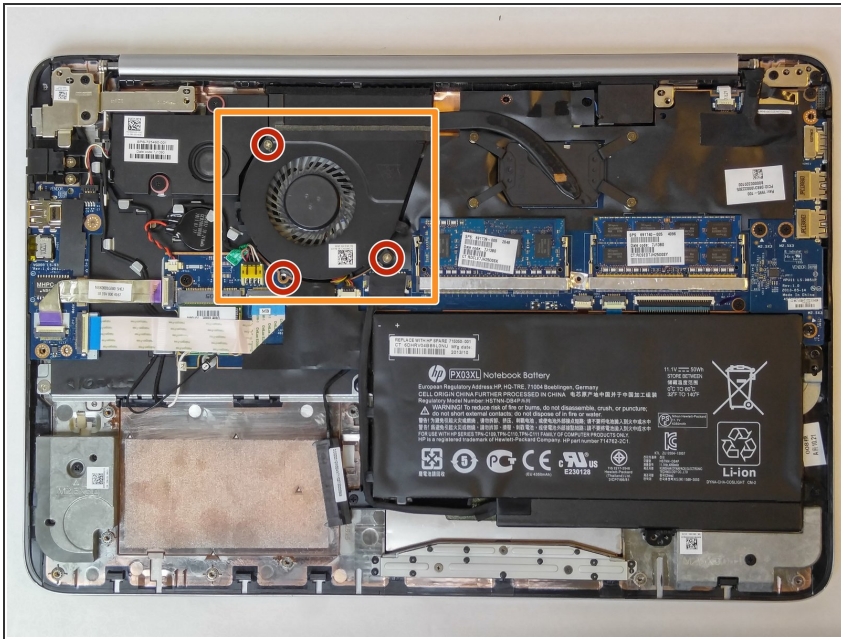

- The fan is located here. You will need to remove three screws in order to lift the fan out from the motherboard.
- You will need a Phillips 00 size screwdriver to remove the screws.

Step 6

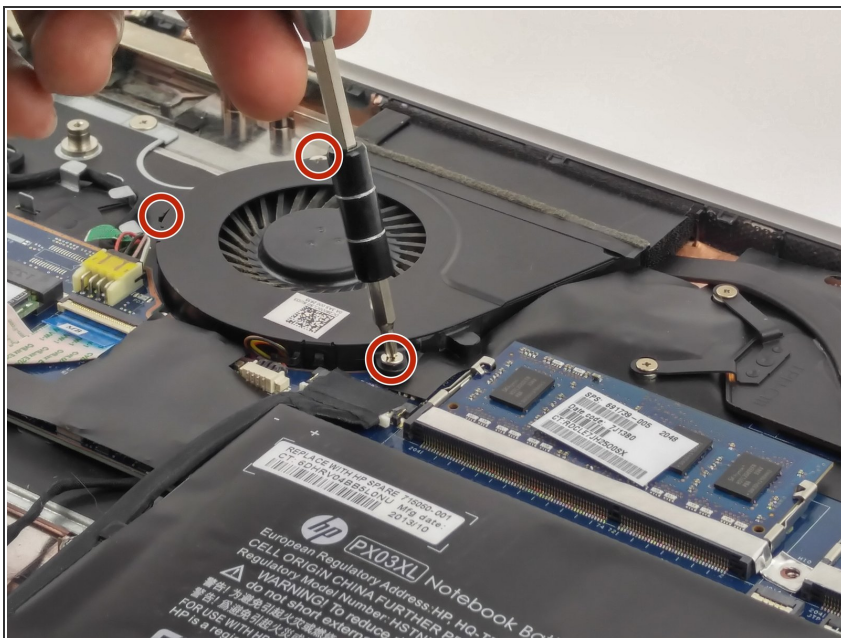

- Use your screwdriver to remove the three screws connecting the fan to the motherboard.

Step 7



- Grab the fan with your hand, and lift up and away from the motherboard.

Step 8



- Grab the fan power connector by the wires and pull directly away from port until the cable is disconnected.

To reassemble your device, follow these instructions in reverse order.