



# Dyson Ball Animal Brushbar Replacement

This guide will aid in removal of the brushbar in order to fix issues with picking things up with the base of your vacuum.

Written By: Mairead Nye



# INTRODUCTION

This is a guide to removing the brush bar for replacement or cleaning.



## TOOLS:

- [T10 Torx Screwdriver](#) (1)



## PARTS:

- [Dyson DC65, DC66 and UP13 Animal Brushbar](#) (1)

## Step 1 — Brushbar




- Turn off and unplug the vacuum.

## Step 2




- Recline the vacuum on its back and position the brushbar up in the air.

### Step 3

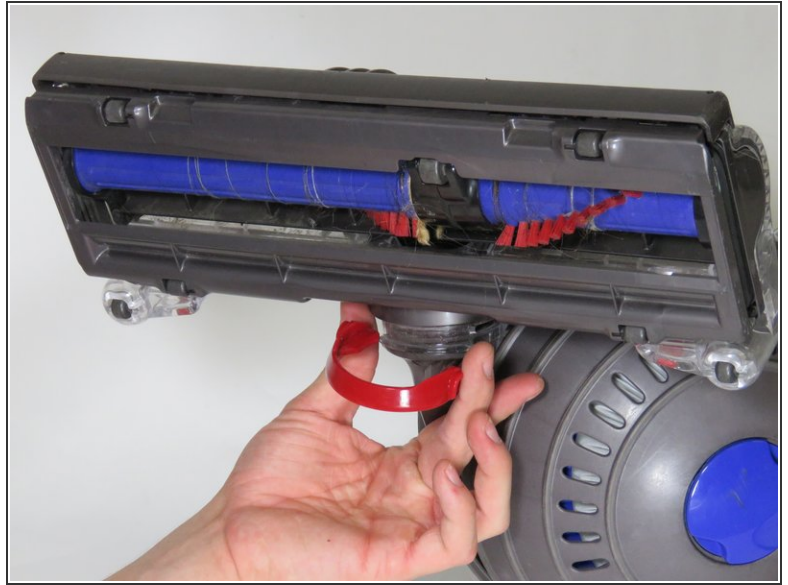

- Pull the red ring around the base of the brush head down and away from the body.


### Step 4

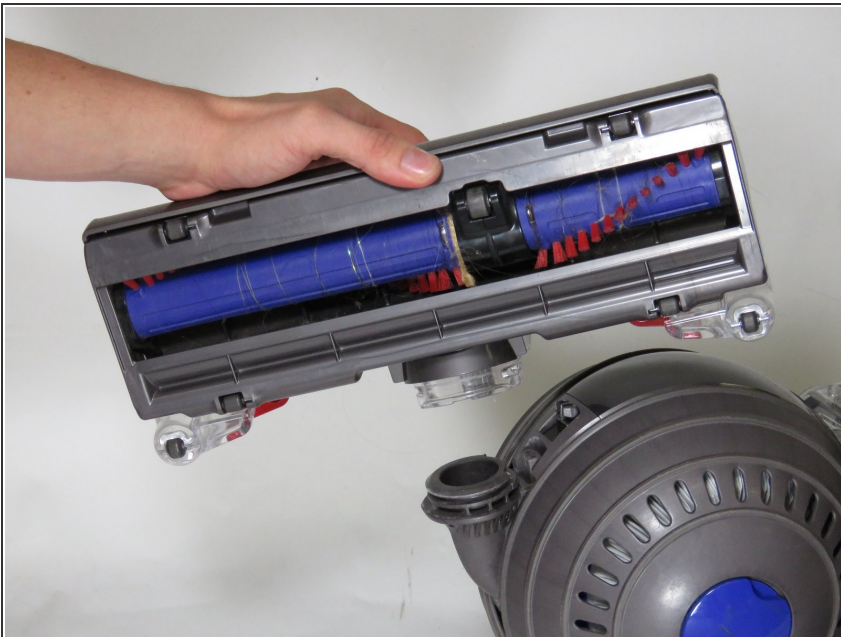

- Pull the brushbar out from the vacuum.




## Step 5

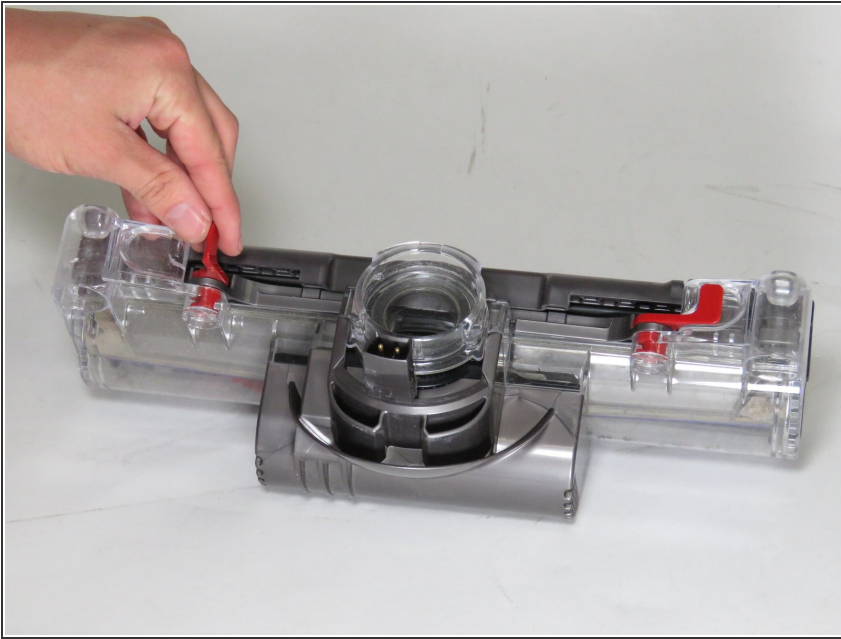




- Pull up the red tabs on the top of the brushbar.

## Step 6

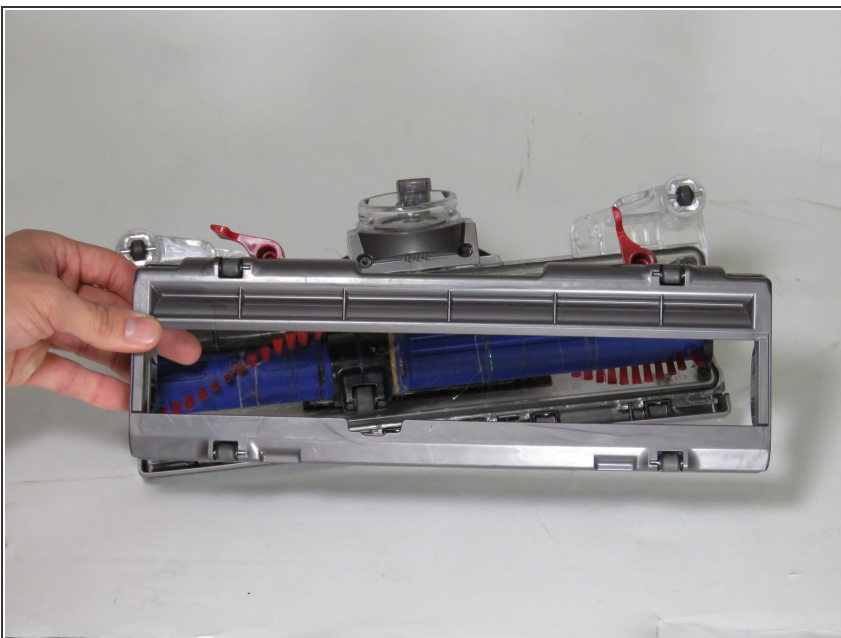



- Remove the front panel of the brushbar.

## Step 7

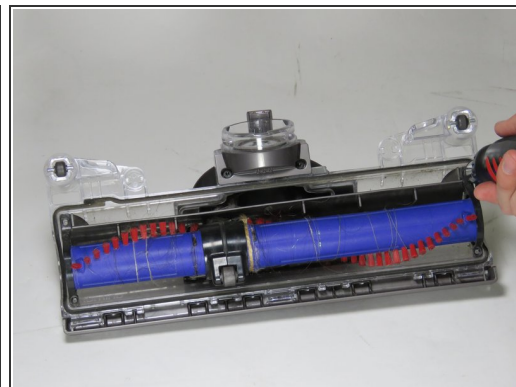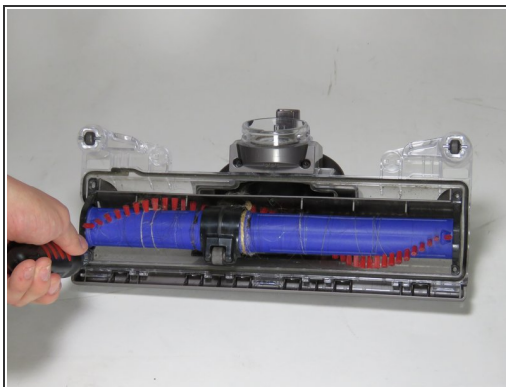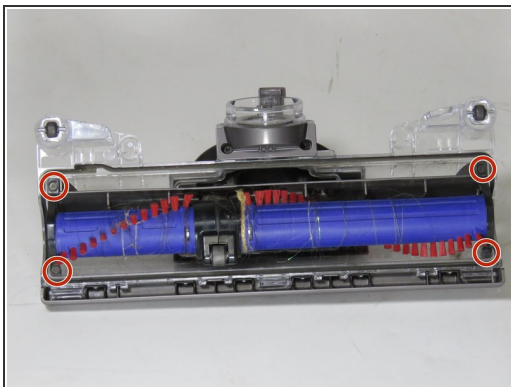

- Remove the four screws with a Torx T10 Screwdriver.

## Step 8

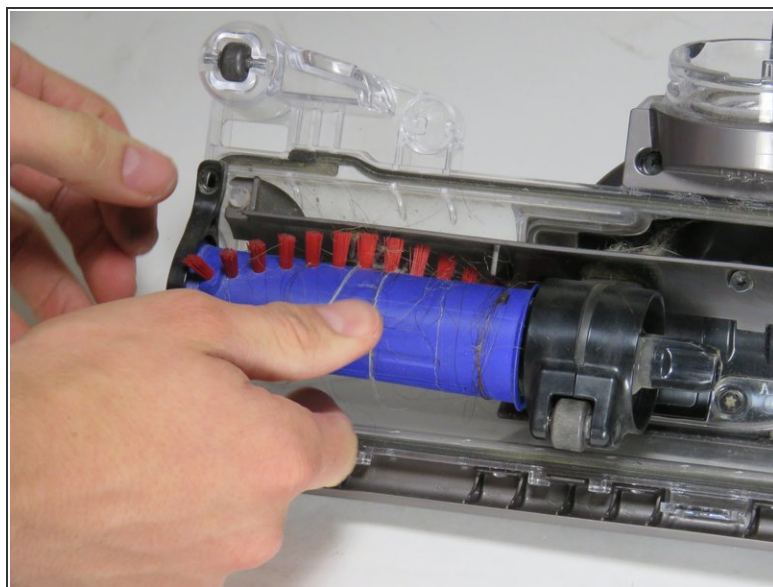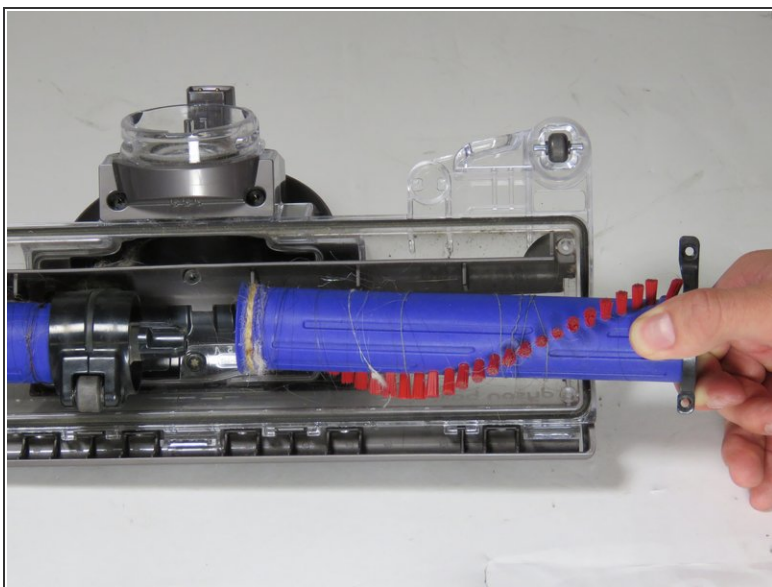

- Lift the brushbar away from the housing while pulling it out to the side.

**i** This may take some force and wiggling.

To reassemble your device, follow these instructions in reverse order.