



Lenovo ThinkPad Yoga 14 20FY Battery Replacement

This guide explains how to easily and safely locate and remove the battery from your Lenovo Thinkpad Yoga.

Written By: Jacob Singer



INTRODUCTION


This guide explains how to safely remove the battery from your Lenovo Thinkpad Yoga 14 20FY.



TOOLS:

- [Mako Driver Kit - 64 Precision Bits](#) (1)
-

Step 1 — Back Cover

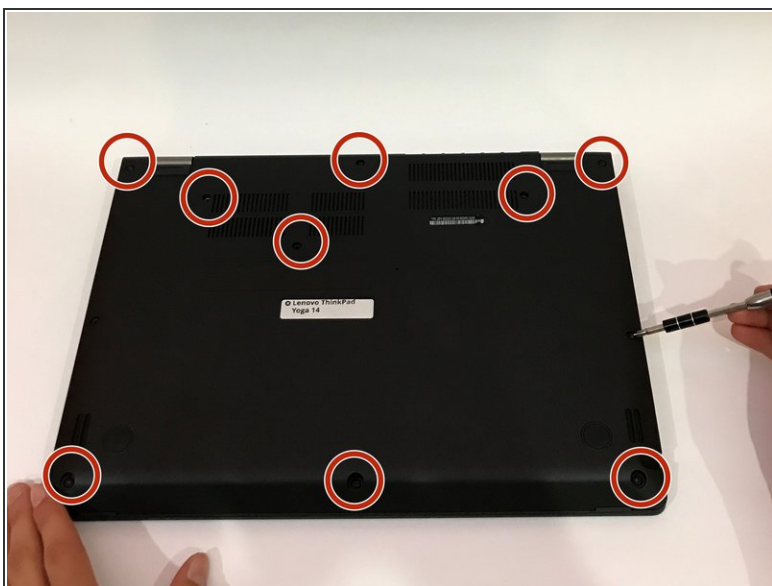

- Remove the indicated nine M2 x 6 mm nylon-coated screws using a Phillips head screwdriver.

i The screws do not come all the way out. Do not force them out.

Step 2



- After removing all of the screws, gently lift up on all covers to remove the back plate and reveal the interior of the device.

Step 3 — Battery



- Locate the battery of the laptop.

Step 4



- To remove the battery, use a Phillips head screwdriver to unscrew four screws. They are located at the four corners.

- ## Step 6



- To reassemble your device, follow these instructions in reverse order.

