



LG G Pad X 8.0 Speaker Replacement

How to replace a blown out or dead speaker for LG G Pad X 8.0.

Written By: Calvin Hodgson



INTRODUCTION

This guide will take you through the very easy process of replacing the downward facing speaker that has either died or blown out.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

#00



PARTS:


- [LG G Pad X 8.0 Speaker](#) (1)

Step 1 — Removing Backplate



- Power off the device before starting speaker replacement.
- Remove SD card and SIM Card.
- With the opening tool, gently pry the back plate away from the main board. The corners are the easiest spots to start at.


Step 2 — Peeling Back Cover Off

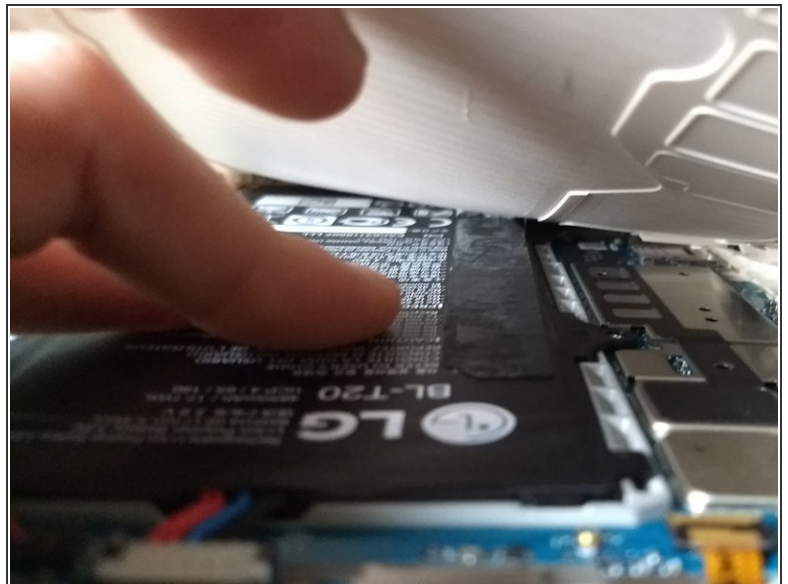

- Gently pull the back cover away from the adhesive on the battery.

⚠ It may be possible to use a blow dryer on low heat but I'd advise against it unless absolutely necessary.

Step 3

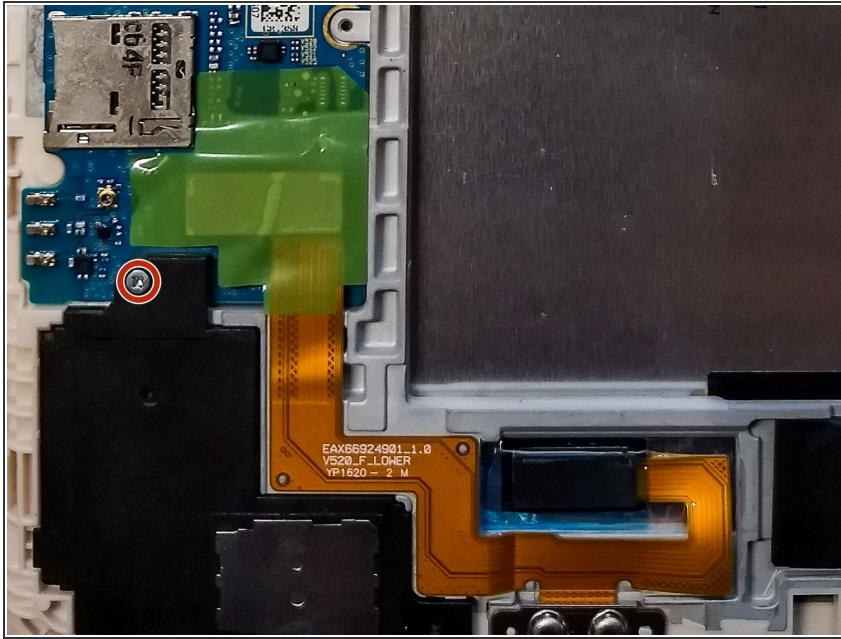

- Remove the the single screw attaching the speaker module to the motherboard.
- Swap in your new, working speaker.

To reassemble your device, follow these instructions in reverse order.