


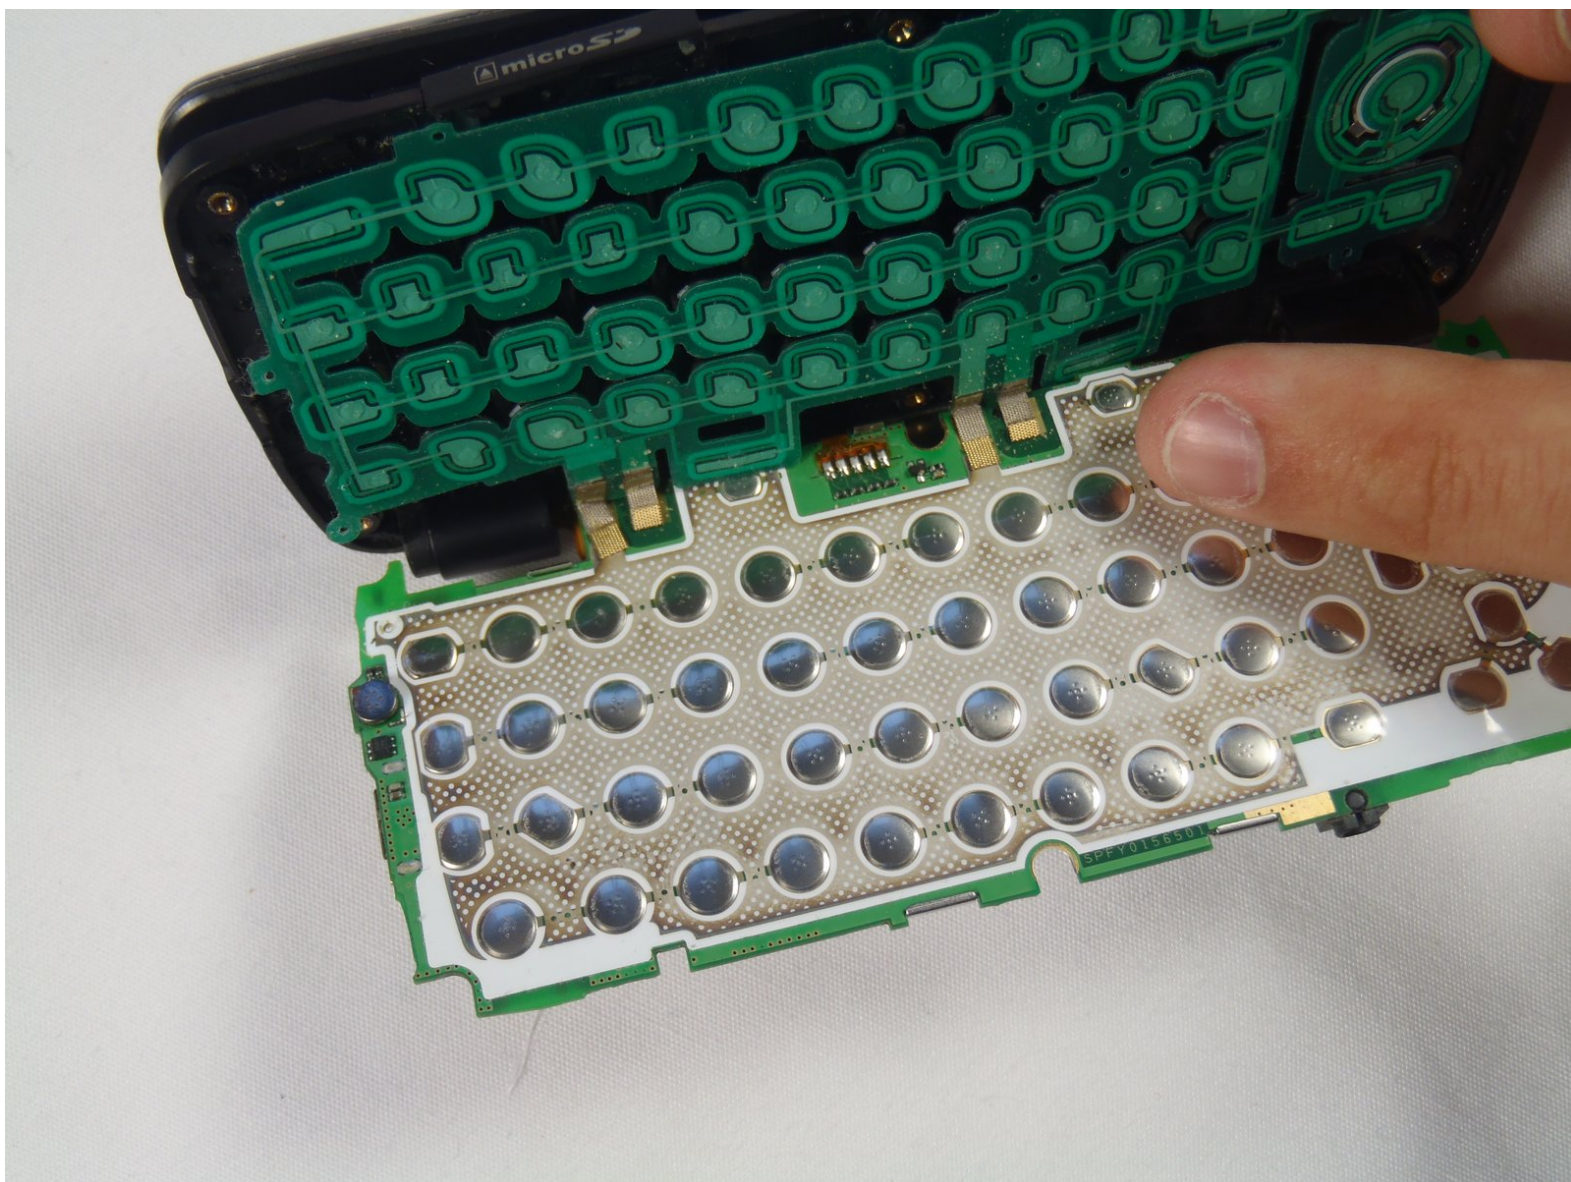

LG Voyager Keyboard Replacement

This guide will show you how to remove the phone's keyboard.

Written By: Lance Collins





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn over the phone so the front screen is facing down and the back side is up.

Step 2



- Pull down on the button at the bottom of the phone. The battery will pop up and can then be safely removed.

Step 3




- To install the new battery, position the battery so that the three small metal contacts of the battery are facing the three metal contacts of the phone
- Insert the top of the battery, with the two plastic tabs, into their respective holes in the top
- Then press down on the bottom of the battery and it should snap into place

Step 4 — Keyboard



- First remove the rubber stoppers covering the screws on the back of the phone by prying them up and away from the phone.

Step 5

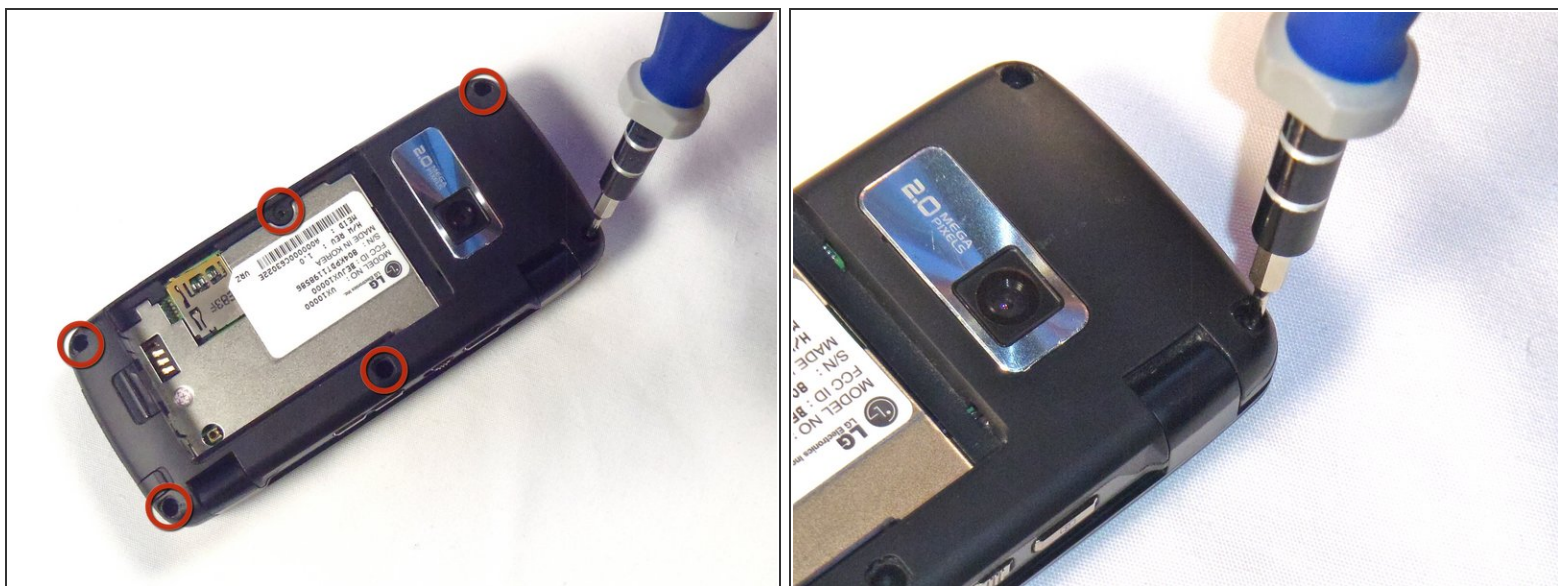



- Remove the 3.61mm length, Phillips screws from the back of the phone using the #00 screwdriver.

Step 6



- Now pry open the back of the phone.
- ⓘ Make sure that you use the plastic opening tool to go around the entire phone to help open the phone.


Step 7

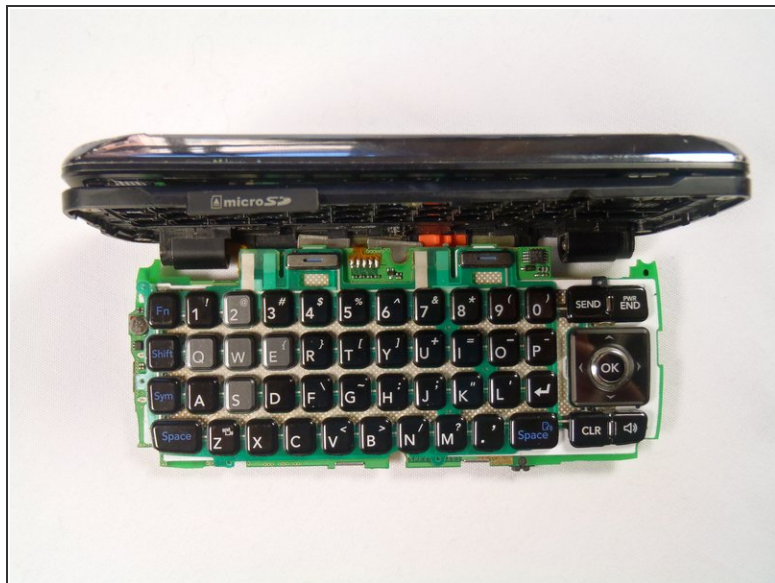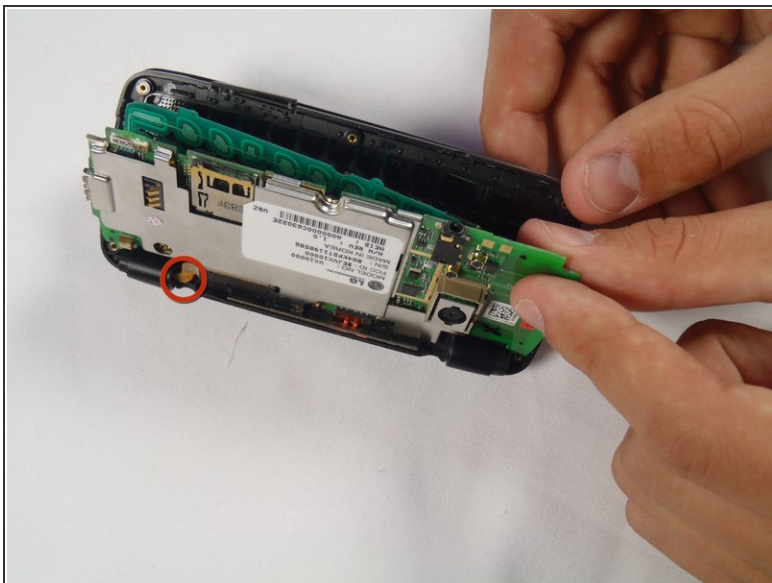

- Carefully separate the keyboard from the top of the phone.

⚠ Be careful not to break the ribbon cable.

Step 8

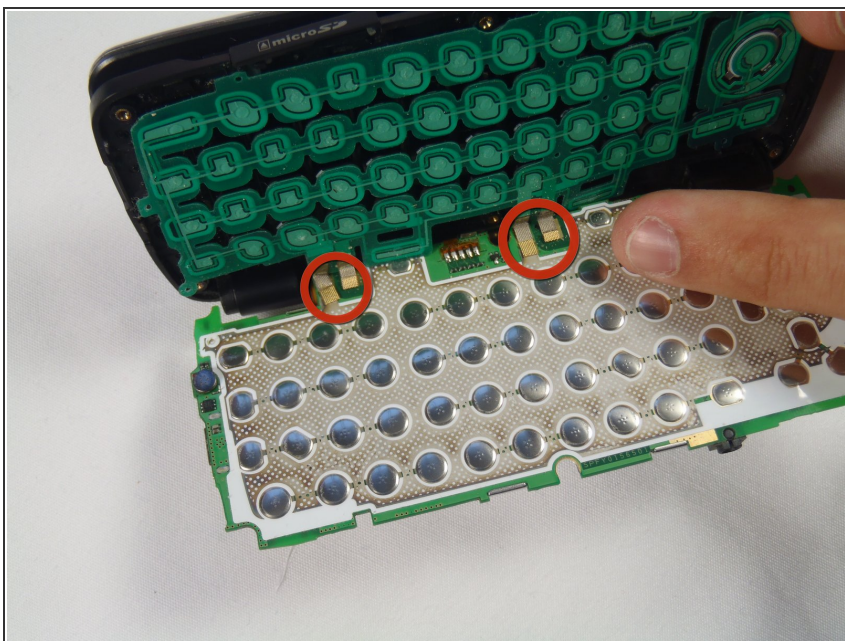

- Detach the keyboard from the phone by taking off the little metal latches.
- ⓘ When replacing the old keyboard with a new one you will have to solder the metal latches to the new board.

To reassemble your device, follow these instructions in reverse order.