


2009-2015 Toyota Prius Spark Plug Replacement

A video tutorial on how to change the spark plugs on a 2009-2015 Toyota Prius.

Written By: eCuration

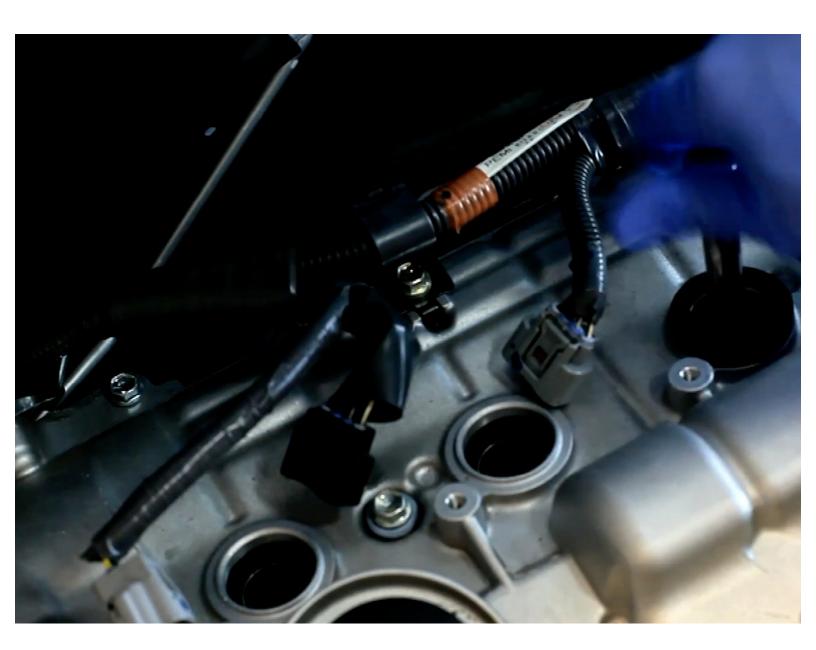

This document was generated on 2020-11-28 05:23:42 AM (MST).

INTRODUCTION

The recommended interval to change the spark plugs on a Prius is 120,000 miles.

Follow the video tutorial by YouTuber NutzAboutBolts to complete the swap yourself.



TOOLS:

- 3/8" Drive Ratchet (1)
- 14 mm socket (1)
- 10mm Socket (1)
- Spark Plug Socket (1)
- Flathead Screwdriver (1)
- Large Needle Nose Pliers (1)
- Anti-Seize Lubricant (1)
- Dielectric Grease (1)
- Spark Plug Gap Gauge (1)



PARTS:

Spark Plug (4)

To reassemble your device, follow these instructions in reverse order.