



Sony XPERIA Tablet Z Speakers Replacement

This guide shows how one can replace the speakers in the Sony XPERIA Tablet Z.

Written By: Jasminh Schelkopf



INTRODUCTION

Use this guide to replace the speakers in your Sony XPERIA Tablet Z.

In this device there are two speakers each located in a bottom corners of the tablet.

This guide will take you through the process of removing the back cover, removing the retaining plate, and removing the speaker.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Sony XPERIA Tablet Z Speaker](#) (1)

Step 1 — Speakers




- Place the plastic opening tool in the corner of the device.

Step 2



- Slide the plastic opening tool along the edge of the device removing the adhesive.

Step 3

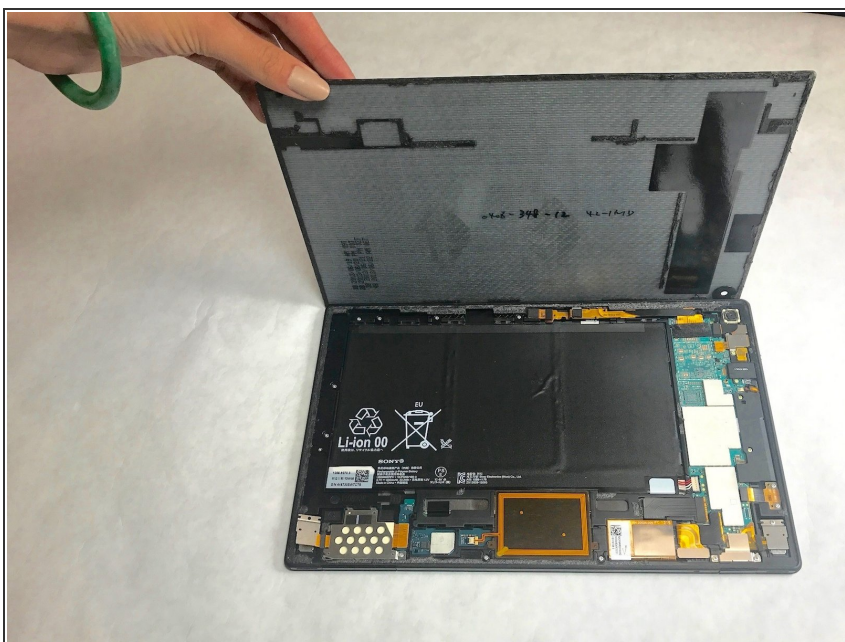

- Remove the back cover.
- Clean the adhesive off the inside perimeter of the device.

Step 4



- Remove the 2.96mm long Phillips head #0 retaining screw from each speaker.
- Lift off the silver speaker retaining plate.

Step 5



- Using the plastic opening tool, gently lift the speaker out of place.

To reassemble your device, follow these instructions in reverse order.