


MacBook Pro 17" Unibody Camera Board Assembly Replacement

Internal Prerequisite for accessing the Camera Board Assembly


Written By: Brett Hartt



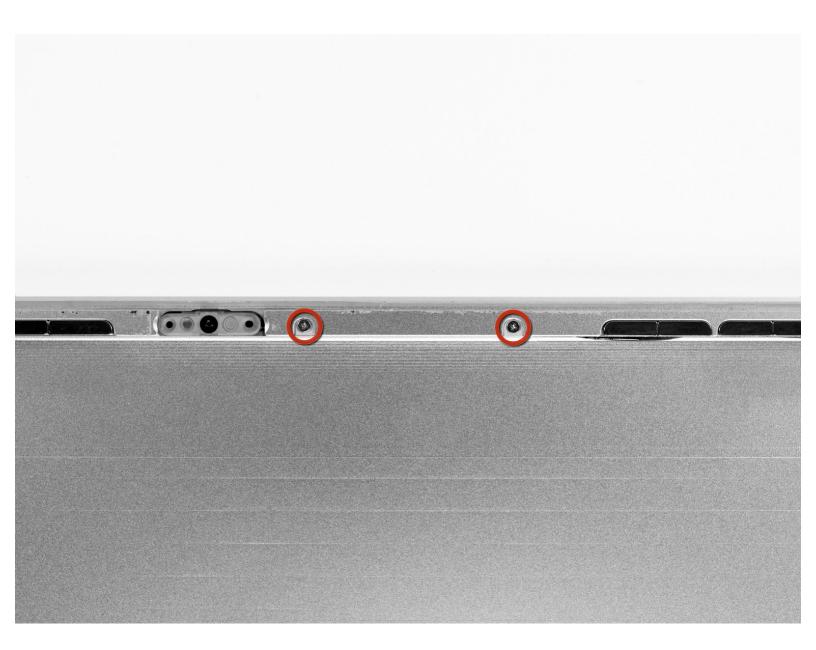


Phillips #00 Screwdriver (1)

Step 1 — Camera Board Assembly

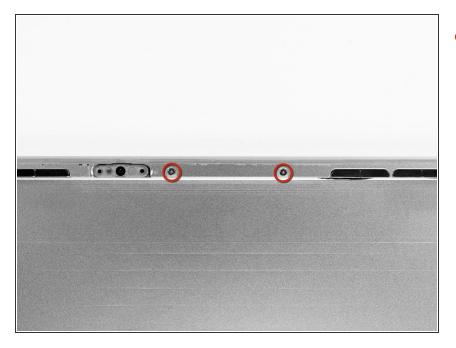

 Remove the two 2.7 mm Phillips #00 screws securing the camera board to the rear display bezel.

Step 2

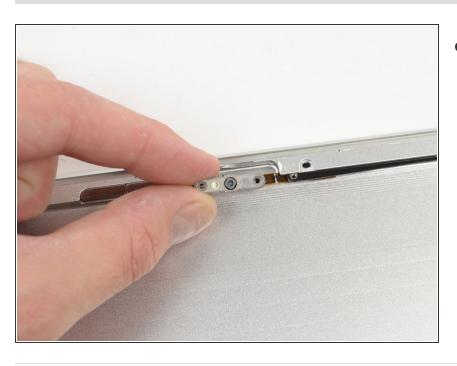

 Lift and remove the camera assembly out of the rear display bezel.

To reassemble your device, follow these instructions in reverse order.