



Brown multipractic timing belt replacement

Replacing the timing belt at Braun Küchenmaschinen.

Written By: VauWeh



INTRODUCTION

If the engine is running on your Braun food processor, but the drive shaft is not rotating anymore or just stuttering, the timing belt connecting the motor to the shaft may be damaged. He is easy to exchange.



TOOLS:

- [New Item](#) (1)



PARTS:

- [New Item](#) (1)

Step 1 — toothed belt




- Remove the stirring container.
- Turn the machine upside down

Step 2



- Sometimes the screws are hidden under the rubber feet. Then you have to pull them out.

Step 3

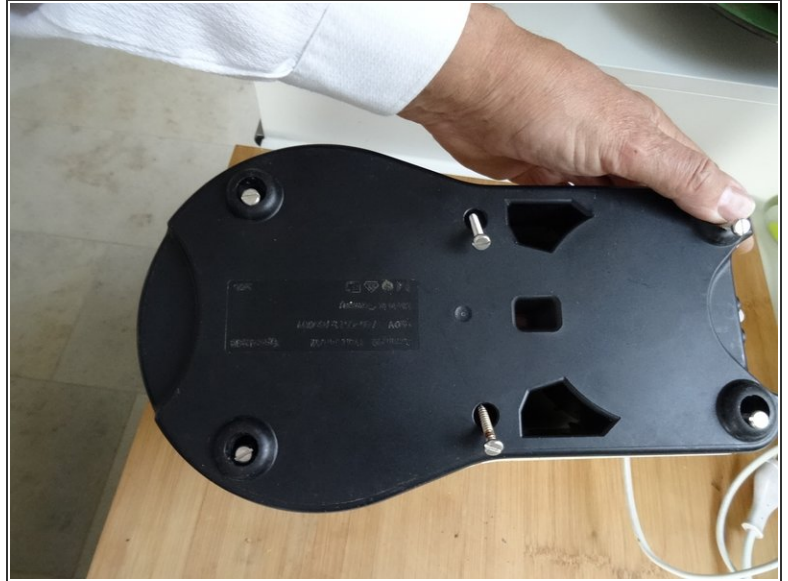

- Unscrew the screws on the bottom plate.
- Take off the bottom plate.

Step 4



- Clearly visible: the timing belt is touched!
- The timing belt size is printed. In this model multipractic it is one of the type 190 XL 037.
- With the right name it is easy to buy.

Step 5



- The new belt is laid on. First on the small drive wheel, then on the large drive wheel, sit there on one side and spin once.

Repeat the steps in reverse order to reassemble your device.