



# Asus G75VW-BHI7N07 Subwoofer Replacement

The subwoofer can wear out over time or stop working completely. This guide will show you how to remove the subwoofer on the back of the device.

Written By: Joy



This document was generated on 2020-11-28 06:01:08 AM (MST).

---

## INTRODUCTION

The subwoofer can wear out over time or stop working completely. This guide will show you how to remove the subwoofer on the back of the device.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Pro Tech Toolkit](#) (1)

*150 mm Flex Extension*

---

## Step 1 — Subwoofer




- Remove the 5 (9 mm screws) around the outside edges of the back cover with the PH1 Phillips-head screwdriver.
- Lift off the back cover using the opening tool.

## Step 2



- Remove the 10 (9 mm) screws marked 'A' using the PH1 Phillips-head screwdriver.
- Remove the battery by pressing the slide release button.
- Remove 2 more (9 mm) 'A' marked screws within the battery compartment using the PH1 Phillips-head screwdriver.

## Step 3

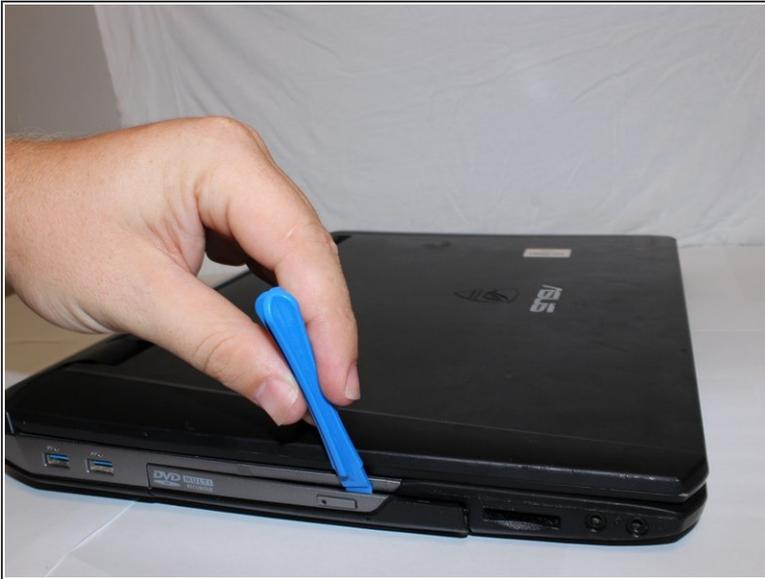


- Remove the cover for the disc drive with the opening tool.
- Remove the 6 (4 mm) 'B' marked screws with the PH1 Phillips-head screwdriver. (3 screws are in the battery compartment and 3 are under the disc drive cover)

## Step 4




- Pry open the keypad platform with the opening tool.
- You will need to lift the keypad platform with your hands to get to the subwoofer.

## Step 5

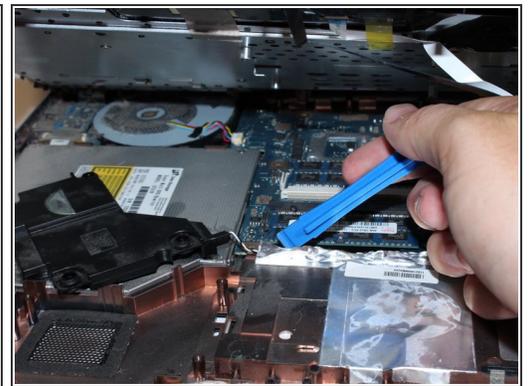

- Remove the 4 screws (6 mm) around the subwoofer with the flex extension J0 Phillips-head screwdriver.
- Lift the subwoofer out using your hands.
- Move back the film covering wiring using the opening tool to reveal a white-and-black wire.

## Step 6

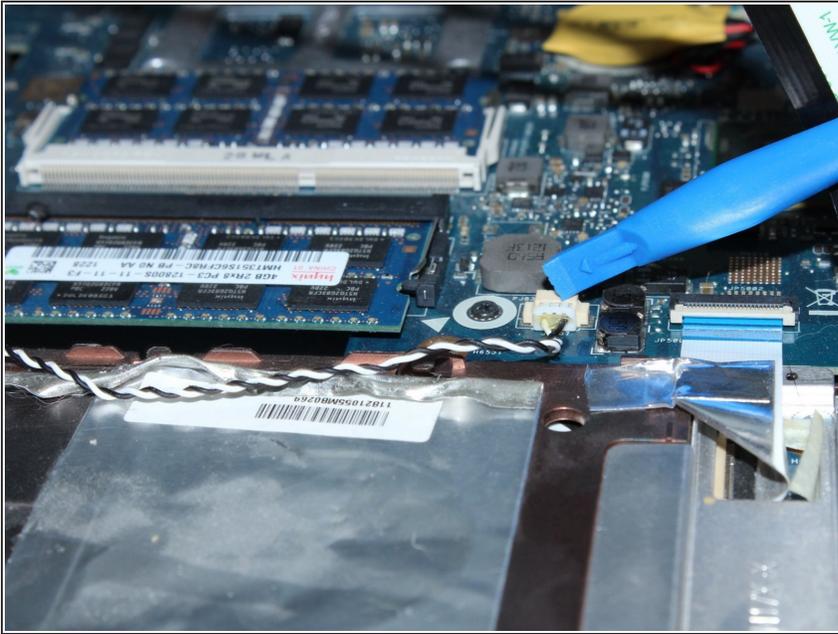

- Use the small spudger to unplug the white-and-black wire.

To reassemble your device, follow these instructions in reverse order.