




How to Wipe All Data from a Samsung Galaxy S6

This guide will show you how to remove all personal data and applications from your Galaxy S6 and restore all settings to their factory defaults.

Written By: Homeboy Recycling




Step 1 — Select Apps

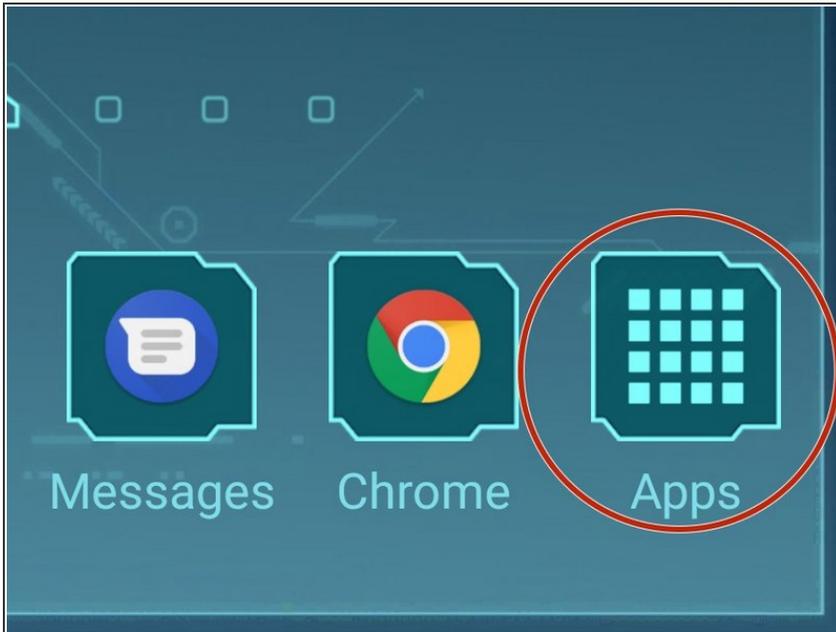


- The Apps icon is usually on your phone's main page.

Step 2 — Select Settings

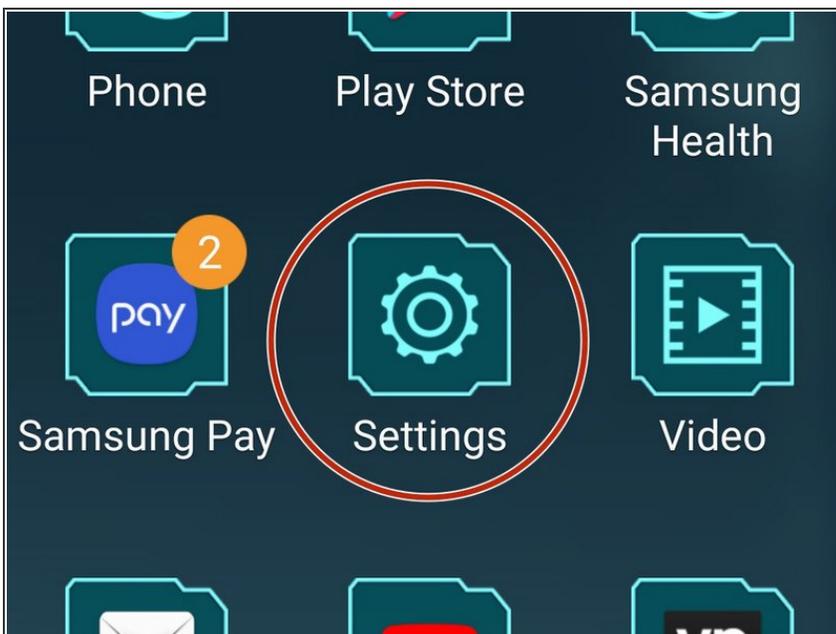


- You will probably have several pages of apps. The default ones come first, ordered alphabetically.

Step 3 — Select General management

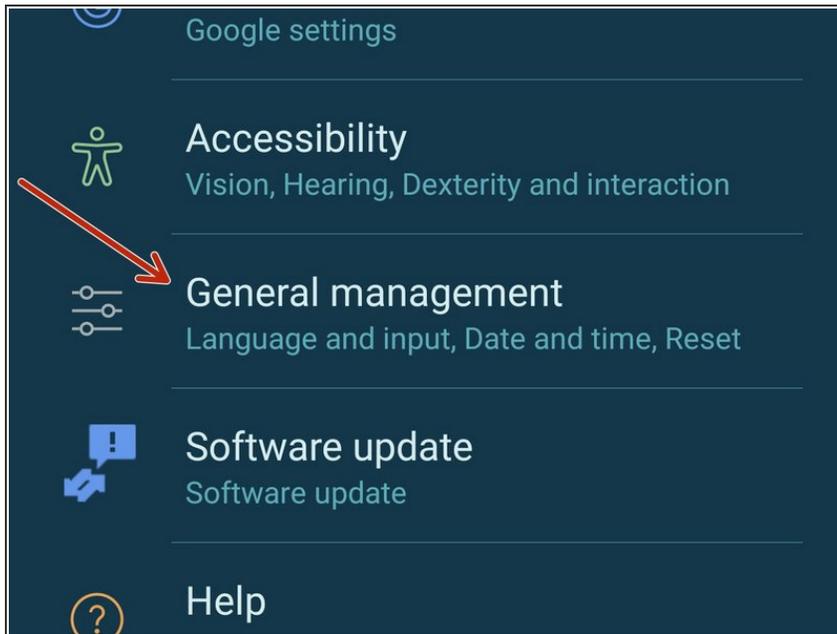

- You may have to scroll down to find this entry.

Step 4 — Select Reset

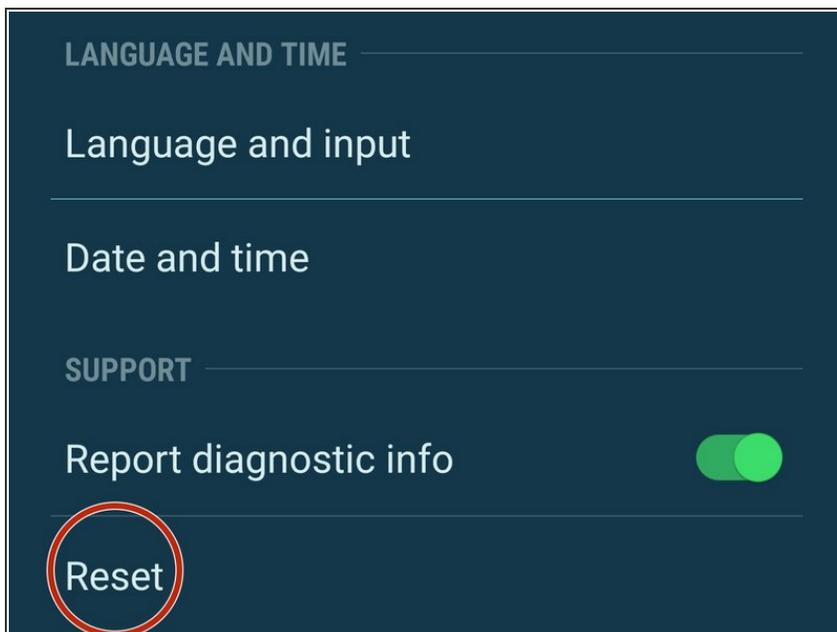

- You can safely select this without endangering your data - more options are ahead.

Step 5 — Select Factory data reset

RESET

Reset settings

Reset all settings to their defaults.

Reset network settings

Reset Wi-Fi, Bluetooth, and other network settings to their defaults.



Factory data reset

Reset your device to its factory default settings. This will erase all data, including files and downloaded apps.

- Please note that there is no going back from this. Make sure you've saved anything you might want before performing the reset.

Your device is now wiped of all personal data and apps, and restored to its factory default settings.