



# HP 15-AF131DX Battery Replacement

This guide will explain how to replace the battery of your laptop.

Written By: Austin Baird



---

## INTRODUCTION


Make sure the computer is completely powered off and unplugged. Disconnect the power from the computer by unplugging the power cord from the computer. Disconnect all external devices from the computer.

---

### TOOLS:

- [Fingers](#) (1)
-

## Step 1 — Battery

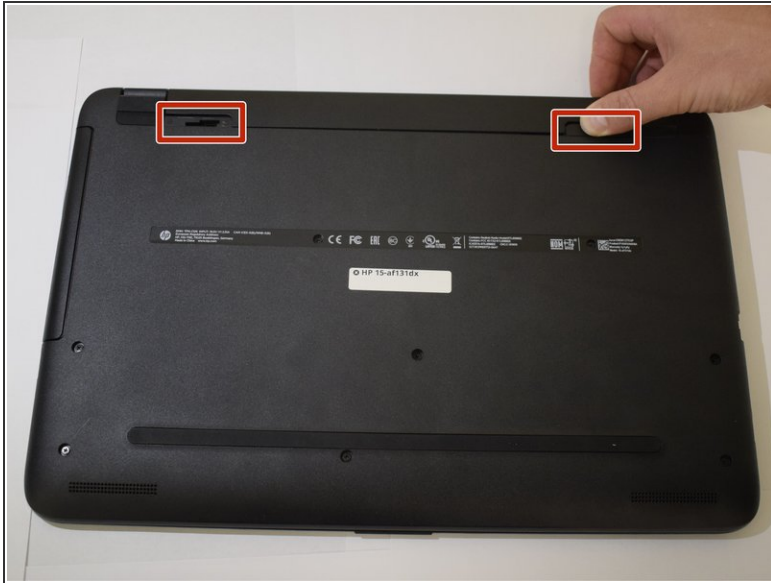

- Turn the computer upside down on a level surface.
  - *Slide the battery lock* to unlock the battery.
  - *Slide the battery release latch*. The latch will click when the battery is released.
  - *Lift the battery* from the middle to remove it from the computer.
- ☑ The latch will click again when a battery is reinstalled. Switch the battery lock back to locked after reinstalling a battery to keep it secure.

To reassemble your device, follow these instructions in reverse order.