



# Asus MeMO Pad 7 ME176C Battery Replacement

Guide showing step by step how to replace the battery for Asus MeMO Pad 7 ME176C

Written By: Benjamin von Furstenrecht



# INTRODUCTION

Follow this guide step-by-step in case you need to change the battery for your Asus MeMO Pad 7 ME176C.



## TOOLS:



- [iFixit Opening Tools](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Battery Replacement



- ⚠ Make sure the device is turned off.
- Use a plastic opening tool to remove the back panel by carefully moving the tool around the back cover of the device until it comes off.


## Step 2

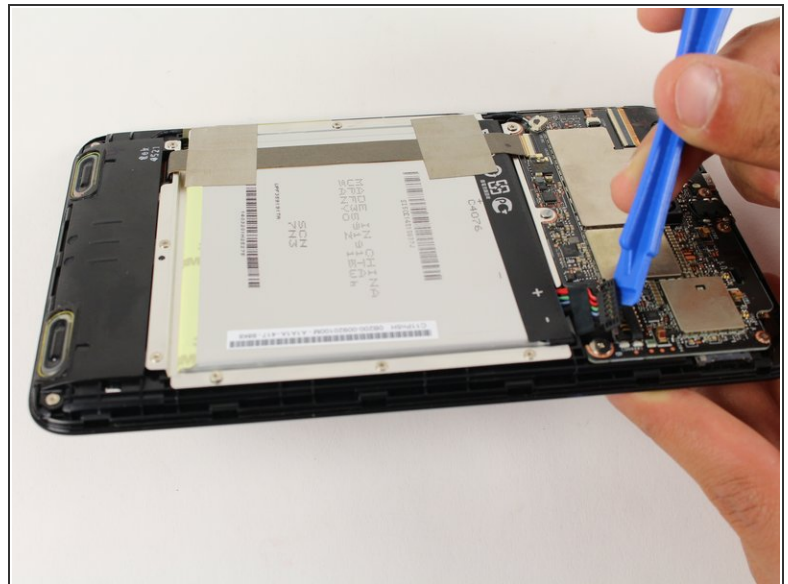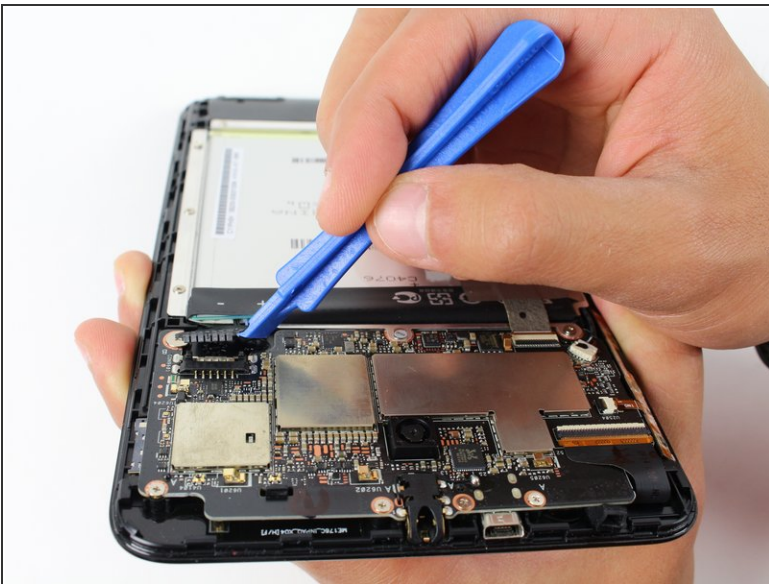

- Locate the black bundle connector on the back of the device. Gently slide the plastic tool underneath the black bundle cable connector towards the battery until it comes off.




### Step 3

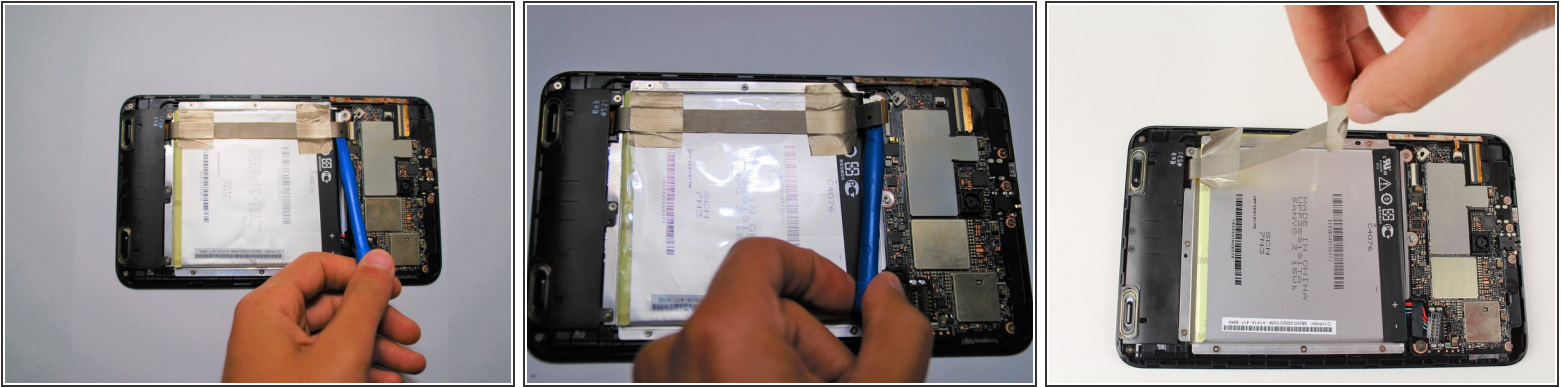

- Using the plastic opener tool, carefully remove the ZIF connectors that is covering the battery.

### Step 4

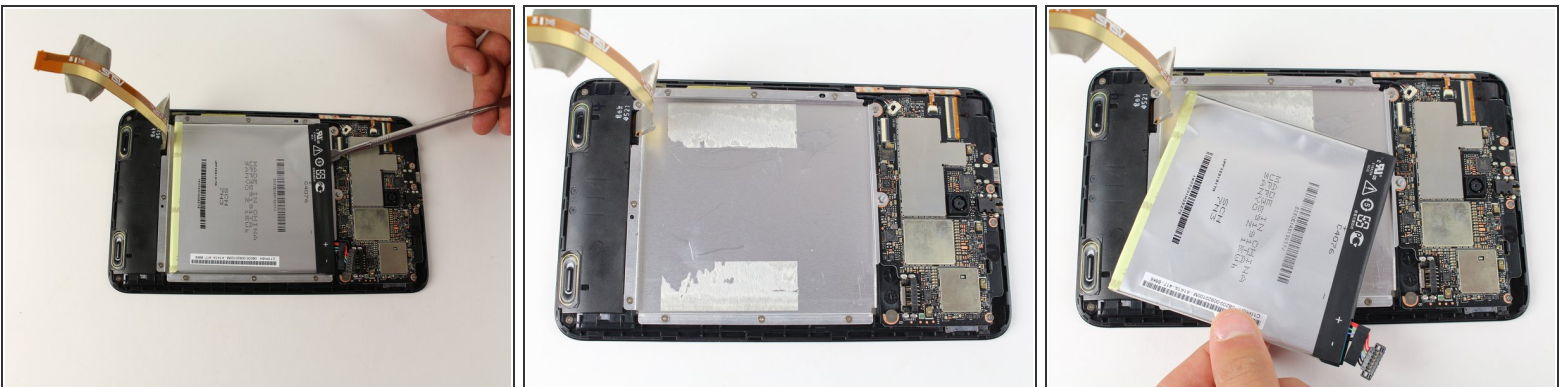

- Wedge the flat end of a spudger or plastic opening tool under the battery to free the battery from any adhesives.

 Do not bend or puncture the battery.

To reassemble your device, follow these instructions in reverse order.