



Bissell SpotBot Pet Control Panel Replacement

This is a guide on how to replace the spiral brushing system on a bissell spotbot pet. Use this if your spiral brushing system is not working properly.

Written By: Anthony Bonvino



INTRODUCTION

This is a guide on how to replace the spiral brushing system on a bissell spotbot pet. Use this if your spiral brushing system is not working properly.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Control Panel



- Start here.

Step 2



- Remove the container on the right side of the vacuum.

Step 3



- Lift the tap on top of the vacuum, and then remove the container on the left side of the vacuum.

Step 4



- Remove the left container of the vacuum.

Step 5




- Remove the four screws on the top of the device.

Step 6




- Lift the top of the device off once the screws are removed.

Step 7

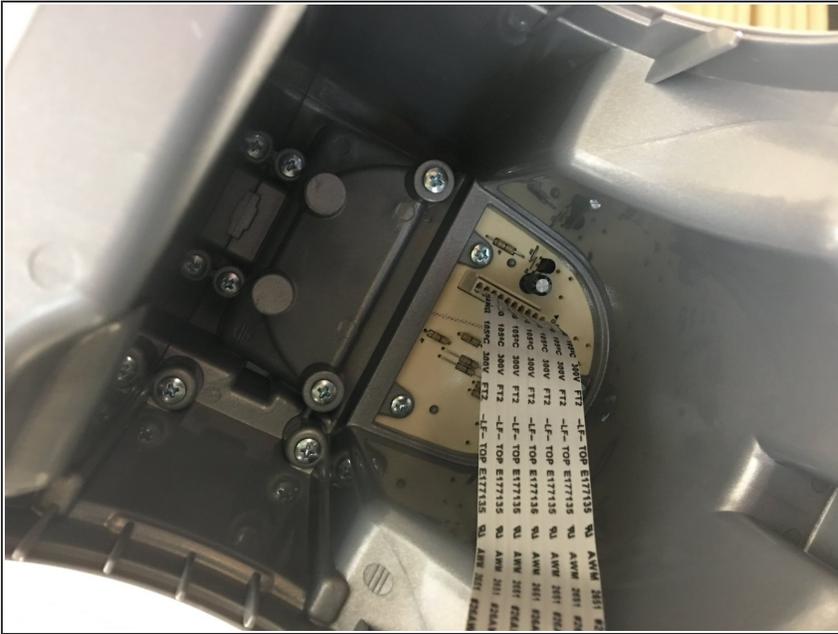



- Unplug the ribbon cable from the motherboard.

Step 8

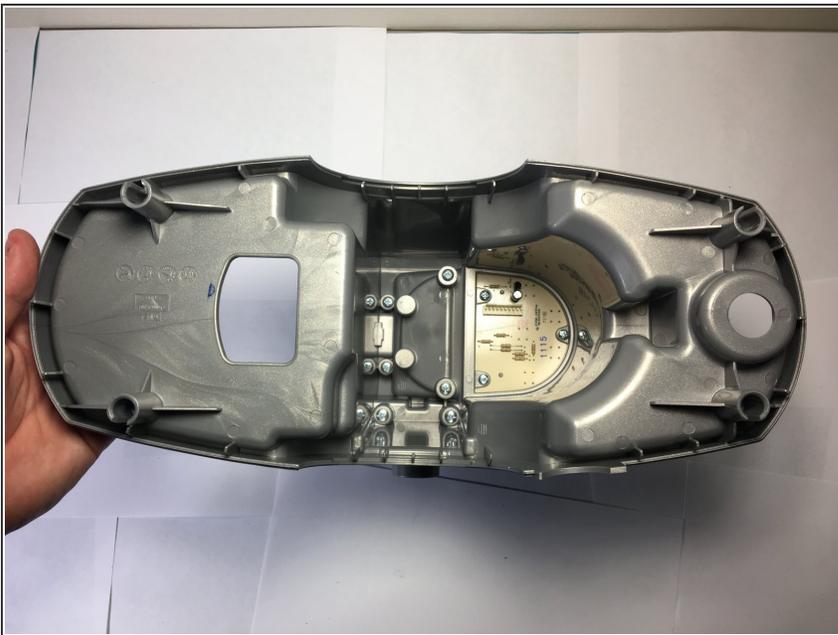


- Separate the top piece and flip it upside down.

Step 9

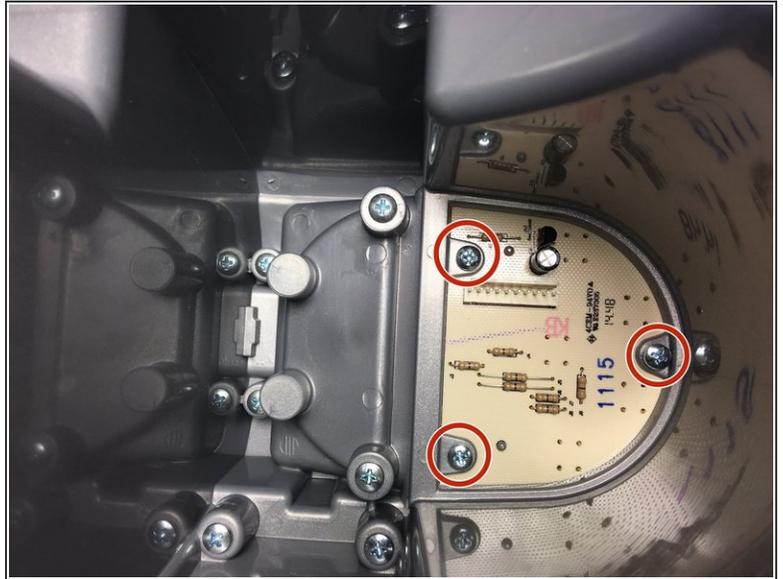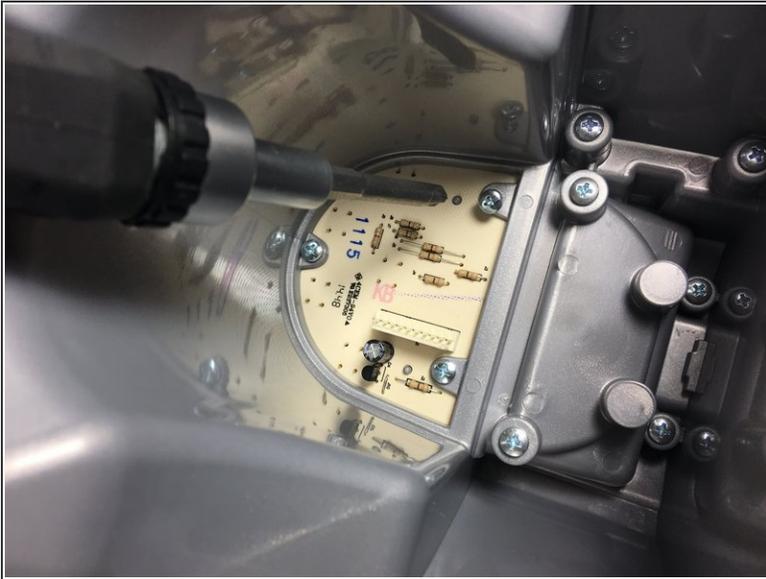

- Remove the screws holding the motherboard in place.

Step 10

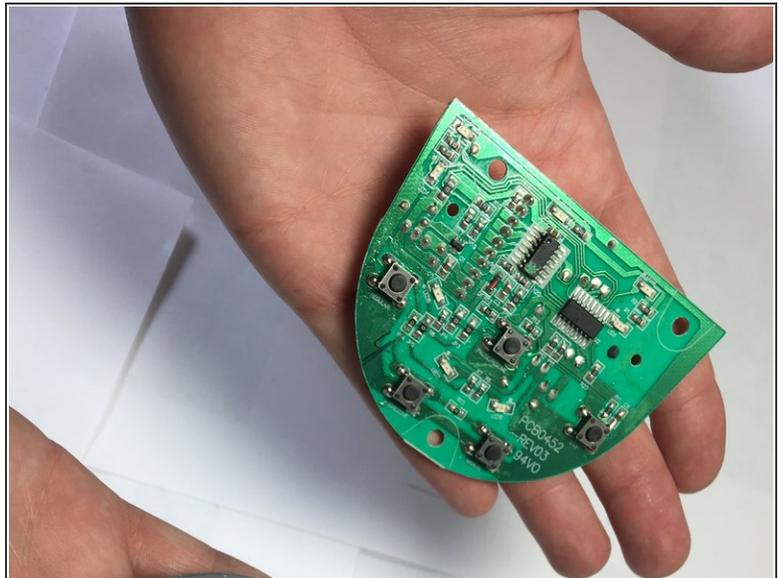

- Remove the motherboard from the top piece. Repair or replace the motherboard if it is faulty.

To reassemble your device, follow these instructions in reverse order.