


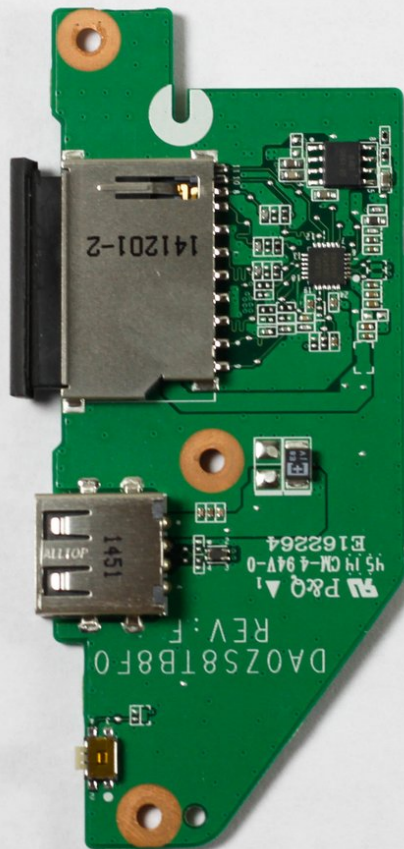

Acer Aspire R7-371T-72CF USB Chip Replacement

Use this guide to replace a USB Chip in your Acer Aspire R7-371T-72CF.

Written By: Dylan Meintser



INTRODUCTION

This guide will show you the steps that need to be taken to replace a faulty USB chip.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — USB Chip




- Turn off your laptop and disconnect the power adapter.
- Locate and remove all 12 Phillips #00 6mm screws on the backside of the laptop.

Step 2



- Using your prying tool, carefully remove the back panel.

Step 3

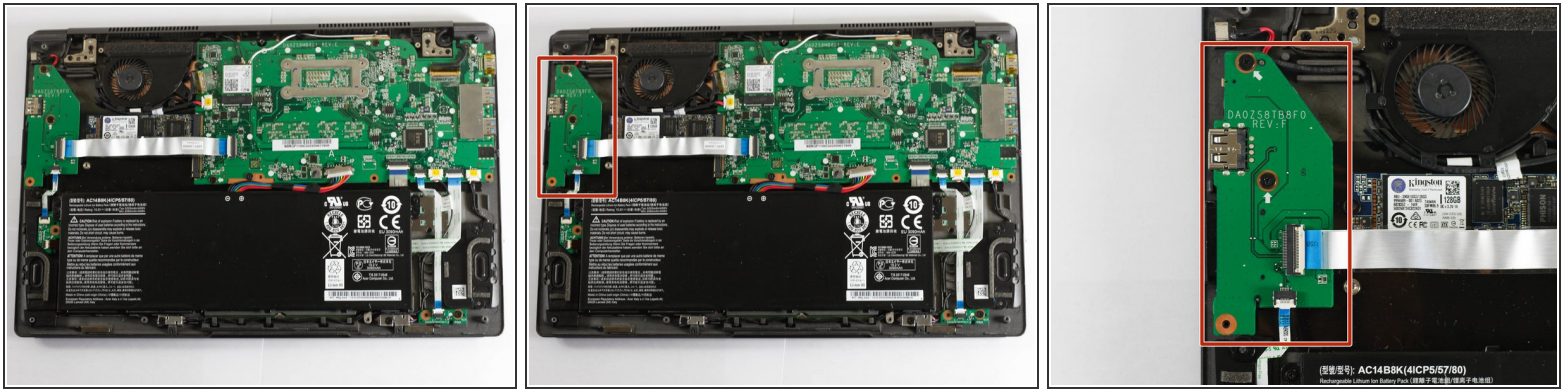

- Locate the USB chip, as shown to the left.


i This can be identified by its location to the left of the cooling fan and above the battery to the left.

Step 4



- Unscrew the two Phillips #00 4mm screws located on the USB chip.

Step 5

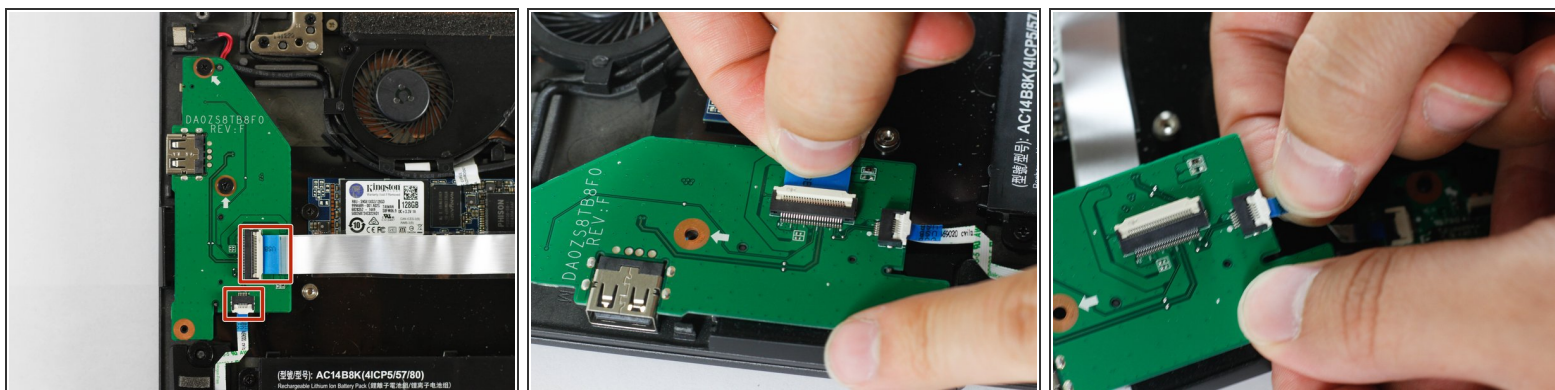

- Push the white panel upwards to unlock the cable and then remove the cable.
- Repeat for the second cable.

To reassemble your device, follow these instructions in reverse order.