



HP Pavilion Wave 600-a014 Front IO Board Replacement

These list of instructions will guide you on how to replace the front IO panel.

Written By: Cristian Vanegas



INTRODUCTION

This guide will walk you through how to replace the front IO Board for the HP Pavilion Wave 600. A pry tool and a Philips screwdriver will be needed to replace this part. Ensure that the device is disconnected from the power source and all other devices are disconnected from the computer.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:

- [Front IO Board](#) (1)

Step 1 — Front IO Board

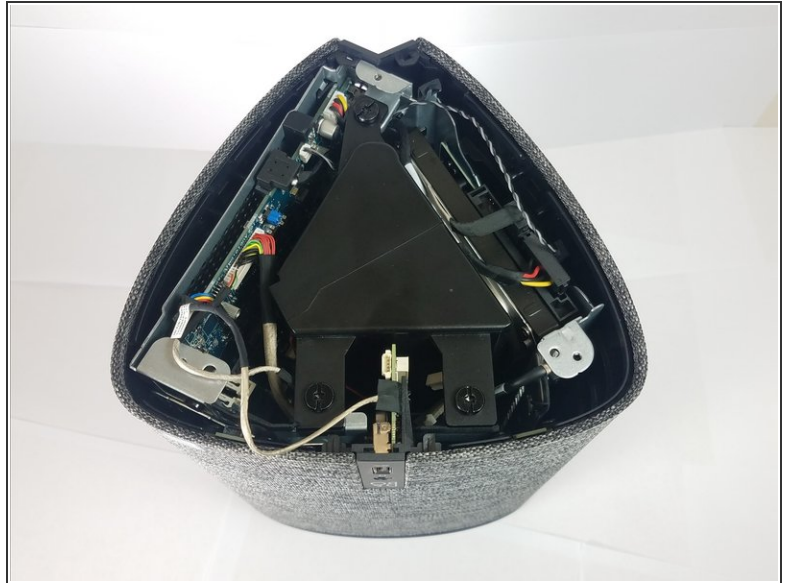



- Turn over the computer and remove the rubber feet.
- Remove the 8mm Philips screws indicated in red circles with a Philips #0 screwdriver.
- Use a pry tool and lift the lid.

Step 2



- Pry open the casing from the back of the IO panel, as shown in the pictures.

Step 3

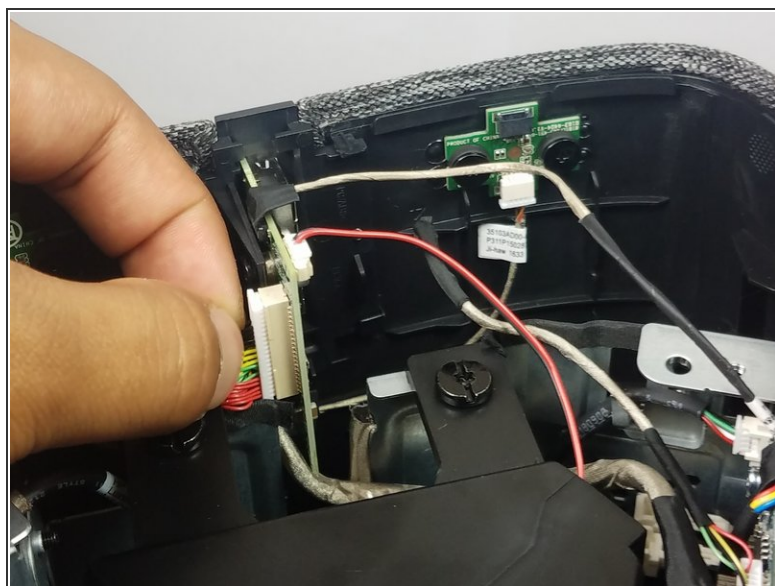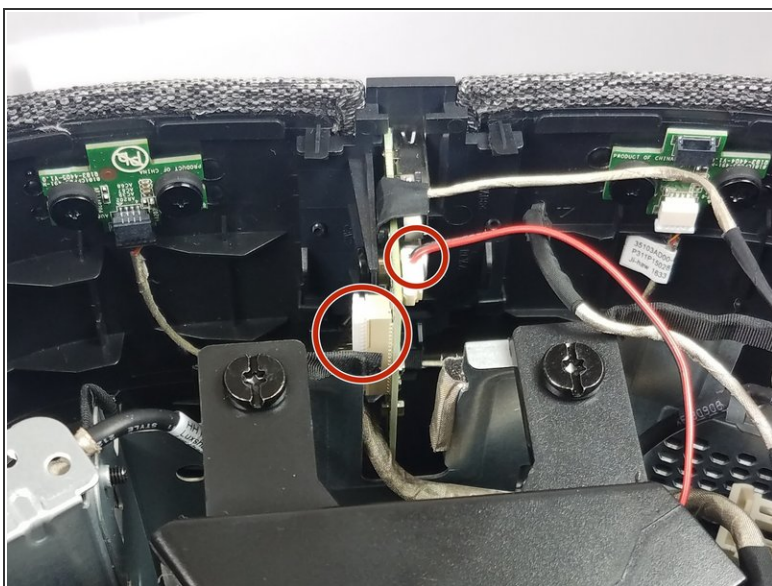

- Finally, remove the two cables circled in red from the front IO panel.

To reassemble your device, follow these instructions in reverse order.