



Ninja Ultima BL810 Handle Replacement

This guide will demonstrate the to remove the plastic handle attached to the pitcher.

Written By: Donald Syracuse



INTRODUCTION


This guide will demonstrate the to remove the plastic handle attached to the pitcher.



TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Handle

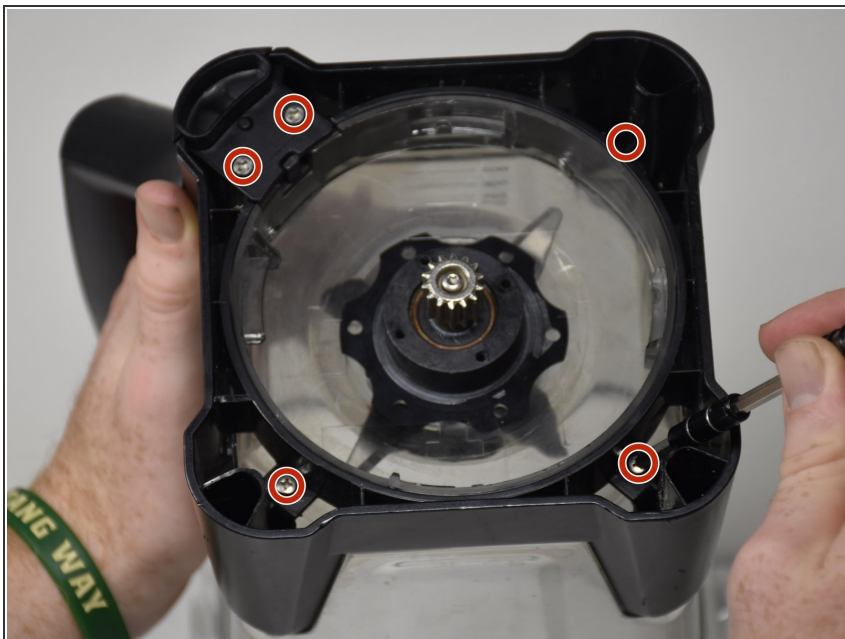

- Remove five Phillips #2 9mm screws on the bottom of the blender.

Step 2



- Use a metal spudger to pop out the upper layer of the handle.
- Pull the upper plastic layer off the handle.

Step 3



- Unhook the latches from each side of the top portion of the handle with the metal spudger.

Step 4



- Pull the black handle off of the pitcher.
- ⚠ Don't pull to hard or you may break the handle off of the base.
- Once it disconnected, pull base and handle down in order to remove it from the pitcher.

To reassemble your device, follow these instructions in reverse order.