



HP 15-af013cl Screen Replacement

Replace the cracked or defective screen of your HP laptop.

Written By: Stephen Perreira



INTRODUCTION

The screen of the HP laptop, or basically any device nowadays, is very fragile. One bad drop or a misplaced footstep could leave you with a cracked or completely broken display. Although one of the harder components to replace, this guide makes it easy for even the least tech-savvy user to replace their screen,

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Start off by flipping the laptop on its back.

Step 2



- Push the two spring-loaded tabs inward.
- Once unlatched, pull the battery out of its compartment.

Step 3 — Screen




- Flip the laptop over and have it open as you normally would.

Step 4



- Using a pry tool, unclip the entire outer plastic cover from the front of the screen.
- Gently remove the front plastic cover.

Step 5

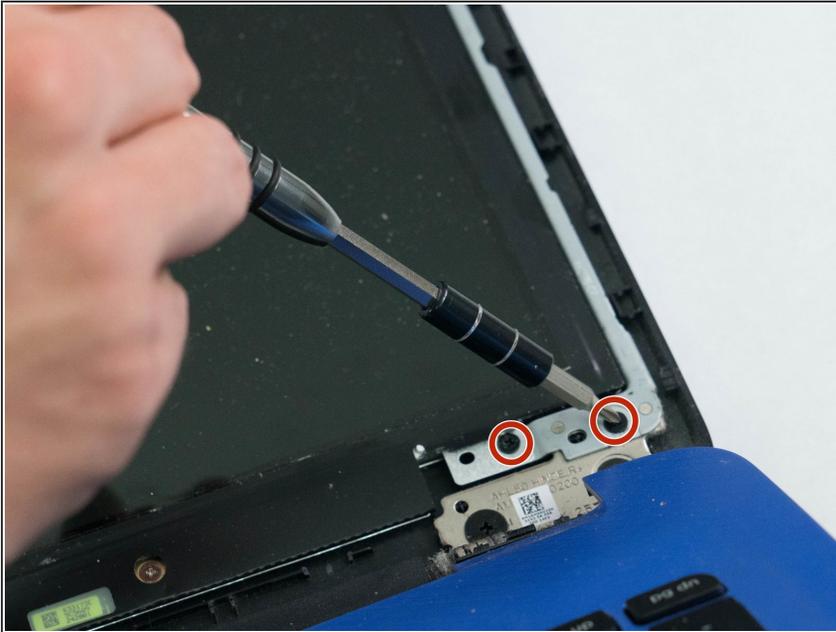

- Remove the two 2.5mm × 3.0mm Phillips screws from each corner of the display.

Step 6



- Carefully lift the display out of the laptop shell and flip it on its front.
- Disconnect the single cable from the back of the display.

To reassemble your device, follow these instructions in reverse order.