




HP 15-af013cl Front Facing Camera Replacement

Replace the front facing webcam in your HP laptop in order to restore video and picture capabilities.

Written By: Stephen Perreira

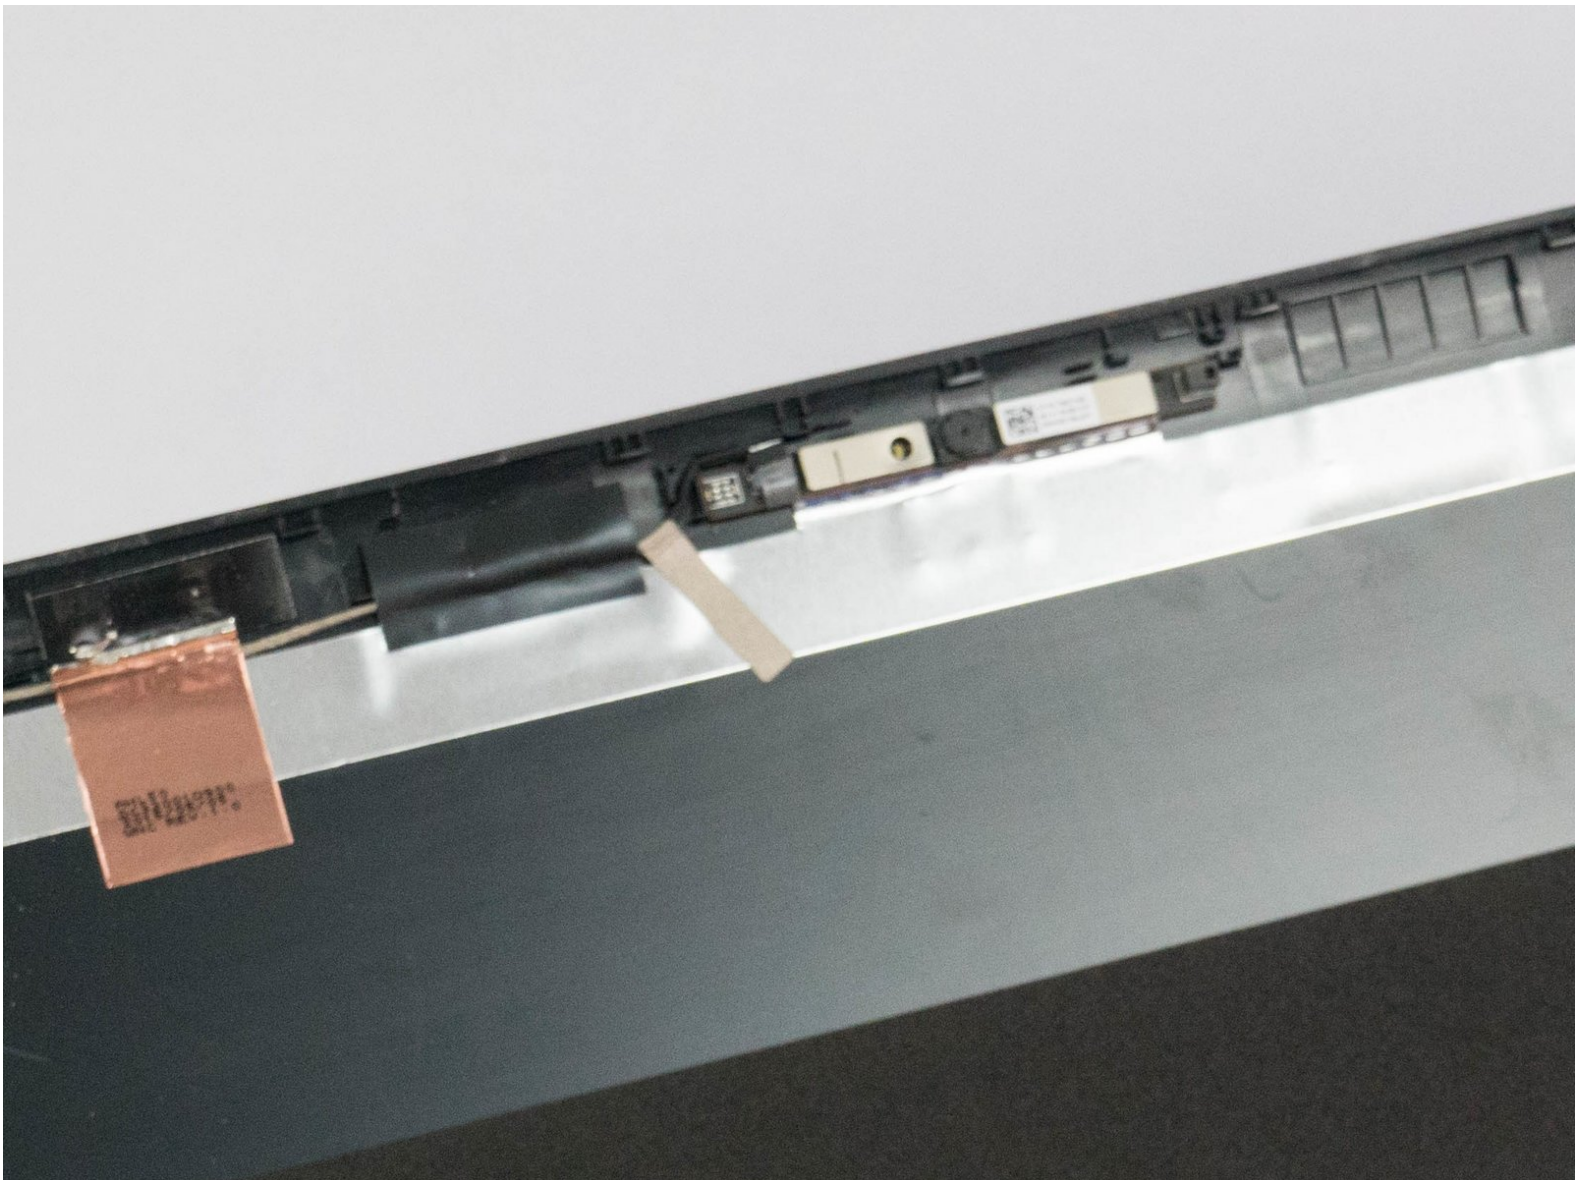

INTRODUCTION

This HP laptop is equipped with a high-definition front facing webcam and allows you to video chat with others or take high-quality photos. Although one of the few things that is likely to fail on your laptop, its nice to know that our guide will make it easy for you to replace your camera in under 20 minutes.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Start off by flipping the laptop on its back.

Step 2




- Push the two spring-loaded tabs inward.
- Once unlatched, pull the battery out of its compartment.

Step 3 — Screen




- Flip the laptop over and have it open as you normally would.

Step 4

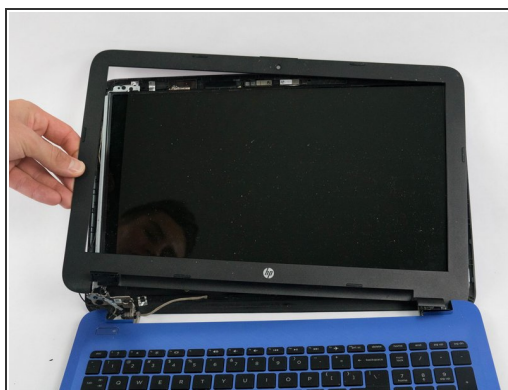

- Using a pry tool, unclip the entire outer plastic cover from the front of the screen.
- Gently remove the front plastic cover.

Step 5

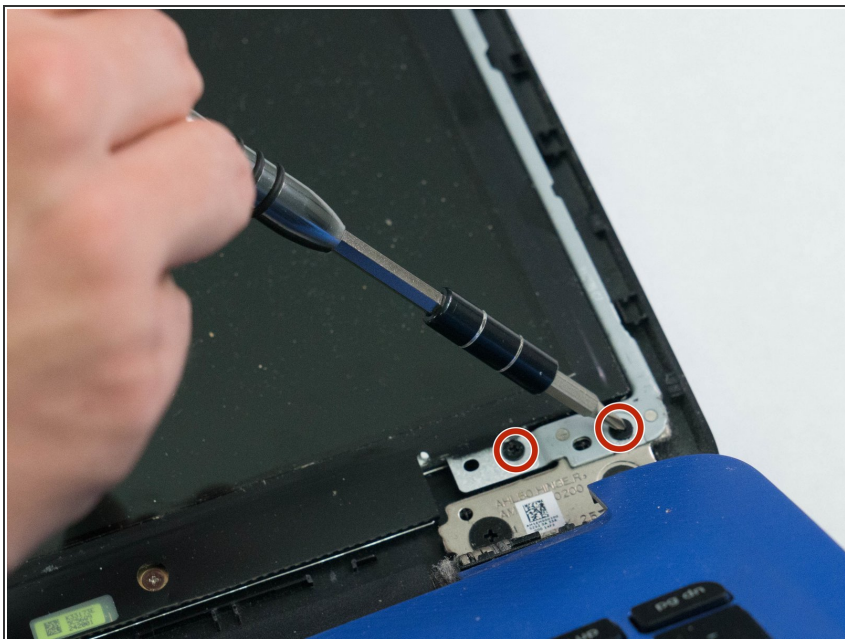



- Remove the two 2.5mm × 3.0mm Phillips screws from each corner of the display.

Step 6



- Carefully lift the display out of the laptop shell and flip it on its front.
- Disconnect the single cable from the back of the display.

Step 7 — Front Facing Camera

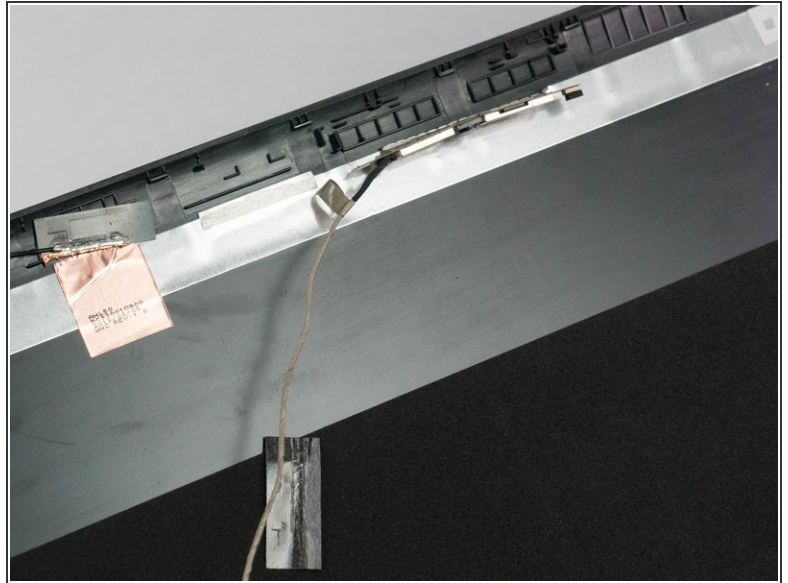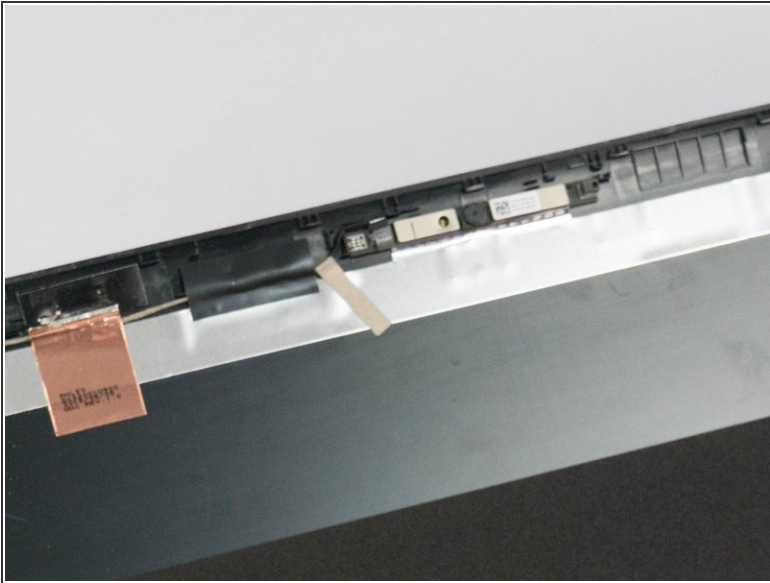

- The front camera is held in by light adhesive. Pry gently on the back of the camera in order to remove it.
- Remove the cable from under the metal foil.

Step 8



- Flip the laptop back over.
- Using the Phillips P0 screwdriver, remove the 9 M2.5mm x 6.5mm screws from the bottom of the laptop.
- Remove the additional 2 M2.0mm x 1.5mm Phillips screws located in the battery compartment.

Step 9



- Remove the optical disk drive from the side of the laptop.

Step 10



- Lift off the bottom cover, exposing the motherboard and other components underneath.

Step 11



- Disconnect the display ribbon cable from the motherboard.

To reassemble your device, follow these instructions in reverse order.